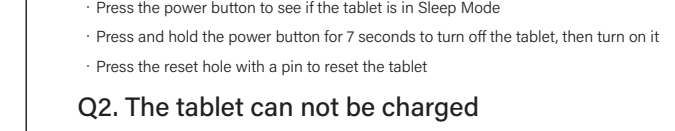
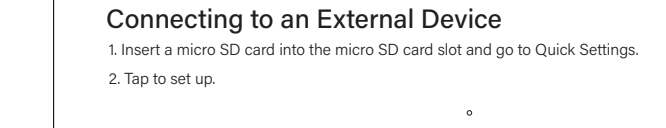


材质：128G铜版纸 黑白印刷，中间打钉

Display - Adjust the screen brightness - Adjust the font size and display size - Set screen zoom - Change the wallpaper Sound - Set volume levels for media, alarms, and notifications - Turn off Do Not Disturb - Set the sounds for notifications and calls - Turn off all sounds for a specific app - Turn off all sounds for screen locks, charging and touch Storage - View and manage your storage space Privacy, Security, Location - Set screen lock settings (e.g. password, PIN, SwiKey, etc.) - Enable/disable notifications when the screen is locked - Turn on/off location services for a specific app - Set always-on display (when available) Accounts - Add and manage the user accounts on your tablet Accessibility - For vision and hearing impaired users, manage settings for screen readers, subtitles and more Digital Wellbeing & Parental Controls - Set screen time for your child - Set up parental controls with Google's Family Link Google - Get the addresses for Google-related services System - Set language - Two Languages or Less > Languages > + add a language. After adding, hold and slide the icon to the top to change the language Restore Factory Settings - Use restore factory > Erase all data (factory reset) > Restore to factory settings	- Other Settings - Set the date and time - Turn on/off the battery About Tablet - Check detailed information about the tablet NETWORK CONNECTION Go to Wi-Fi Settings in the Settings interface or directly enter through Quick Settings Wi-Fi Connection - Go to Settings > Network & Internet > turn on Wi-Fi. All available Wi-Fi connections will be listed.	APP MANAGEMENT App Download and Installation - Tap and hold the App Store icon to download apps Move an App - Tap and hold the icon, then drag it to desired screen Remove an App from the Home Screen - Tap and hold the App icon, then drag it to X (instead of X from your home screen) Uninstall an App - Tap and hold the app, then drag it to the trash bin to uninstall the app. Clear the App Cache - Go to Settings > Apps & notifications - Select an app > Storage & Cache > CLEAR CACHE	Tips - Select Charge this device if you only need to charge the battery. - Select Transfer photos (PTP) to transfer photos from the device. 	TROUBLESHOOTING Q1. The tablet can not be turned on - Release the power button for charging for 30 minutes - Press the power button to use if the tablet is in Sleep Mode - Press and hold the power button for 15 seconds to turn off the tablet, then turn it on - Press the reset hole with a pin to reset the tablet Q2. The tablet can not be charged - Charge the tablet at least 30 minutes before using the tablet. The battery was completely drained - Make sure the USB cable is properly plugged into the charging port - Try another USB cable Q3. Error message occurs during operation - Uninstall the app displaying the error message, then download and install again - Press the reset hole with a pin to reset the tablet Q4. The tablet cannot be detected by the computer - Make sure the tablet is powered on - Try another USB cable - Uninstall the USB driver on the computer - Instead of Change this device, choose Transfer files or Transfer photos (PTP) when connecting the tablet to the computer Q5. The tablet cannot connect to the Wi-Fi - Make sure the Wi-Fi on your tablet is turned on - Release the router - Make sure there is no file sharing or device connection limitation in the settings of the router - Press the power button to turn on the router and make sure the router is powered on Q6. The storage space of the tablet is not enough - Release the tablet - Clear the app cache regularly - Move more content to expand the storage	FCC STATEMENT : This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation. Noticing: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. NOTICE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates noise and can radiate radio frequency energy. And, it is shielded and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: - Reorient or relocate the receiving antenna. - Increase the separation between the equipment and receiver. - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. - Consult the dealer or an experienced radio/TV technician for help. RF warning statement: This device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure condition without restriction.	2ABCS-E0020 An FCC label is provided on the BCT, on the label is placed in the packaging box.
Display - Adjust the screen brightness - Adjust the font size and display size - Set screen zoom - Change the wallpaper Sound - Set volume levels for media, alarms, and notifications - Turn off Do Not Disturb - Set the sounds for notifications and calls - Turn off all sounds for a specific app - Turn off all sounds for screen locks, charging and touch Storage - View and manage your storage space Privacy, Security, Location - Set screen lock settings (e.g. password, PIN, SwiKey, etc.) - Enable/disable notifications when the screen is locked - Turn on/off location services for a specific app - Set always-on display (when available) Accounts - Add and manage the user accounts on your tablet Accessibility - For vision and hearing impaired users, manage settings for screen readers, subtitles and more Digital Wellbeing & Parental Controls - Set screen time for your child - Set up parental controls with Google's Family Link Google - Get the addresses for Google-related services System - Set language - Two Languages or Less > Languages > + add a language. After adding, hold and slide the icon to the top to change the language Restore Factory Settings - Use restore factory > Erase all data (factory reset) > Restore to factory settings	APP MANAGEMENT App Download and Installation - Tap and hold the App Store icon to download apps Move an App - Tap and hold the icon, then drag it to desired screen Remove an App from the Home Screen - Tap and hold the App icon, then drag it to X (instead of X from your home screen) Uninstall an App - Tap and hold the app, then drag it to the trash bin to uninstall the app. Clear the App Cache - Go to Settings > Apps & notifications - Select an app > Storage & Cache > CLEAR CACHE INTERNET NAVIGATION Please make sure the tablet is connected to a working Wi-Fi network before trying to browse the Internet. You can use the Chrome browser that is pre-installed or download another browser from the Play Store. MULTIMEDIA Connecting to the Computer - Connect your tablet to a computer via USB type-C cable and go to Quick Settings. - Tap Android System > Change this device as USB > Tap to view content > The Transfer - Go to your computer and find tablet to transfer files from your tablet and computer.	Tips - Select Charge this device if you only need to charge the battery. - Select Transfer photos (PTP) to transfer photos from the device. 	TROUBLESHOOTING Q1. The tablet can not be turned on - Release the power button for charging for 30 minutes - Press the power button to use if the tablet is in Sleep Mode - Press and hold the power button for 15 seconds to turn off the tablet, then turn it on - Press the reset hole with a pin to reset the tablet Q2. The tablet can not be charged - Charge the tablet at least 30 minutes before using the tablet. The battery was completely drained - Make sure the USB cable is properly plugged into the charging port - Try another USB cable Q3. Error message occurs during operation - Uninstall the app displaying the error message, then download and install again - Press the reset hole with a pin to reset the tablet Q4. The tablet cannot be detected by the computer - Make sure the tablet is powered on - Try another USB cable - Uninstall the USB driver on the computer - Instead of Change this device, choose Transfer files or Transfer photos (PTP) when connecting the tablet to the computer Q5. The tablet cannot connect to the Wi-Fi - Make sure the Wi-Fi on your tablet is turned on - Release the router - Make sure there is no file sharing or device connection limitation in the settings of the router - Press the power button to turn on the router and make sure the router is powered on Q6. The storage space of the tablet is not enough - Release the tablet - Clear the app cache regularly - Move more content to expand the storage	FCC STATEMENT : This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation. Noticing: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. NOTICE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates noise and can radiate radio frequency energy. And, it is shielded and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television		