 


Digital Calendar

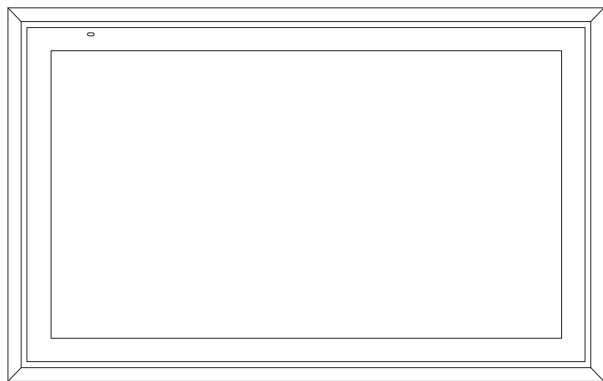

A Brief Guide to Your Smart Display

*Please read the manual before using this product, and save it for future use.

Preface

Thank you for choosing Digital Calendar!

 
Before starting up, please carefully read this user manual to understand how to use the device and important precautions.

Warning


- * Use only the power adapter accessory provided by the original manufacturer.
- * The gaps and openings on the device are designed for ventilation and heat dissipation. Do not block or cover them.
- * Do not use or store the device in dusty, humid, or high - temperature environments to avoid potential damage.
- * If the device malfunctions, do not attempt to disassemble or repair it. Instead, contact the original manufacturer or dealer for assistance.
- * Avoid stepping on the power cord or power adapter. This can prevent damage to the wires, which may cause electrical hazards. If the power adapter's cord is damaged, do not continue to use it as it can be dangerous.
- * During thunderstorm weather or when the machine will not be used for an extended period, please unplug the power cord plug.
- * When using the machine, do not place it on the edge of a table or in areas easily accessible to children. This can prevent the machine from being dropped and damaged, as well as prevent harm to children.
- * During transportation, do not apply excessive pressure to the display screen or scratch it with sharp or hard objects, as this may damage the screen.
- * Use a dry, soft cloth or a slightly dampened soft cloth with a mild cleaning solution to clean the device. Do not use any type of solvent, such as alcohol or gasoline, as it may damage the surface treatment layer.
- * Ensure that children understand the danger of climbing on this product. The falling or tipping over of this product can cause serious personal injuries.
- * Do not place the product in an unstable or tilted position.
- * Be sure to tidy up the cables connected to the product in a timely manner to avoid tripping over them and prevent them from being pulled or grabbed.

What's in the box

The package contents vary depending on the model configuration.

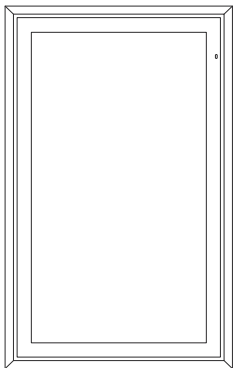


Digital Calendar *1

 

Wall anchors*5



 
Long screws*5

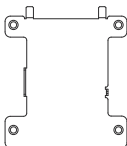


Wall mount bracket *1



 Spirit level*1

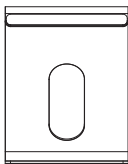


Upper Desk Stand *1

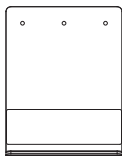 


Lower Desk Stand *1



 Short screw*4

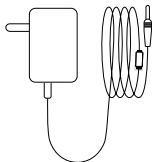

Power adapter *1

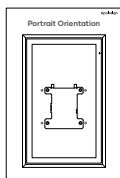 

Mounting paper *1




Screwdriver*1

Product Specifications

System	CPU	RK3576S Quad core cortex A53+ Quad core cortex A72
	RAM	4GB
	Internal memory	64GB
Display	Operation system	Android
	Panel Size	15.6" LCD
	Resolution	1920*1080
	Model Type	Capacitive touch screen
	Number of points	10-Point
	Aspect Ratio	16: 9
Network	Wi-Fi	IEEE 802.11a/b/g/n/ac/ax
	Bluetooth	5.4
Interface	Type-c	Full Function (Except for charging function)
	Power Jack	DC power input
Other	VESA	100x100mm
	Button	Power/Vol+/Vol-
	G-sensor	Support
	Speaker	4Ω*3W*2
	Storage Temperature	-20℃ ---60℃
	Working Temperature	0℃ ---40℃ 20~80%RH

Port Connection Instructions

 This monitor is equipped with a variety of ports to support multiple external devices:


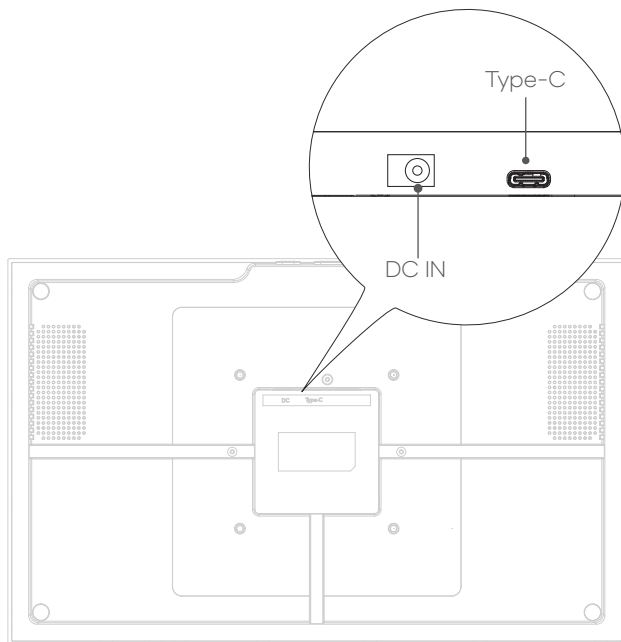


DC IN: Connect the adapter to power on the device.

Type-C: Full Function (Except for charging function)

Touch & Button Instructions

  
Uses an ten-point capacitive touch LCD display. To maintain touch effectiveness, please keep the screen clean. There are three physical buttons(+ - ) in the lower right corner of the back of the screen, the table below describes it in detail.

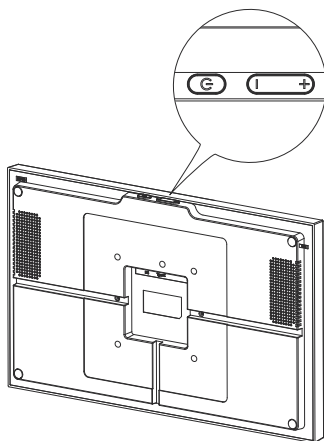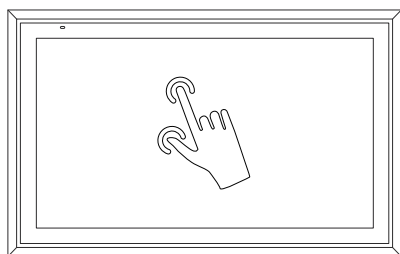

Button	Function
	When the product is in the off state: press for 2-3 seconds to turn on When the product is on: Press for 2-3 seconds to enter the shutdown confirmation [shutdown/restart] menu Short press to enter the screen off state, short press again to exit the screen off state
+	Adjust system volume up
-	Adjust system volume down


STEP 1

 Before installing the device, please use the wall-mounted guide paper to determine the actual installation location.

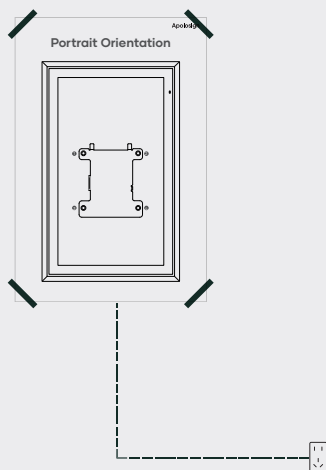


STEP 2

 Use a 7/32-inch drill bit to drill holes at the four hole positions of the wall-mounted guide paper.

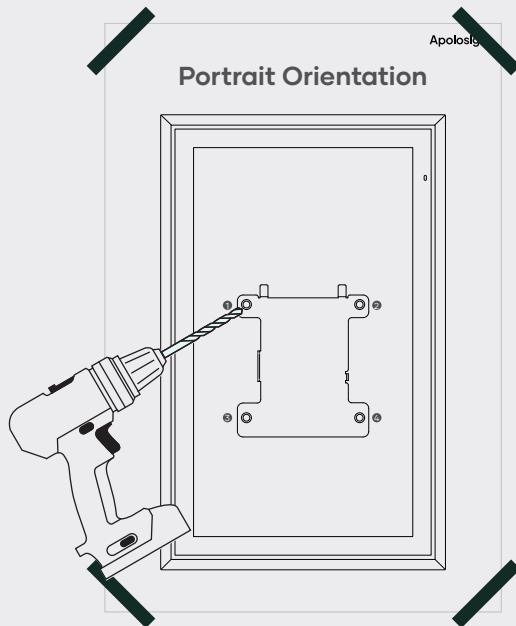


STEP 3

 Remove the installation paper from the wall, insert the wall anchor (wall plug) into the holes and hammer it in.

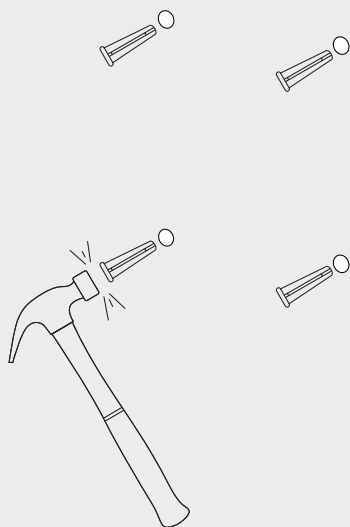


STEP 4

 Place the spirit level below the wall-mounted panel, ensure that the wall-mounted bracket is aligned with the pre-drilled holes, and then fix it with long screws. After fixing it securely, remove the spirit level.

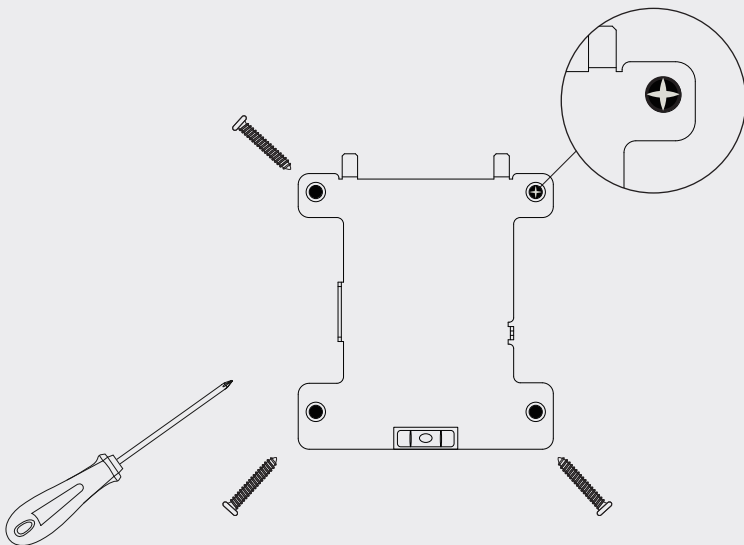


STEP 5

 Connect the power cord, and then arrange the cord neatly and bury it into the wire passing hole.

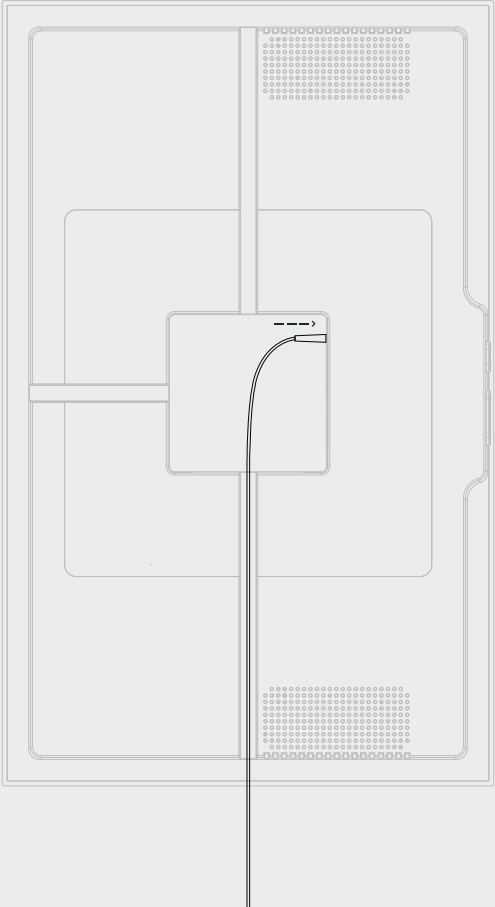


STEP 6

 After aligning the wall-mounted holes on the back of the device with the wall-mounted bracket, slide the device downward until it is firmly fixed on the bracket. (Use the horizontal wall-mounted holes for horizontal installation and the vertical wall-mounted holes for vertical installation.)

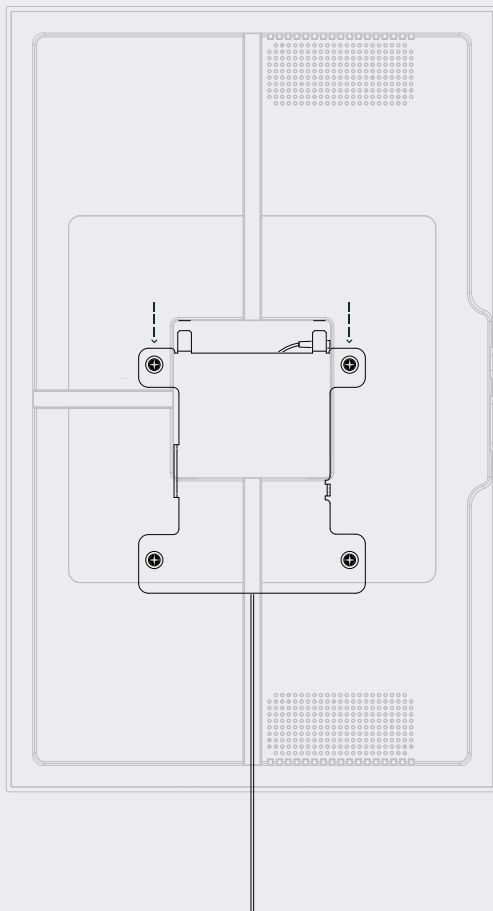

STEP 7

 
Your digital calendar has now been installed and can be powered on and used normally.

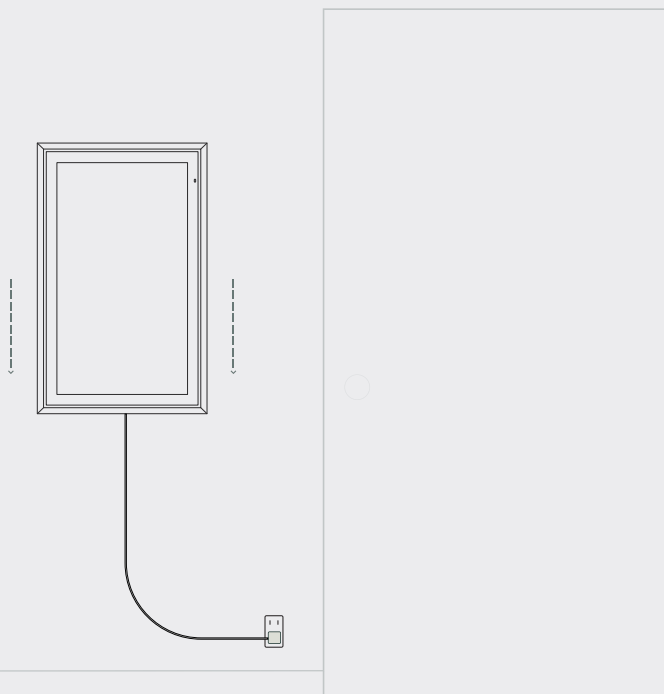

Desktop Stand Install Guide


STEP 1

 Align the top and bottom positions of the desktop stand.

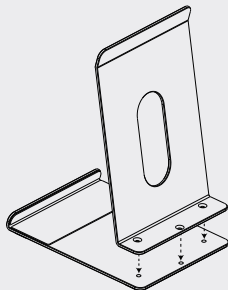


STEP 2

 Secure the three holes of the base with short screw, and finally use a screwdriver to tighten the screws appropriately, avoiding over-tightening.

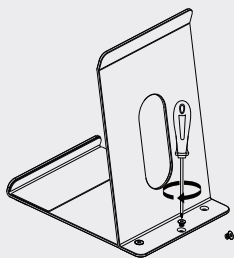


STEP 3

 Turn the assembled desk stand 180° to its working position. Pass the power cord through upper desk stand and plug it into the device's DC input.

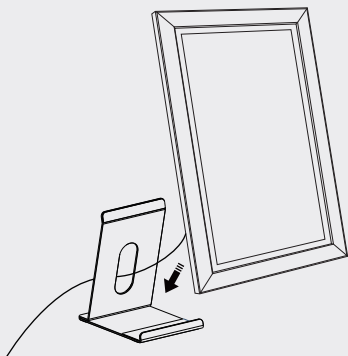

STEP 4

 Center-mount the device on the desk stand.
(supports both landscape and portrait orientations)

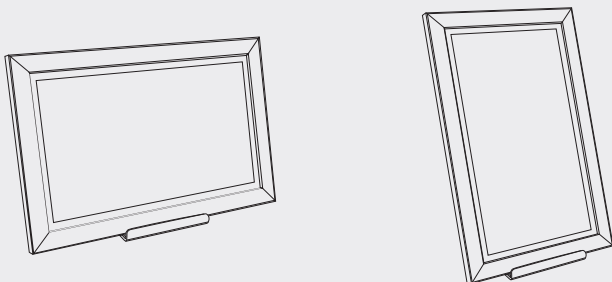

FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions

1. This device may not cause harmful interference
2. This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna

- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected

- Consult the dealer or an experienced radio/TV technician for help.

RF warning statement:

The device has been evaluated to meet general RF exposure requirement. The device **should be installed and operated with minimum distance 20cm between the radiator & your body.**



This device complies with parts of the FCC rules. Operation is subject to the following two conditions:

This device will not cause harmful interference;

This device must accept any interference received, including interference that may cause undesired operation



This product complies with the essential requirements of European safety regulations and has passed the product safety conformity assessment procedure. It also has a manufacturer's declaration of conformity to ensure that every product delivered to the customer is safe.

Android is a trademark of Google LLC

