

Tune Station by User

Tuning of the transmitter and receiver of the link's stations (figure 1) can be done from ASD management system – menu *Supervisor --> Tune Station*.

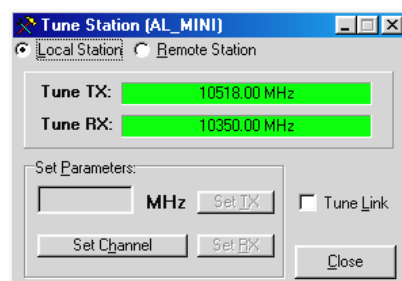


Figure 1 Tune Station

- This screen contains values of real frequencies the ODU is tuned to
- You can enter the transmitter frequency value by selecting a specific channel according to the frequency plan – channel table. Press *Set Channel* to open the frequency plan channel table (figure 12) Corresponding channel table must be set in advance in *Option > Channel Table* menu. Perform tuning by selecting a frequency couple and press *OK* in the channel table to confirm.
- When *Tune Link* is checked the whole link will be tuned at once – the remote station of the link will be tuned first followed by the local station. When this item is unchecked, only local stations will be tuned.

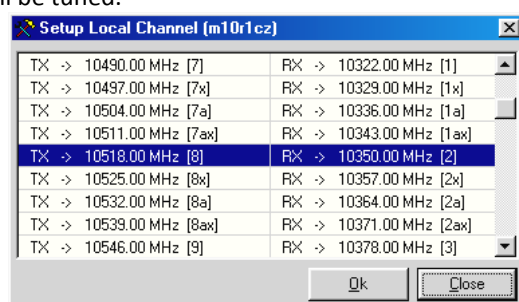


Figure 1 Setup Local Channel

You should correctly log off from a station to make the selected frequency a permanent selection. Only this step will save the selected frequency. If the supervisor is automatically logged off due to connection interruption without performing a correct logoff, all tuning changes will be discarded by the station and the station will tune to frequencies valid before the supervisor logon.

Frequency plan – channel table for ZENITH 80

Tune TX	Name TX	Tune RX	Name RX
72 000	1	82 000	1'
74 500	2	84 500	2'

13-03-2014, Petr Vodička