

Manual de Usuario PCSGOB10LTE-V2

Android™ 10



CAMARA FRONTAL
2 MPX
DUAL CAMARA TRASERA
5 Mpx con Autofoco



WIFI + BT 5.0
GPS
Modem 4G

 


Innovation and Technology
are proudly produced by Colombians

www.pcsmart.com.co



64 + 4 GB

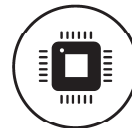

PROCESADOR
QUAD CORE



BATERÍA
Ion-Li 

Introduction

Thank you very much for choosing our products.

The mobile device supports installation of a variety of applications and displays high-definition images and video on an LCD touch screen.

Please read this manual for more information about our products

What's in the Box:

Please make sure the package includes the following attachments:

- Tablet
- Wired USB
- Loader

If any of the above accessories are not found upon shipment, please notify the sales staff immediately or contact our call center to resolve your problem

Introduction

Switch

Ignition - Press the ignition key to turn off the

device - In standby mode, hold down the power key until the options menu appears.

Select

Close from the menu and confirm that Seguridad you can rely on the security lock function as a security metric for the device. For more information about locks, password checking, and other features, go to security Options in system configuration

Consider the downtime of the device, because if not used for more than 30 days, the device's battery may not function properly because it may be in a state of prolonged downtime or rest. It affects the operability and performance of the battery, including the service life. Service cycle: refers to the charge and discharge cycle of the battery. In view of the above, it is recommended that the service cycle or loading and unloading be carried out every 30 days.

Security information.

Please read the following advice carefully:

Safe Use

Do not use mobile devices in situations that may cause accidents.

Drive with your hands on the steering wheel.

Don't write and drive.

Please comply with the hospital's restrictions.

When approaching a medical device, turn off the device.

Airports remember to comply with all airport and flight safety regulations.

Please do not use the device in flight.

Toxic chemicals

Do not use the equipment around fuels or chemicals.

Risk or hazard

Do not use the device in a dangerous area where an explosion is likely to occur.

Accessories and battery

Use Manufacturer's authorized accessories and battery support remember to write down all the important information.

Water Your equipment is not waterproof.

Stay away from water and emergency liquids and make sure your mobile device is on and in the service area.

On the home screen, press the phone button and dial 123 to send

Internet Browser function menu

Pestana recently;

After browsing multiple pages,
this option returns to the previous page.

 
Window:

You can view all the window markers that have been opened by clicking the
Windows icon in the top right corner of your
browser:

Click The Save in Markers option to create the current URL as
saved Markers. Click Bookmarks/History to open bookmark search saved on the
page:


Search the current page. Page sharing: Select this option to share the current page.

Bookmarks/History: Display your browsing history and view the most popular pages.
Configuration: Contains various browser configurations

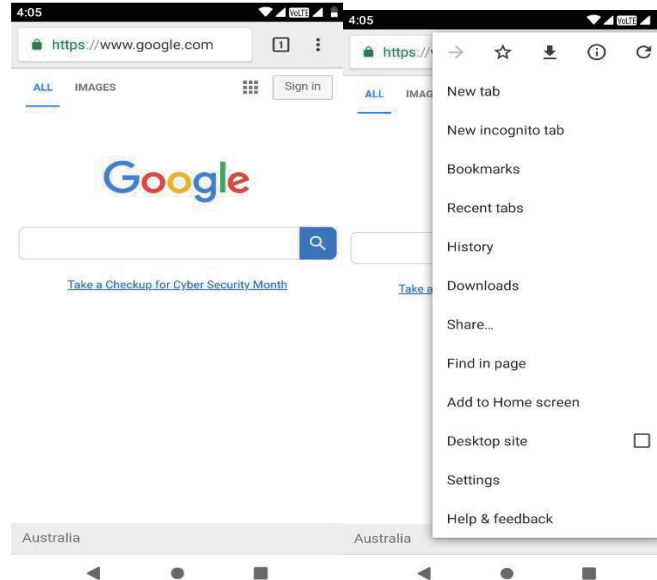

Bluetooth is a short-range

 wireless communication technology that allows devices to exchange information and connect to different types of devices, including headsets and other devices

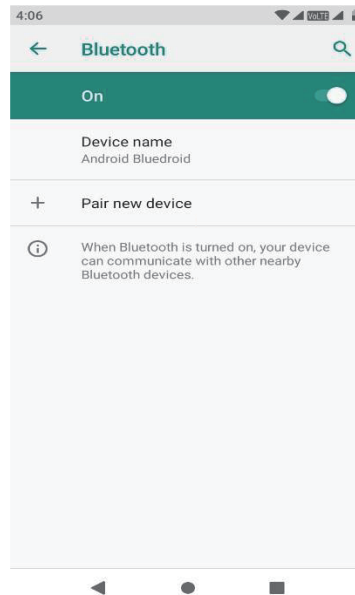


- 1) Set the Bluetooth » and choose to turn on Bluetooth.
- 2) The Bluetooth icon will appear in the notification bar. Click "Search Device" and the phone will start searching for all devices within its range.
- 3) In bluetooth configuration, all found devices will be displayed in the list below the icon

Note: The maximum detection time of mobile phone is 2 minutes.

Open wi-fi

 - 1) Settings»Wi-Fi, open Wi-Fi
- 2) Click on the Wi-Fi network you want to connect to. Insecure networks can be connected directly: secure networks require passwords or credentials. connection.

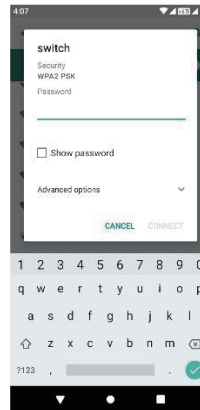

Camara

camera

Before use: Insert the SD plug before using the camera or video camera. Therefore, all photos or videos taken by mobile phones are usually stored in a memory stick with a large storage capacity. Open the camera

1. Application menu »Camera
2. If you want to record a video, switch to the video mode.

Nota: You can place a camera shortcut icon on any screen.
Omar photo

1. Point out the subject to be photographed.
2. Press the "Capture" button on the screen.
3. After taking a picture, the file will be saved in the camera's picture library folder.

Configuration



Wi-Fi

Settings » Network and Internet » Wi-Fi on. When enabled, Wi-Fi automatically searches available networks. Any insecure network can be used directly, and any more secure network requires a password or credentials before it can be connected.



To connect the device

Press the "On" button to turn on Bluetooth. Once turned on, Bluetooth will automatically search for any nearby open computer. It can also be used to print and verify received files.



Applications and ratings

Press check for recently opened applications and manage notification options.



Battery



Screen

Brightness, automatic screen rotation, screen saver and screen off Settings.



Sound

This option sets the ringtone settings for receiving calls and notifications.

Some adjustments include:

vibration, volume, tone, tone notification, dial touch screen and tactile and tone feedback.



Storage

See Usage of Telephone memory.



Security and Location Settings screen Blog:

Use swipe, Unlock face/voice, mode, PIN or password to unlock the screen.

Mode: There will be unlock instructions and simple examples for the first time.
Click "Next" to continue the safe mode steps. .

PIN: Enter the PIN number to unlock the screen. password:
Use the password to unlock the screen you
can stop the security function four at any time



User account

Anadir cuentas, como Duo; communication; Google; personal (IMAP); personal (POP3).



Approachable

The start button ends the call and the screen rotates automatically.
Voice commands for passwords and large texts.



Google

understand the Google application.



DuraSpeed

Duraspect helps drive foreground applications by restricting background applications;
Some notifications may be delayed or not received



System

LdiOMA and entry language

- Change the language of the device. Custom dictionary
 - Add or remove words to custom dictionary with tactile vibration, tactile tone, uppercase letters, speech input, word input, predictive text features, automatic text, keyboard input methods gesture jump into lens to prevent device ringtones.
- Date and Time Adjust the date and time.

Gestures

- jump in front of the camera.
- Prevent device ringtones.

Time zone

- Selects a time zone based on the user's location. Choose date format
- Three formats are available: month
- year, month year. Date and date are the default Settings

Backup information (secure copy)

- performs a secure copy of all application data, password WLAN and other ajustes on the Google server.
- Restore to factory Settings
- Remove all storage on the device.

Restore to factory settings

 
- Delete all data stored on the device to restore the device function option DRM; reset Wi-Fi, mobile phone and Bluetooth;

Reset application preferences;

Delete all data about the device information status and operating system compiled version.

The storage USES

the supplied USB cable to connect the phone to the PC. Once connected, a connection interface appears on your phone. In the connection mode interface, select MTP and enable it from the connection screen to transfer files. There are other storage options.

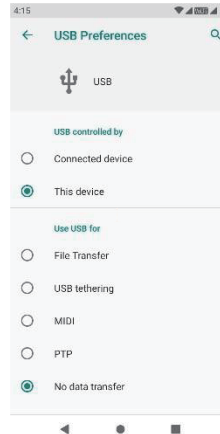

Some system, hardware, and user interface Settings options may vary depending on the final version

Further Information

The information provided in this Manual may be subject to change without notice to The User and the Equipment Manufacturer reserves the right to modify the Manual from time to time. The Manufacturer has used its best efforts to ensure that the User Manual is required and that any misunderstanding or negligence is exempt from any liability. The manufacturer is not committed to updating the user manual. However, you reserve the right to make improvements to the user manual at any time without notice.

On waste and recycling:

Your smart PC device must be removed in accordance with local laws and regulations.

Because the product contains batteries, it must be discarded separately. When your smart PC device has reached the end of its life, contact your local government to find out about recycling options. Battery

Replacement:

Rechargeable batteries can only be replaced by an authorized service provider.

This symbol in the product or specification indicates that your electrical equipment must be separated from household waste at the end of its useful life.



PC Smart is part of the Eco Computo collective, and for more information about the detailed layout of your devices, you can get the information

<https://com/https://lecocomputo.Com/empresas>

Google, Android, Google Play y otras marcas son marcas comerciales DE Google LLC

FCC Warning

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This Transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

This equipment complies with SAR limits set forth for an uncontrolled environment. The highest reported SAR values are 1.558W /kg.

This equipment should be installed and operated with minimum distance 0mm between the radiator & your body.