

TEK175

INSTRUCTIONS



Features

- Metal Cased Bluetooth™ Speaker
- Bluetooth™ Speaker Phone Option
- Auxiliary Line-in Play Function
- Rechargeable Battery
- Carrying Strap
- Micro USB Charging Cable and 3.5mm Line-in Cable

Specifications

- | | |
|---------------------------|---------------------|
| • Power Supply Input: | DC 5V |
| • Frequency Response: | 200HZ-20KHZ |
| • Speaker Power: | 4Ω, 2 Watts |
| • Output Voltage: | 3.7V-4.2V |
| • Signal & Noise Ratio: | ≥ 75db |
| • Rechargeable Battery: | 250 mAh Lithium Ion |
| • Bluetooth™ Version: | v2.1+EDR |
| • Bluetooth™ Voice Calls: | Yes |
| • Playback Time: | 1-2 Hours |

Power On\Off

- To turn on, press and hold the power button on the bottom of the speaker for 3 seconds. A tone will sound when the item is activated.
- To turn off, press and hold the power button for 3 seconds until a tone sounds. The item should remain in the OFF position while not in use.

Charging

You should fully charge the speaker prior to first use. Plug the charging cable into the micro USB port and then connect the charging cable to the USB port of your PC. The red light beside the power button will illuminate during charging. The red light will turn off when fully charged.

Bluetooth™ Mode

Please check to make sure the device to which you are pairing has Bluetooth™ capabilities. This information should be included in your phone or device's instructions or packaging.

1. Make sure that the speaker is turned off.
2. Place the speaker and the device in proximity so that both devices are in view. (within 33 feet)
3. To active the Bluetooth™ mode and functions on your phone or device, see the instructions for that device.

4. Set the phone or device to search for Bluetooth™ devices within and select the speaker.
 5. Turn the speaker on. The blue light will flash until paired.
 6. Once paired, a tone will sound. The speaker is now ready for listening to music or answering calls
- Note: Some mobile phones or other devices may pair automatically when re-started.

Answer / Reject / End a call

During a call, the ring is heard through the speaker when paired.

1. Press and release the power button to answer the call.
2. You may also accept or decline a call using your phone's functions.
3. To end a call, press and release the power button during the call. You may also end the call using your phone's functions.

Play / Pause

In the process of playing music, press and release the power button to pause or play music.

AUX-in Mode (Plugging in a phone or music player)

Plug one end of the provided 3.5mm AUX cable into the smart phone or music player's headphone or speaker jack and plug the other end into the TEK175. The speaker will beep and music will play automatically. Operate the song selections and volume from the smart phone or other device.

Precautions

- Please only use the computer USB or the DC 5V power adaptor matching the Micro USB interface to charge.
- Please keep and use in normal environments. Exposure to extreme elements such as high heat, fire, water, or other extreme elements may damage the unit. Do not touch with wet hands.
- Keep debris or other items from blocking the speakers or from entering any of the ports.
- Do not attempt to open or take apart this speaker. The speaker will be damaged during that process.
- If the speaker quality seems lessened, or a slight popping noise is heard, it may be due to low battery. Please recharge the speaker.
- If the item becomes hot, smokes, or smells like it is burning, discontinue use immediately. This is a sign of malfunction.
- Keep out of reach of children.

TROUBLESHOOTING

No Sound

- Make sure that the music player is working and that the speaker is charged.
- Make sure the Bluetooth™ is paired or the AUX 3.5mm cable is plugged in properly on both ends.
- Make sure the TEK175 is in the proper mode and not already paired with another device.

Not charging

Check to make sure that you are using the correct cable and that it is fully plugged into both the device and the USB port that you are charging from. Also check to make sure the PC or other USB charger is turned on.

FCC INFORMATION

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by tuning the equipment off and on, the user is encouraged to try correct the interference by one or more of the receiving measures:

Reorient or replace/relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: 1) this device may not cause harmful interference, and 2) this device must accept any interference received, including interference that may cause undesired operation.

You are cautioned that changes or modifications not expressly approved by the party responsible for compliance could void your authority to operate the equipment.

FCC WARNING:

This equipment may generate or use radio frequency energy. Changes or modifications to this equipment may cause harmful interference unless user could lose the authority to operate this equipment if an unauthorized change or modification is made.

RF warning statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.