


EL147 Wireless Earbuds
Instruction Manual

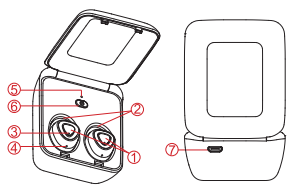

- 1. Multi-Function Keys
- 2. Charging Slots
- 3. LED Indicators
- 4. Microphone
- 5. Power Case LED
- 6. Power Case Power Button
- 7. Micro-USB Input

What's included :

- 1 set x Wireless Earbuds
- 1 x Power Case
- 1 x USB to Micro-USB charging cable
- 1 x Instruction Manual

Tech Specifications :

- Model : SL067
- Speaker driver diameter : 6mm
- Output power : 5mW
- Max output : 10mW
- Sensitivity : -42±3dB
- Impedance : 24Ω

- Frequency response : 20Hz-20KHz
- Built in 40mAh/3.7V lithium polymer battery in each Earbuds
- Built in 430mAh/3.7V battery (power case)
- Rated : 5V --- 60mA (EARBUDS)
5V --- 400mA (CRADLE)
- Playback time at max volume: up to 1.5 hour
- It takes 2 hours to charge the Earbuds from 0 to 100%
- It takes 2 hours to charge the power case from 0 to 100%

Instructions :

1. Charging the Earbuds Power Case :
Using the provided charging cable, plug the Micro USB end into the power case and the USB end into an AC wall adapter or a computer input port. When charging, the LED at top the case will light red. When charging successfully, the LED (5) at top of the case will turn blue.
2. Charging the Earbuds :
Place the Earbuds into the charging slots, then close the cover. Use the (6) power case power switch to turn on the power case. The LED's on the Earbuds should light red, if not, lightly press down on the Earbuds to secure in charging position. When the Earbuds are fully charged each will light up with a Blue LED. During the charging proceed, the Bluetooth function of this device is inactive.
3. Connecting Earbuds via Bluetooth:
After the power case and the Earbuds have both been completely charged, remove the Earbuds from the case. To pair, press and hold both multi-function buttons on both Earbuds simultaneously until they both flash red and blue. Follow the instructions on a Bluetooth enabled device and select "EL147" From the list.

4. Powering the Earbuds OFF :
Press and hold (1) and the LED's will light red together and then will turn off the devices.
- * (Upon connecting one Earbuds follow the same steps as listed above, with only one earbud).

LED Indications :

- Earbuds in power case :
Red-Charging
Blue-Fully charged
- Earbuds out of power case :
Red-Turning ON, and OFF
Blue-ON, and in pairing mode (1 out of 2)
Flashing-Pairing Mode (1 out of 2)

Multi-Function Keys :

- Press and hold: ON/OFF
- Left Earbud: Play/Pause, Answer/End Call
- Right Earbud: Single press to play the next track

SAFETY PRECAUTIONS :

- WARNING-When using this product, basic precautions should always be followed, including the following :
1. Read all the instructions before using the product.
 2. Upon initial use or after a prolonged storage period, fully charge it once. The unit's full performance is achieved only after 2 or 3 completed charge and discharge cycles.
 3. To reduce the risk of injury, close supervision is necessary when the product is used near children.

FCC STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions :

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Warning :
Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



FCC ID : 2ABHA0022
Made in China

Front

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

RF warning statement:
The device has been evaluated to meet general RF exposure requirement.
The device can be used in portable exposure condition without restriction



FCC ID : 2ABHA0022
Fabriqué en Chine

Back