

EL149 User Manual



Controls Description

POWER SWITCH : Push to the left to turn on and right to turn off.

MICROPHONE : For use as a hands-free speaker phone.

TF CARD : MicroSD/TF Card Slot: Insert TF/MicroSD card into slot to play music.

MICRO USB/AUX : Micro USB Charging Input/AUX

M MODE : Toggle between Bluetooth, Aux-in, and FM Scan Radio.

(▶) PAUSE/PLAY : To pause/play the music or answer/end call.

Press and Release : To play/pause the music in TF Card, AUX, and Bluetooth mode.

Press once : To search the station automatically in FM mode.

◀ **PREVIOUS** : Decrease the volume / previous song / previous station in FM mode.

Press and Release : For previous song in TF Card, AUX, and Bluetooth mode / Previous station in FM mode. Press and hold to decrease the volume.

▶ **NEXT** : Increase volume / Next song / Next station.

Press and Release : For next song in TF Card, AUX, and Bluetooth mode / Next station in FM mode.

Press and hold to increase the volume.

Controls: NEXT/PREVIOUS, Volume Up/Down, PAUSE/PLAY,

Answer/End Call : You may also use the functions on your smart phone or music player to control these functions.



MADE IN CHINA

FCC ID:2ABHA0023

Features

- Wireless Speaker
- Hands-free Speaker Phone
- Flashing Lights
- Auxiliary Line-In Play Function
- TF Card Player
- FM Scan Radio
- Micro USB Charging Cable and 3.5mm/ USB AUX Cable

Product Specifications:

Speaker output:	3 Watts, 45mm
Wireless Version:	V4.2
Operation distance:	33 Feet
Rechargeable lithium Ion battery:	400 mAh, 5V (+/- .5V)
Distortion:	< .5%
Signal noise ratio:	> 95dB
Frequency:	20hz ~ 20khz
Approximate Charging Time:	2 hours

Charging

Plug the micro USB end of the charging cable into the Charging port of the speaker and then connect the USB end of the charging cable to the USB port of your PC or other USB power source. The red LED light will light up during charging and turn off after fully charged. It is strongly recommended that the speaker be fully charged before first use and after long periods of inactivity.

Wireless Pairing

1. Please check to make sure the device to which you are pairing has Bluetooth capabilities. This information should be included in your phone or music player's instructions or packaging.
2. Make sure that the speaker is turned off.

3. Place the speaker and the smart phone or music player in proximity so that both devices are in view.
 4. Switch the power button right to turn on. A blue light will flash and a tone will sound to let you know the device is in pairing mode. Make sure your Bluetooth device is not already paired.
 5. Check your smartphone or music player for the speaker under the Bluetooth pairing options and select "EL149" for pairing. A tone will sound when pairing has been achieve
- Note: Some mobile phones or other devices may pair automatically when re-started.

Answer / Reject / End a call

During a call, the ring is heard through the speaker when paired.

1. Press the PAUSE/PLAY button to answer the call.
2. You may also accept or decline a call using your phone's functions.
3. To end a call, press the PAUSE/PLAY button during the call. You may also end the call using your phone's functions.

Auxiliary Line-In Mode (Plugging in a phone or music player)

Press the MODE button and cycle until the speaker says "Enter AUX and playing". Plug the 3.5mm cord into your device's headphone jack and the Micro USB plug into the speaker and play.

Please Note: If NEXT, PREVIOUS, and PAUSE/PLAY functions are not available in AUX Line-In mode then use your phone/music player controls.

TF Card Mode

Plug the TF Card into the slot and use the Bluetooth protocols for the button functions. Support MP3 and WAV audio format only.

FM Scan Radio Mode

Press the MODE button and cycle until the speaker says "Enter radio and playing". Operate the station selections by using the Bluetooth protocols for the button functions. Plug-in the USB AUX Cable to receive Radio reception. Seek next and previous stations by using the NEXT and PREVIOUS buttons and control the volume by longer pressing those same control buttons.

FOR RADIO MODE :



Plug in the USB Aux Cable to receive Radio reception

Precautions

- Please only use the computer USB or the DC 5V power adapter matching the Micro USB interface to charge. Only use quality cords and adapters.
- Please keep and use in normal environments. Exposure to extreme elements such as extreme heat and cold, fire, excessive moisture, dust, or other extreme elements may damage the unit. Do not touch with wet hands.
- Keep debris or other items from blocking the speakers or from entering any of the ports.
- Do not attempt to open, repair, or take apart the speaker. The speaker may be damaged during that process.
- If the speaker quality seems lessened, or a slight popping noise is heard, it may be due to low battery. (Recharge)
- This item is not meant for children.
- Do not overcharge the battery.

TROUBLESHOOTING

No Sound

- Make sure that the music player is working and that the speaker is charged.
- Make sure the Bluetooth is paired, the AUX cable is plugged in properly on both ends, or the TF/MicroSD card is inserted properly.

Not charging

- Check to make sure that you are using the correct cable and that it is fully plugged into both the device and the USB port that you are charging from. Also check to make sure the PC or other USB charger is turned on.

FCC STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Warning:

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

- Consult the dealer or an experienced radio/TV technician for help.

RF warning statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction