


Portable Cloth Speaker

Instruction Manual
7198-20

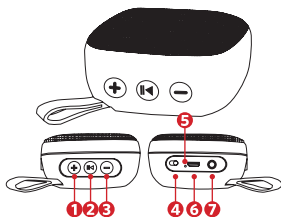

- | | |
|------------------------|-------------------------------|
| 1. Vol +/-/Next Track | 5. LED Indicator |
| 2. Play/Pause | 6. Charging Port |
| 3. Vol-/Previous Track | 7. AUX Input Port/
Line In |
| 4. ON/OFF Button | |

What's included:

- 1 x Portable Cloth Speaker
- 1 x USB to Micro-USB charging cable
- 1 x 3.5mm Audio cable
- 1 x Instruction Manual

Tech Specifications

- Model: BT-SPEAKER
- Power Output: 3 W X 1
- Frequency: 20Hz-20KHz
- Voltage: DC5V/180mA
- Bluetooth v4.2
- Battery capacity: 400mAh

Instructions:

- Charging the speaker:**
 - Using a regulated USB adapter. Connect a USB cable to a USB adapter. Using the Micro-USB connector, connect the other end of the USB cable to the charging port on the speaker. Plug the USB adapter into the outlet to begin charging.
 - Using your computer. Connect a USB cable to a USB outlet on your computer. Using the Micro-USB connector, connect the other end of the USB cable to an charging port on the speaker. Make sure the computer is on to begin charging the speaker.
 - Connecting the speaker with Bluetooth:**
 - Switch the speaker "ON" using the ON/OFF switch. Once on, the speaker will enter Bluetooth mode. Using a Bluetooth enabled device, search for "Cloth Speaker" from the list of available options. Once selected, the connection is successful.
 - Using the speaker:**
 - When receiving a phone call, the speaker will pause the current audio. Double press the Play/Answer button to answer the call, press this button again to end the call.
 - Short press : play/pause the audio
 - Short Press : next track
 - Long press : volume increase
 - Short Press : previous track
 - Long press : volume decrease
- * **Note:** In order to charge device use only accessory cable (provided with device) or the cable included with your own device by the manufacturer.

SAFETY PRECAUTIONS:

- WARNING**-When using this product, basic precautions should always be followed, including the following:
 - Read all the instructions before using the product.
 - Charge the speaker completely before initial use for best practices.
 - If the device does not respond once it is powered on, the battery capacity may be low.
 - Do not over charge the internal battery.
 - Do not immerse into water or expose it to moisture or weather conditions.
 - Do not drop, knock, or shake. Rough handling can damage the internal precision component and its boards.
 - Keep away from children, this device is not a toy.
 - Keep away from fire or other sources of heat. Expose to high temperatures may cause it to explode.
 - Do not short-circuit, as this may cause damage to the unit.
 - Unauthorized changed or modifications may void your right to use this product.
 - While using, always comply with any special regulations that may apply to the area you are in and always turn off your mobile device when its use is prohibited.

FCC Statement:

- This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
 - (1) This device may not cause harmful interference, and
 - (2) This device must accept any interference received, including interference that may

cause undesired operation.

* **Warning:**
Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
Reorient or relocate the receiving antenna.
Increase the separation between the equipment and receiver.
Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
Consult the dealer or an experienced radio/TV technician for help.

RF warning statement:
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction

MADE IN CHINA