



Tablet PC
Model: CT7



Contents

1 Overview	1
1.1 Appearance and Keys	1
1.2 Basic Operation	1
1.2.1 Switch ON	1
1.2.2 Unlock the Screen	2
1.2.3 Lock the screen	2
1.2.4 Switch OFF	2
1.2.5 Battery charging	2
1.2.6 Switch input methods	3
1.2.7 Use T-Flash card	3
1.2.8 Connected to the computer	4
1.2.9 Browse the file in the device	4
1.2.10 Startup programs	5
1.2.11 Close programs	5
1.2.12 Screen operation	5
1.2.13 Home screen	5
1.2.14 Screen gestures	6
1.2.15 Security setting	7
1.2.16 Display setting	8
1.2.17 Wireless And Network Settings	8
1.3 Technical specifications	10

Disclaimer

1. Thanks very much for purchasing our MID product! Before using this product, please read the manual carefully.
We will consider that you have read this manual when you use this product.
2. The functions information of this manual is subject to the product itself; we will keep developing new functions. The information in this manual is subject to change without any prior notice.
3. The Company will not be responsible for any loss of personal data and damage caused by incorrect operation of software/hardware, artificial damages, replacement of batteries or any other accident. To avoid loss of your data, please backup your data to your computer at any time.
4. We can not control any dispute from users misunderstanding or incorrect operation against the manual, the company will not take any relevant responsibility for any accidental loss potentially occurring in the process of using this manual.
5. Please do not repair it by yourself, otherwise, we will not provide you with aftersale service.
6. Our company reserves the final explanation right to this manual and other relevant information

Preface

Dear Customers,
Thanks very much for purchasing our product! This device is built-in high performance Wifi receiver module, supporting external 3G USB DONGLE wireless network card, turning on the broadband wireless networks, breaking through the restraint of network cable; it will bring you into the portable media player world and fulfill your entertainment needs. It also support picture browsing, E-book Reader, games, online chat and other functions, various settings will fully show your individuality.

Safety notices

This manual contains important information, in order to avoid accidents, please read this manual carefully before you use this product.

- Please do not let the player fall or rub or compact with hard objects during using, or it may cause surface scratch of the player, battery loose, data lose or damages of other hardware.

- Never let this product expose to the humid environment or rain as the water leaked in may disable it to the extent beyond maintenance.
- You are recommended not to use the headset with large volume continuously, please adjust the volume to the size of appropriate security and control the using time to avoid the damage to your hearing, as excessive volume will cause permanent hearing damage.
- Please do not cut off the power abruptly during software update and download, or it may cause data loss and system error.
- Please do not turn on the device where the wireless equipment is forbidden or when the usage of the device will cause interference and danger. Please observe any relevant restrictions.
- Please use original accessories and batteries, do not use incompatible products.
- Please do not use the device at gas station or nearby the fuel and chemicals.
- Please do not use this product when you are driving or walking in the street, or it may cause an accident.
- Please do not scrape the screen, it may be damaged and can not display anything.
- Never clean the device with any chemicals and detergent, or it will damage the product surface and corrode the spray paint

Packing list


Welcome to purchase this product , when you open the package , acceptance of the following:

Item	Components	Quantity
1	MID Device	1
2	Micro USB Cable	1
3	User Manual	1
4	Adapter	1

Attention: Accessories are subject to the real products and change without notice.

1. Overview

1.1 Appearance and Keys

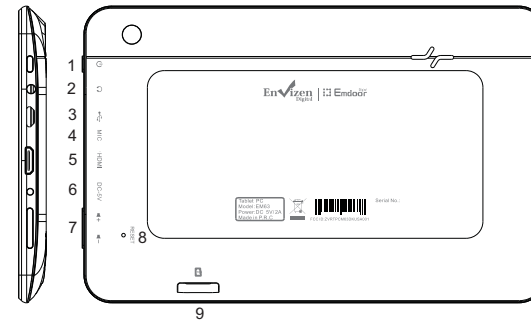

Symbol	Name	Description
1	Power	Press shortly to enter sleeping/waking up mode, press long to switch ON/OFF
2	Headphone	Headphone port
3	Micro USB port	Connect with PC and OTG function
4	MIC	Microphone
5	HDMI	Switch to high definition digital video output mode
6	DC-5V	Power socket for charging the device
7	VOL+/VOL-	VOL+/VOL-
8	RESET	Return to factory default
9	TF Card	Micro SD Card slot

1.2 Basic Operation

1.2.1 Switch ON

When the device is in the OFF mode, press and hold POWER key, then you can enter the system desktop.