 


1.2.2 Unlock the screen

Please press and drag the  icon to the , then the LCD will unlocked automatically.

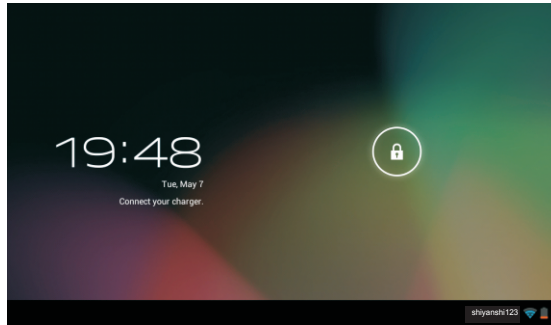

1.2.3 Lock the screen

When the device is in the ON mode, press the POWER key shortly, the system will lock the screen and enter the save power mode. Then the screen is OFF but the system will still run.


1.2.4 Switch OFF

When the device is in the ON mode, press and hold the POWER key for 3 seconds, the screen will display the power off interface, choose the power off item to confirm, the system will shut automatically.

1.2.5 Battery charging

Insert the micro port of the battery adaptor into 220V AC slot on the device, and connect the other side with the power socket. Then, you can charge the device.

[Note] This device is not recommended to use USB interface to charge, please use the special power adapter for charging. You should charge the battery for at least 8-12 hours


to make sure the battery is fully charged at the first time. On charging the Power indicating lamp of the device is in high light blue color, the desktop icon of the battery  keep rolling which shows it is connected to the device.

1.2.6 Switch input methods

The device support handwriting, number, letter, pinyin etc. switching as follows:

Click any text input area of the working program interface, it will pop input keyboard interface, as shown below:



Press , then it will pop Input Method switch interface. Select the input method you want here.

[Noted] After newly install input method, you should choose Settings>Language & input>Keyboard & Input methods then you can use.

1.2.7 Use Micro SD Card

● Insert T-FLASH card

Insert the T-Flash card into the slot in direction of the devices bottom shell until you hear a sound of click.

● Browse files in the memory card

In this MID device, you can view and use the needed files in catalogue of Menu>File manager> SD Card.

● Remove T-Flash card

Close all open files from the T-Flash, then enter MENU>Settings>TF card and & device storage, click Unmount SD card, System will prompt that TF card was removed safely. Tap with your fingertips to the pop-up T-Flash Card

[Note]

 
1. Do not insert the TF card by force, this card can only be

applied in one direction.


2. Do not remove the TF card before Uninstalling it, or the card may be damaged.
3. If the memory card is write-protected, data will not be formatted and written, please remove the write protection before such operations
4. Major brands memory card is recommended to avoid the card is not compatible to this device.
5. please well note that the APK (such as application software and games) is default installed to the device. (not the memory card)

1.2.8 Connected to the computer

One end of the USB line connect to the computer, the other end connect the MID device, select Settings>Developer options>USB debugging, the device will connect with computer, and you can copy files to the device.

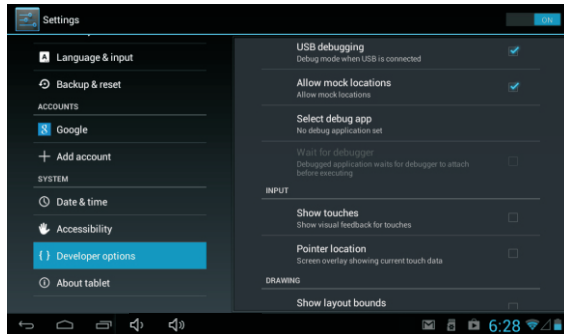

 
1.2.9 Browse the file in the device

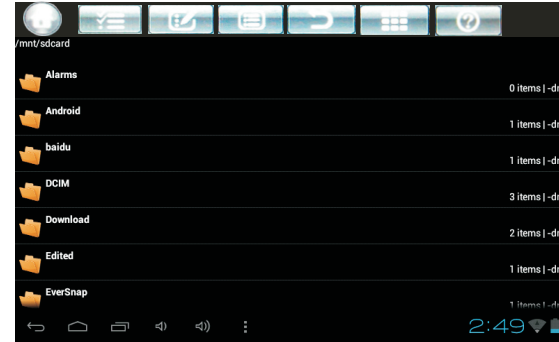

1.2.10 Startup programs

Click all the application icon you want to start and it can switch on.

1.2.11 Close programs

Press the icon  continuously or the ESC key, the device will close the active program. You can also use the corresponding function in the management currently running applications to close the program.

1.2.12 Screen operation

- Zoom in and zoom out : In applications which support zoom gestures, such as photo , IE browser, mail and map etc. you can zoom in or out the screen contents by opening or closing your two fingers.
- Rolling: In applications which support rolling gestures, such as photo , IE browser, mail and map etc. you can scroll the screen contents by sliding your fingers on the screen. If you want to stop the rolling screen, you just need to touch it.

1.2.13 Home screen

- Switch home screen
In the home state, you can change the home interface by

sliding your fingers on the screen quickly.

- Custom Home Screen

Press the blank area on the home screen interface for a few seconds, it will appear Choose wallpaper from menu, then you can set the home screen.

- Move application icons on screen

Press the icons of applications you need to move for several seconds, it will enter the moving model (the icon of application will be turn big), then drag the icon to expected position directly.

- Move application icons screen to screen

Press the icons of applications you need to move for several seconds, and you can drag the icon to the left side or right side.

- Delete applications

Press the icon of application you need to remove for several seconds, drag the icon to × (when the icon turns big, the bottom of screen will appear ×, then you can delete the application.

1.2.14 Screen gestures

- Click

When you need to input by the on-screen keyboard, you just need to select applications or press the button on the screen, then click the items.

- Press

When you want to start the available options of a project (such as web page link), you only need to press the project.

- Slide

Sliding on the interface with your fingers to make vertical or horizontal dragging action.

- Drag

Before you start dragging, you must press the items with your fingers, and can not let fingers leave the screen before dragging to the expected position.

 
- Rotation

Changing the screen orientation by rotating the device

laterally.


1.2.15 Security Setting

You can set the unlock pattern, each time you open or wake your MID device, you must draw pattern to unlock the screen. in Settings>Security>Screenlock, it support many unlock ways.

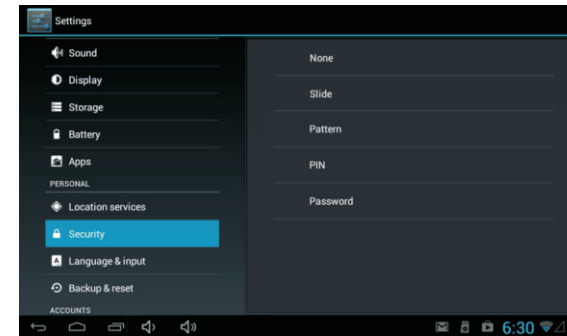


If use the pattern, as below:

 1. You must ensure the four-point connection when you draw the unlock pattern.

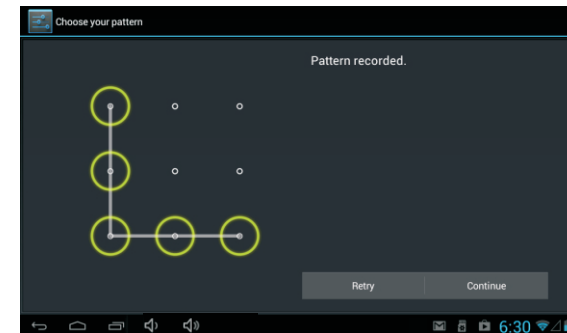

 2. Click Continue and draw again to confirm it

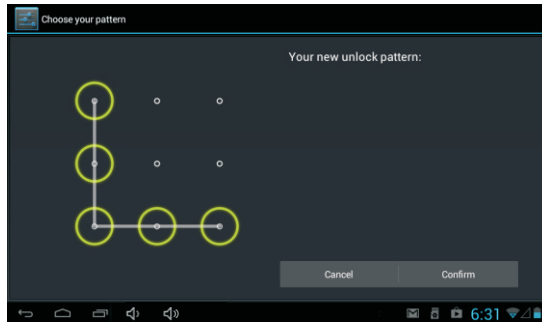

3. Click confirm to complete unlock pattern designing.

4. Each time you open or waking your MID device, you must draw pattern to unlock the screen.

1.2.16 Display setting

Click Settings>Display, you can set the brightness/wallpaper/Auto rotate screen/sleep/font size of the screen.

 
1.2.17 Wireless And Network Settings

a) WIFI

Click Settings>Wi-Fi, turn on the wifi, the device will find available wireless network on the right interface.



Select the expected wireless network, the system will directly connect the network or popup the password input window according to network access security settings. Please consult your wireless network administrator for the password.

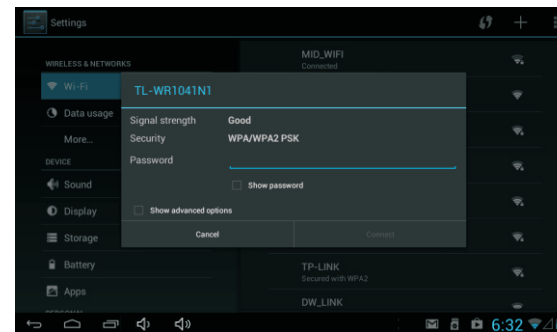

1.3 Technical specifications

Size	L 7.6 x W 4.8 x H 0.4 inches	
Weight	0.66 lbs	
LCD Display	7.0 inch 1024*600- Multi-point capacitive touch screen	
PC Interface	High speed Micro USB	
OS	Android 4.1	
Hard Drive Capacity	4GB	
System Memory	1G DDR3	
Capacity Expansion	Support T-Flash card 32GB(max)	
Music Function	Format	Mp3, WMA, OGG, AAC, 3GP, WAV etc.
	Max. Resolutions	20Hz-20KHz
Video Function	Format	Mp4, MKV, RMVB, AVI etc.
	Max. Resolutions	1920 *1080
	Screen Ratio	16:9
Photo browse	JPG / BMP / JPEG / GIF	
WIFI	Support	802.11b/g/n
	Transmission rate	Max 54Mbps
	Work Frequency	2.4GHZ
Camera Function	Front 0.3 megapixel camera Rear 2.0 megapixel camera	
Recording Function Support	Support	
Working temperature	-20-60°C	
Languages	Simplified Chinese / Traditional Chinese / English / French / German / Spanish.	

FCC STATEMENT

- 1.This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
 (1)This device may not cause harmful interference.
 (2)This device must accept any interference received, including interference that may cause undesired operation.
- 2.Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.