

BTS09

Bluetooth® Power Cube Speaker

Contents:

- Bluetooth® Power Cube Speaker
- Micro USB charging cable
- 3.5mm audio cable

Features:

- Easy pairing
- Auto-pairing function for the last paired device
- Support BQB, A2DP/AVRCP
- With Audio Out function and the device can work as a Bluetooth dongle.

Technical Specifications:

- Bluetooth® V2.1 + EDR Technology
- Bluetooth name "BTS09"
- Speaker 3W x 1, ø 40mm, frequency response 40Hz - 20kHz, impedance 4Ω±15%, distortion 7% max (with 1kHz 1W)
- Built-in 300mAh rechargeable battery
- With 3.5mm audio in jack and audio out jack
- Charging current : DC5V, 100-150mA
- Charging time : Around 2 hours
- Standby Current : 10mA
- Playing time : Around 3-4 hours
- Low battery indication
- Effective distance: 10m (straight line without obstacle)

Instructions:

- ❶ Power button / Play / Pause
- ❷ 3.5mm Audio-out
- ❸ 3.5mm Audio-in
- ❹ Micro USB (power input)
- ❺ LED light
- ❻ 40mm Speaker

LED Indication:

LED INDICATOR	STATUS
Alternate red and blue	Searching and Pairing
Red and blue LED light up simultaneously for 2 seconds	Power on / Power off
Blue – two flashes every 3 seconds	Paired
Blue – one flash every 3 seconds	Loss Connection
Red	Charging
Red – three flashes every 15 seconds	Battery Low

Pairing

- Press and hold the POWER button until you hear the start-up chime (approximately 5 seconds) and then continue to hold until the LED indicator flashes alternate red and blue (approximately 2-3 seconds). The alternate red and blue LED shows that the speaker is in Bluetooth® searching and pairing status.
- Switch on your Bluetooth® device and search for other Bluetooth® devices. When "BTS09" appears on your device, select and pair with the speaker. If prompted for a password, enter "0000". The connection may take up to 40 seconds to complete. When the pairing is successful, the blue LED indicator will flash twice every three seconds.
- If the pairing is unsuccessful, the blue LED indicator will flash once every three seconds to show that it is unpaired.
- To turn off the speaker, press and hold the POWER button (approximately 3-5 seconds) until the blue and red LED are lit simultaneously.
- Please note that the speaker has an auto-paired function for those Bluetooth® devices which were previously paired with the speaker.

(Continued on back)

Charging

- Plug the micro USB cable into power source or USB port, the LED will light up in red and start charging.
- When charging complete, the LED will be off.

Low Battery Protection

- When the battery is low, the red LED will flash 3 times every 15 seconds.
- When the battery power is too low, the speaker will automatically switched off. Low battery protection will only function for Bluetooth playback. It will not function for audio in playback or audio out function.

Bluetooth dongle function

- The speaker can be connected via an audio cable to other audio equipment (e.g. Hifi, or other speaker system) and operate as a Bluetooth® dongle enabling music to be streamed to and played by the connected equipment.

• Switch off the Speaker. Using the audio cable, connect the speaker (3.5mm audio out) and the other audio equipment (audio in / Line in / AUX in).

• Switch on the speaker and pair the Bluetooth device (e.g. mobile phone or etc) with the speaker. Use the controls as usual on Bluetooth device or other audio equipment to adjust volume, move to the previous, next track and etc.

• During the Bluetooth dogle function, our Bluetooth speaker will be muted.

• Please note that you can only perform either function of audio in or audio out, these two functions cannot perform simultaneously.

Audio In Playback

• Make sure the speaker is switched on before using the audio in playback. When using audio in playback, the Bluetooth function will be automatically switched off.

Trouble Shooting

OBSERVATION	POTENTIAL CAUSE / SOLUTION
The unit does not work (indicator not illuminated)	Is the speaker out of battery ? If so, charge the speaker. Is the speaker switched on ? If no, press and hold the POWER button for 2 seconds to switch on and perform pairing
No sound	Is the volume set too low or muted ? Is the song being paused ? Is the Bluetooth correctly paired ?
The bluetooth do not work or cracking	Is the Bluetooth correctly paired ? Is there any audio cable plugged into the audio in jack ? If so, remove the audio cable. Is the Bluetooth device positioned over 10m away from the speaker ? Is there any solid objects between Bluetooth device and the speaker ? Is the battery too low ? If so, recharge the battery.

Warning:

- 1) Keep the product away from high humidity or high temperatures.
- 2) Do not disassemble, modify or attempt to repair the product
- 3) Store the product away from dirt or dust.
- 4) For external cleaning, use a soft, clean, damp cloth only. Use of detergents may damage the cabinet and leak inside.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The diagram illustrates a four-panel book layout. It consists of five connected parallelogram shapes arranged in a vertical sequence. The top shape is labeled 'Cover' in pink. Below it is a white shape labeled 'Panel 1' in pink. This is followed by a gray shape labeled 'Panel 2' in pink. Below that is another white shape labeled 'Panel 3' in pink. The bottom shape is a gray parallelogram labeled 'Panel 4' in pink. The labels are centered within each shape.