

Your Tablet

Important keys & connectors



Contents

Your Tablet
Contents
Let's go
Touchscreen & keys
Home screen
Calls
Web
Latitude
Manage your life
Contacts
Messaging
Text entry
Tips & tricks
Personalize
Photos & videos
Music
WHT wireless
Wireless Connection
USB & memory card
Tools
Management
Security
Troubleshooting

Let's go

Let's get you up and running

Assemble & charge

Note: Your device is always on when being charged.

Turning the Tablet on & off

To turn on your Tablet, press and hold the **Power** button

To turn off your Tablet, press and hold **Power** then touch **Power off** on the screen.

Wireless Connection

If you want to use a Wireless Connection computer network for even faster Internet access, touch **Menu > Settings > Wireless & networks > Wireless Connection settings**.

Touchscreen & keys

 
A few essentials

Touch tips

Here are some tips on how to navigate around your Tablet.

Touch

To choose an icon or option, touch it.




Touch & hold

To open special options, touch and hold an icon or other item. Try it: In the home screen, touch

Contacts, then touch and hold a contact to open options.

Drag

 To scroll through a list or move slowly, *drag* across the touchscreen. Try it: In the home screen, touch **Contacts**, and then drag your **Contacts** list up or down.

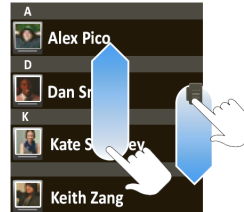

Flick

 
To scroll through a list or move quickly, *flick* across the touchscreen (drag quickly and release).

Zoom

Get a closer look at maps or web pages. To zoom in, *double touch* the screen. To zoom out, *double touch*, the screen again.

You can also zoom in or out by pinching your fingers together or moving them apart on the screen.

Touch to Zoom

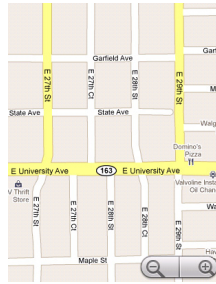

Key tips

Power key

- In power off mode, press this key to turn on your Tablet.
- In power on mode and screen-off mode, press this key to turn on the screen.
- In power on and screen-on mode, press this key to turn the screen off.

Touch **Home**  to close any menu or App and return to the home screen. From the home screen, touch and hold **Home**  to show the last few Apps you used, then touch an App to open the selected App.

Touch **Menu**  to open menu options, or touch Back  to go back.

Sleep & wake up

To save your battery, prevent accidental touches, or when you want to wipe smudges off your touchscreen, put the touchscreen to sleep by pressing **Power**. To wake up the touchscreen, press **Power** again, or open the Tablet.

To change how long your Tablet waits before the screen goes to sleep automatically, touch **Menu**  > **Settings** > **Sound & display** > **Screen timeout**.

Power key menu

Press and hold **Power** to open the power key menu, where you can turn off the Tablet (**Power off**), or turn **Airplane mode** or **Silent mode** on or off.

Adjust volume

Press the volume keys to change the ring volume (from the home screen), or the earpiece volume (during a call).

Rotate the screen

When you rotate the Tablet 90 degrees anticlockwise, the touchscreen can rotate to stay right-side up:

Find it: Menu  > **Settings** > **Sound & display** > **Orientation**

Home screen

Quick access to the things you need most

Quick start: Home screen

The *home screen* gives you all your latest information in one place. It's what you see when you turn on the Tablet or touch Home from a menu. It will appear basically like this:



Note: Your home screen might look a little different.

The home screen extends beyond what you see on the screen to give you more room for adding shortcuts, widgets, and more. Flick the home screen left and right to see more panels or to add widgets or shortcuts.



Widgets

Add a *widget*, such as a clock, music player, or a calendar that shows upcoming appointments.

To open a widget, touch it. To add widgets, touch

Menu  **> Add > Widgets**. If your home screen is full, you won't see the add option. You'll have to delete widgets or shortcuts to make room.

Note: If you install Apps from Android Market that have widgets, touch and hold the home screen, then select a widget to add to the home screen.

Shortcuts

To add shortcuts to the home screen, open the App menu (see below), then touch and hold the shortcut you wish to add. It will be added to the home screen.

Alternatively, access **Menu**  > **Add** > **Shortcuts**.

Apps

Your Tablet comes with a few Apps already installed, and you can download and install more. To open an App, touch it.

App menu

All the Apps on your Tablet, including the Apps that came with your Tablet and the ones you download and install, are listed in alphabetical order in your *App (application) menu*. To open the App menu, touch  and drag up.

Running multiple Apps

There is no need to close an App before opening another one.

Your Tablet can run multiple Apps, all at once.

You can open a new App by touching **Home** /  to return to the home screen, then opening the App menu and touching the App you want. To switch from one running App to another, touch and hold **Home** / 

to see what Apps are already open, then touch the one you want. You can view up to the last six Apps that you ran.

Tablet status & notifications

The status bar at the top of the screen contains icons that tell you about messages and Tablet status. To view your notifications, touch the status bar and drag it down.



Icons on the right tell you about Tablet status:

	WHT active		network (full signal)
	GPS active		network (roaming)
	Wireless Connection active		downloading
	Volume		voicemail message
	Vibrate		3G (fastest data)
	Silent		flight mode
	mute call		battery (charging)
	battery (full charge)		Speaker phone active
	alarm set		

Calls

It's good to talk

Quick start: [Calls](#)

Dialling options

 
Find it:  **Phone**



In-call options

During a call:

- To use a WHT device touch **WHT**. (The device must be turned on and previously paired — see “Connect new devices” on page 63.)

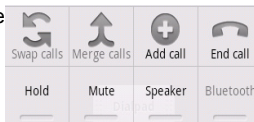

- To mute a call, touch **Mute**.

- To use the speaker phone, touch **Speaker**.

Note: Using a mobile device or accessory while driving may cause distraction and may be illegal.

Always obey the laws and drive safely.

Tip: You can touch **Home** or **Back** to leave the active call display. To reopen it, touch **Home** > **Phone** > **Return to call in progress**.

Make & answer calls

To make a call, touch **Phone**, enter a number, then touch .

Tip: If the screen is locked, drag to the right.

To answer a call, drag to the right.

To end a call, touch **End**.

To ignore a call, drag to the left.

Enter numbers during a call

To enter numbers during a call, touch **DialPad**.



Recent calls

Find it:  **Phone > Call log**

- To call a number, touch it.
- To send a text message, create a contact, view a contact, or other options, touch and hold an entry.
- To clear the list, touch **Menu**  > **Clear call log**

Frequent calls

Find it:  **Phone > Favourites**

- To call a number, touch it.
- To send a text message, view a contact, or other options, touch and hold an entry.

Conference calls

To start a conference call, call the first number. After the call is answered, touch **Add call** and call the next

number.

When the next number answers, touch **Merge call**.

Tip: Before merging, you can switch back and forth between the two calls by touching .

Your phone pad number

Find it: Menu  > **Settings** > **About phone** > **Status** > **My phone number**

Emergency calls

Note: Your service provider programs one or more emergency phone numbers that you can call under any circumstances, even if your tablet is locked. Your pre-programmed emergency number(s) may not work in all locations, and sometimes an emergency call cannot be placed due to network, environmental or interference issues.

1 Touch  **Phone** (if your Tablet is locked, touch **Emergency Call**).

2 Enter the emergency number.

 
3 Touch  to call the emergency number.

Web

You don't need a PC, surf the web with your Tablet

Quick start: Browser

Find it:  **Browser**

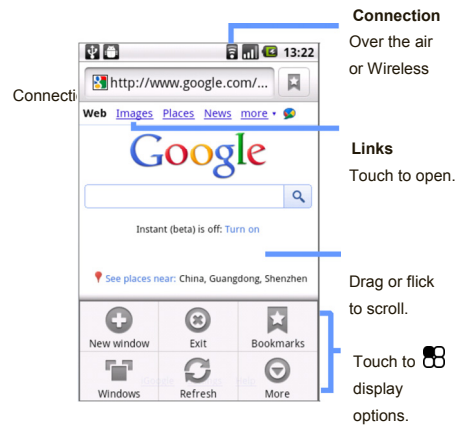

Note: If you can't connect, contact your service provider.

Connect

Your Tablet uses the mobile network (over the air) to connect to the Web automatically.

Note: Your service provider may charge to surf the Web or download data.

To use a wireless network, touch **Menu**  > **Settings** > **Wireless & networks**. Touch **Wireless Connection** to turn it on and touch **Wireless Connection settings** to search for nearby wireless networks. Touch a network to connect.

Web touch tips

Zoom & magnify

In Web pages, when you scroll (drag or flick), zoom icons appear at the bottom of your screen.



Select links

When you touch a link, your Tablet outlines it and goes to that page.

If you touch

and hold the link, your Tablet shows options, like **Open in new window** or **Bookmark link**.



Browser options

Touch **Menu**  to see browser options:

Options	
Open	Open a new browser window.
Bookmarks	See your bookmarks.
Windows	View the browser windows that are currently open.
Refresh	Reloads the current page.

Back/Forward	Navigate to previously viewed pages.
More	Shows additional browser options.

Set your location sources

Set your Tablet to determine your location using GPS satellite signals (highly accurate, but uses battery power) or using the mobile network (less accurate, but conserves battery power).

To set your location, touch **Menu**  > **Settings** > **Location & security** > **Use GPS satellites** and/or **Use wireless networks**.

Manage your life

Stay on top of things.

What can you manage?

 
Email, contacts, and calendar on your Tablet give you access to the same personal information that you add, view, and edit on your computer.

Contacts

Contacts like you've never had before

Quick start: Contacts

Find it:  **Contacts**

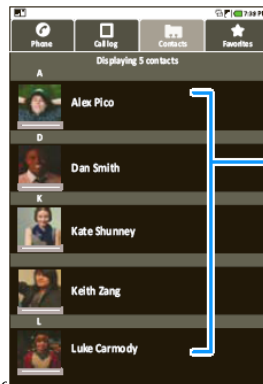

Contacts List

Touch to view contact information.
Touch & hold to edit, delete, & more.

Menu Options

Touch **Menu**  to edit sync groups or to add/import new contacts.

Tip: To search the list, just open your Tablet and type a name, or simply touch **Search**  and type using the touchscreen keypad. When you flick or drag this list, a scroll bar appears on the right. Drag the scroll bar to move the list faster.

Call, text, or email contacts

Find it:  **Contacts**

For **View contact**, **Call contact**, **Text contact**, **Add to favourites**, or other options, touch and hold the contact.

Edit or delete contacts

 
Find it:  **Contacts**

Touch the contact, then touch **Menu**  > **Edit contact** or **Delete contact**.

Create contacts

Find it:  **Contacts** > **Menu**  > **New contact**

Select the account to save the contact to, then type the contact name and details.

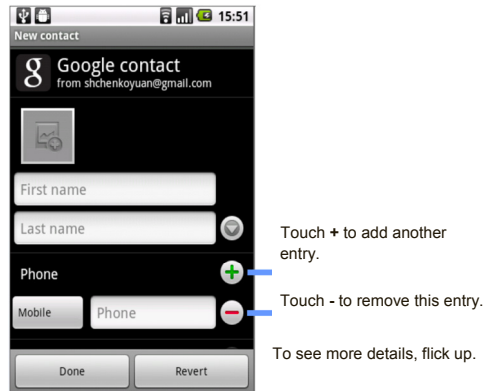

When you're finished, touch **Done**.

Groups

 
Find it: **Contacts** > **Menu** > **Display options**
You can put your **Contacts** into groups that you create (like "friends", "family", or "work"). Then, you can find contacts faster by showing one group at a time.

Messaging

Sometimes it's best 2 text, or IM, or email . . .

Quick start: Messaging

Find it:  **Messaging**

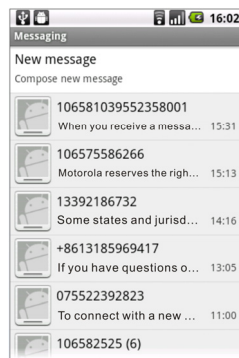

Message List

Touch to open a message.
Touch & hold to move,
delete, & more.

Tip: To see more messages, flick or drag up.

Read & reply to messages

- To open a message and all of its replies, touch it.
- To respond to a message, just open it and enter your response in the text box at the bottom.

- To open options, touch and hold a message.

Create messages

Find it:  **Messaging > New message**

Enter the recipient and message. In text messages and emails, touch **Menu**  for options, like **Insert smiley** or **Attach**.

Send & receive attachments

To send a file in a message, open a new message and touch **Menu**  > **Attach**.

 
When you receive a message with an attachment, open the message and touch the file name to download it. Then, touch the name again to open it.

Some file formats can be converted to HTML for faster viewing. In such cases, your Tablet will show a button that says

Get HTML version.

Find it: **Talk**

Touch to change your online status message.

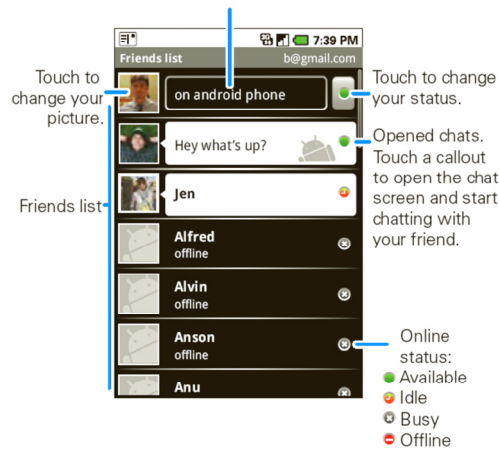

Touch **Menu**  to see a list of your Google Talk friends, send invitations to add new friends, and much more.

Instant messages

To send and receive instant messages, you can use an instant messaging App or your browser.

Voicemail

When you have a new voicemail,  is shown at the top of your screen. To hear the voicemail, touch  **Tablet** then touch and hold .

Text entry

Think keyboard, now think smaller

 
To change text entry settings, change languages, and see the dictionary of terms you've used, from the home screen, touch **Menu**  > **Settings** > **Language & keyboard**.

Touchscreen keypad

When your Tablet is closed, you can open the display keypad by touching a text field. To close the keypad, touch **Back** .

Text Entry

Touch to open the touchscreen keypad.

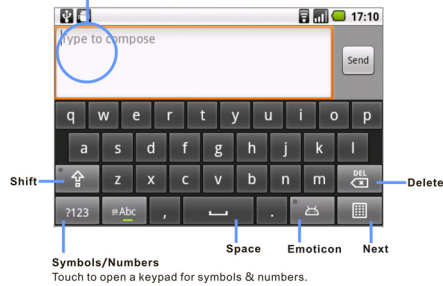

To change your settings for this keypad, from the home screen, touch **Menu**  > **Settings** > **Language & keyboard** > **keyboard**.

Text entry settings

When you use the touchscreen keypad, your Tablet suggests words from your dictionary and chosen language. Your Tablet also automatically enters apostrophes in some words, like "dont."

Find it: **Menu**  > **Settings** > **Language & keyboard**

- To change the language and style of your

- touchscreen keypad, touch **Select locale**.
- To edit your dictionary, touch **User dictionary**.
- To change the sounds, correction, and other settings for your touchscreen keypad, touch **keyboard**.
- To change the automatic correction settings for your full keypad, touch **keyboard**.

Tips & tricks

A few handy hints

General tips

- To return to home screen, touch **Home** 
- To see recently dialled numbers, touch  **Phone** > **Call log**.
- To sleep/wake your Tablet, press **Power**
- To set screen timeout, touch **Menu**  > **Settings** > **Sound & display** > **Screen timeout**.
- To search, touch Search 
- To show recently used Apps, touch and hold **Home** 
- To turn sound on/off, press and hold **Power** > **Silent mode**.
- To turn airplane mode on/off, press and hold **Power** > **Airplane mode**.

Battery tips

Want to extend your battery life? Try these:

- To turn off automatic applications sync, touch **Menu**  > **Settings** > **Accounts & sync**.
- To turn off WHT power, touch **Menu**  > **Settings** > **Wireless & networks** > **WHT**.
- To turn off Wireless Connection, touch **Menu**  >

Settings

- > **Wireless & networks** > **Wireless Connection**.
- To add a **Power Control** widget, touch **Menu**  > **Add** > **Widgets** > **Power Control**.

Note: The **Power Control** widget is a simple way to enable/disable Wireless Connection, WHT wireless, GPS, Sync (turns on/off all active accounts, Google, and Exchange), and display brightness.

Personalize

Add your personal touch

Widgets

To create a new widget:

- 1 Find an empty spot on your home screen where you want to add a widget, then touch and hold.
Tip: You can flick left or right to open other panels on your home screen.
- 2 Touch **Widgets**.
- 3 Touch the type of widget. If necessary, enter the widget settings.

You can personalize widgets with content that you choose.

Ringtones

To personalize your ringtones:

Find it: Menu  > **Settings** > **Sound & display**
> **Tablet ringtone** or **Notification ringtone**

To set your vibrate options:

Find it: Menu  > **Settings** > **Sound & display**
> **Tablet vibrate**

Wallpaper

To apply a new wallpaper:

- 1 Find an empty spot on your home screen, then touch and hold.
- 2 Touch **Wallpapers**.
- 3 Touch **Media gallery** to select a photo as your wallpaper, or touch **Wallpaper gallery** to choose a wallpaper that comes with your Tablet.

Sounds

- To set volume for media and videos, touch **Menu**  > **Settings** > **Sound & display** > **Media volume**.
- To play tones when using dial Tablet, touch **Menu**  > **Settings** > **Sound & display** > **Audible touch tones**.
- To play sound on a screen selection, touch **Menu**  > **Settings** > **Sound & display** > **Audible selection**.

Display settings

- To set display brightness, touch **Menu**  > **Settings** > **Sound & display** > **Brightness**.
- To set orientation, touch **Menu**  > **Settings** > **Sound & display** > **Orientation**.
- To set animation, touch **Menu**  > **Settings** > **Sound & display** > **Animation**.

Note: Some Apps are designed so that your Tablet can “animate” them by rotating, fading, moving, and stretching one or more images.

Quick launch shortcuts

To set keyboard shortcuts to launch your favourite App, touch **Menu**  > **Settings** > **Applications** > **Quick launch** > **Assign Application**.

To use a quick launch shortcut, touch Search  and the assigned key, for example, Search  and **B** to launch the browser.

You can also add shortcuts directly to the home screen for actions like **Direct dial** and **Direct message**. Just touch and hold an empty spot on the home screen, then touch **Shortcuts** and select a shortcut.

Language & region

Set your menu language and region:

Find it: Menu  > **Settings** > **Language & keyboard** > **Select locale**

Photos & videos

See it, capture it, share it!

Photos

Take & share photos

Take that family photo, and post it online for everyone to see.

Note: To get the clearest photos, wipe the lens clean with a soft, dry cloth before you take a photo.

Find it: Press **Camera key** .



A thumbnail of the photo you've just taken is shown on the right. Touch the thumbnail to view it.

- To **set** the photo as a wallpaper or contact photo, touch **Menu**  > **Set as**.
- To **send** the photo in a message or post it online, touch **Menu**  > **Share**.
- To **delete** the photo, touch **Menu**  > **Delete**.

- For more options, touch **Menu**  > **More**.

Photo options

In the viewfinder, touch **Menu**  > **Settings** to open the camera menu:

Options	
Store location	Save the latitude and longitude of where the photo was taken so the photo can be displayed on Google Maps or used in other Applications.
Scene mode	Select a setting for better image capture under different lighting environments: Auto , Action , Portraits , Landscape , Night , Beach , Snow , and Sunset .
Options	
Flash mode	Choose from Automatic , On , and Off .
White balance	Compensate for colour differences in different lighting. Set to Auto or, for greater precision, set to Incandescent or Fluorescent for indoor lighting or to Daylight or Cloudy for outdoor lighting.

Colour effect	Apply different colour effects to images. Choose Sepia for an "antique" look, Mono for black and white, Negative to invert the image, Red Tint , Blue Tint , or Green Tint to apply tints to the image.
Picture size	Set the size of your photo. (You may need to reduce the image size for a picture message because some networks limit the size of files you can send.)
Picture quality	Choose from Fine , Super fine , and Normal . (Reduce picture quality for photos that you send in MMS/picture messages.)

Options	
Flash mode	Choose from Auto (for best overall image quality), Infinity , and Macro (for close-ups).

View your photos

Find it:  >

 **Gallery > Camera**

Play a slideshow

Touch  >

 **Gallery > Camera**, touch a photo, then touch **Slideshow** to start a slideshow. To stop the slideshow, touch the screen. To return to the gallery, touch **Back** .

Share your photo gallery

Find it:  >

 **Gallery > Camera**

 
To send your photo in a message or post it online:

- 1 Touch and hold a photo, then touch **Share**.
- 2 Choose how you want to share — like **WHT**, **Email**, or **Messaging**.

Manage your photos

Find it:   **Gallery > Camera**

Touch and hold a photo, then:

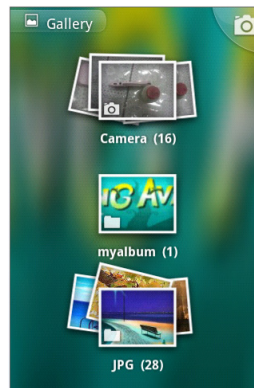

- To delete the photo, touch **Delete**.
- To set the photo as a contact picture or wallpaper, touch **More** > **Set as**.

Edit your photos

Touch  >  **Gallery** > **Camera**, touch & hold the photo, then select your edit option.

Videos

Record & share videos

Find it: Press **Camera** , then drag the switch up.

Note: To get the clearest videos, wipe the lens clean with a soft, dry cloth before you record a video.



Tip: To send your video in a message, set the video quality to **Low (for MMS messages)** by touching **Menu**  > **Settings** > **Video Quality**.

To **record** a video, touch . Touch  again to stop the video, or press **Camera key** .

A thumbnail of the video you've just taken is shown on the right. Touch the thumbnail, then touch **Menu** .

- To **send** the video in a message or post it online, touch **Share**.
- To **play** the video, touch .
- To **delete** the video, touch **Delete**.

Video options


In the viewfinder, touch **Menu**  > **Settings** to open the video menu:

Options	
Video quality	Select Low if sending the video in an MMS message, High if storing the video on an SD card
Video Duration	Set the length of your video. Select 30 seconds if sending the video in an MMS/video message. Select 10 minutes or 30 minutes if storing the video on an SD card.
White balance	Compensate for colour differences

	in different lighting. Set to Auto or, for greater precision, set to Incandescent or Fluorescent for indoor lighting or to Daylight or Cloudy for outdoor lighting.
Colour effect	Apply different colour effects on videos. Choose Sepia for an “antique” look, Mono for black and white, Negative to invert the video image, Red Tint , Blue Tint , or Green Tint to apply tints to the video.

Play your videos

 Find it:  >  **Gallery** > **Camera** > *select_video*

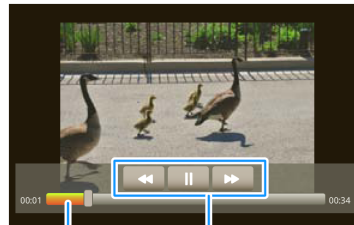

Progress Bar

Video Controls

 
Music

When music is what you need...


Quick start: Music

Touch, touch, play — instant music. Just open your music library, then select what you want to play.

Find it:  >  **Music**

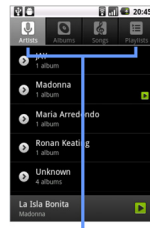

Categories

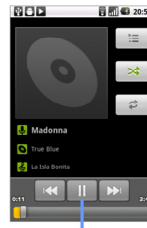 

Music Controls

Touch a category, then touch a song or playlist.

Tip: When a song is playing, you can add it to a playlist by touching **Menu**  > **Add to playlist**.

Set up music

What music transfer tools do I need?

To put music on your computer and then load it on your Tablet, you need:

- A Computer
- A USB data cable.

You need a memory card

Your music is stored on your memory card. Your Tablet supports removable microSD memory cards. Make sure your memory card is installed.

Tip: To see the available memory on your memory card, touch **Menu**  > **Settings** > **SD card & Tablet storage**.

What music file formats can I play?

Your Tablet can play many types of files: AMR-NB/WB, MP3, PCM/WAV, AAC, AAC+, eAAC+, MIDI, OGG, and WMA.

What headphones can I use?

Your Tablet has a 3.5mm headset jack for wired stereo listening. You can go wireless with WHT stereo headphones or speakers

Get music

Transfer music using USB

Transfer music files from a computer to your memory card.

- 1 With a memory card inserted, and your Tablet showing the home screen, connect a micro USB data cable from your Tablet's micro USB port to a USB port on your computer.

Note: You may need to remove the USB data cable from the charger power head.

Note: Make sure to connect the Tablet to a high power USB port. Typically, these are located directly on your computer.

Other operating systems may not be compatible.

- 2 Your Tablet shows a USB connection dialog, at the top of the screen. Flick down, then touch **USB connection**. You are not able to use the files on your memory card while it is connected.

- 3 Touch **Mount** (if asked) to connect your memory card.

- 4 On your computer, locate and click on the "Removable Disk" icon to access the Tablet's memory card.

- 5 Drag and drop your music to a folder on the memory card.

Tip: To help manage your music, create a "Music" folder on your memory card.

- 6 When you're done, select the "Safely Remove

 
Hardware" feature on your computer. On your Tablet, drag down the notification panel, touch **Turn off USB storage**, and select **Turn off**.

Play music

Music library

Open your music library, then select what you want to play.

Find it:  >  **Music**

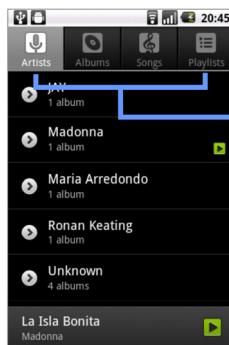


Categories
Touch to list songs
or playlists.

Your music is stored by artists, albums, songs, and

playlists. Touch a category, then touch the song or playlist you want to play. Touch **Menu**  > **Party shuffle** to randomly play all your songs.

Music player

 Just touch a song or playlist to get going.

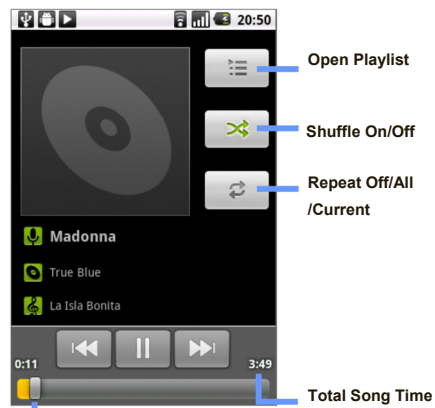

Music player controls

- **Play/pause** — Touch  / .
- **Previous/next** — Touch  / .
- **Fast forward/rewind** — Touch and hold  / .
- **View playlist** — Touch .

- **Shuffle** — Touch .
- **Repeat** — Touch .
- **Volume** — Press the side volume keys.
- **View library** — Touch **Menu**  > **Library**.
- **Turn shuffle on/off** — Touch **Menu**  > **Party shuffle**.
- **Add to playlist** — Touch **Menu**  > **Add to playlist**.
- **Use as ringtone** — Touch **Menu**  > **Use as ringtone**.
- **Delete** — Touch **Menu**  > **Delete**.

Hide, wake, turn off

Touch **Home**  /  to use another App. Your music will continue to play.

When you see  in the status bar, a song is playing, flick down to see details. Touch the song to return to the music controls.

To turn off your music touch .

Playlists

To add a song from the music library to a playlist, touch and hold the song then touch **Add to playlist**. Choose an existing playlist, or touch **New** to create a new playlist.

 
To add a song to the playlist you're playing, touch **Menu**  **Add to playlist** in the music player. To edit, delete and rename playlists, touch and hold the playlist, in the music library.

WHT wireless

Lose the wires and go wireless

Quick start: WHT wireless

Find it: Menu  > **Settings** > **Wireless & networks** > **WHT settings**

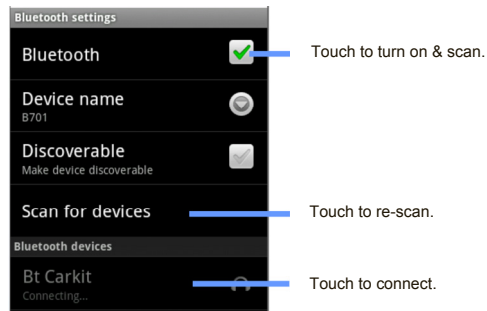

Turn WHT power on or off

Find it: Touch Menu  > **Settings** > **Wireless & networks** > **WHT**.

Note: To extend battery life, turn WHT power off when not in use.

Connect new devices

Note: This feature requires an optional accessory.

To connect with a new device, you need to pair with it.
You only need to do this once for each device

- 1 Make sure the device you are pairing with is in discoverable mode.

Note: Refer to the guide that came with the device for details.

- 2 Touch **Menu**  > **Settings** > **Wireless & networks** > **WHT settings**.

- 3 Touch **WHT** to turn on and scan. If WHT is already on, touch **Scan for devices**.

- 4 Touch a device to connect.

- 5 If necessary, touch **OK**, or enter the device passkey to connect to the device. When the device is connected, the WHT indicator appears in the status bar.

Note: Using a mobile device or accessory while driving may cause distraction and may be illegal. Always obey the laws and drive safely.

Bluetooth

Bluetooth is a short-range wireless communications technology that devices can use to exchange information over a distance of about 10 meters.

Turn Bluetooth on or off, search for available Bluetooth devices, and make your phone visible or invisible to other Bluetooth devices.

1. Rename phone: check and rename device name.
2. Visibility timeout: set the time of others can find your Device.
3. Show received files: show the files download and upload.

Reconnect devices

To automatically reconnect your Tablet with a paired device, simply turn on the device.

To manually reconnect your Tablet with a paired device, touch the device name in the **WHT devices** list.

Disconnect devices

To automatically disconnect your Tablet from a paired device, simply turn off the device.

To manually disconnect your Tablet from a paired device, touch the device name in the devices list, then touch **Menu**  > **Disconnect**.

Edit properties

To edit the device name, touch **Menu**  > **Settings** > **Wireless & networks** > **WHT settings** > **Device name**. Enter a name and touch **OK**.

 
Wireless Connection

Home, office, or hotspot

Quick start: [Wireless Connection](#)

Find it: **Menu**  > **Settings** > **Wireless & networks** > **Wireless Connection settings**

Use a wireless network for fast Internet access and to download data.

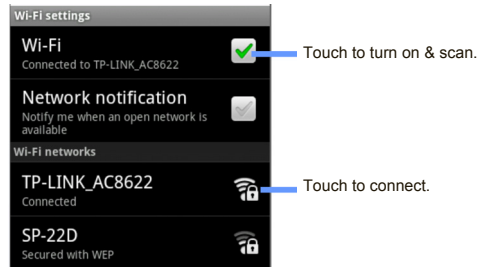

Turn Wireless Connection on or off

Find it: Menu  > **Settings** > **Wireless & networks** > **Wireless Connection**.

Note: To extend battery life, turn off Wireless Connection power when not in use.

Wireless Connection search & connect

To find networks in your range:

- 1 Touch **Menu**  > **Settings** > **Wireless & networks** > **Wireless Connection settings**.
- 2 Touch **Wireless Connection** to turn on and scan. If Wireless Connection is already on, touch **Menu**

 > **Scan**. Your Tablet lists the networks it finds within range.

Tip: To see your Tablet's MAC address or other Wireless Connection details, touch **Menu**  > **Advanced**.

3 Touch a network to connect.

4 If necessary, enter **Network SSID**, **Security**, and **Wireless password**, and touch **Connect**. When your Tablet is connected to the network, the wireless indicator  appears in the status bar.

Tip: When you are in range and Wireless Connection is on, you will automatically reconnect to available networks you've connected to before.

USB & memory card

Connect your Tablet and computer, then drag & drop

USB drag & drop

You can transfer your pictures, videos, music, ringtones, and more, from your computer to your Tablet's memory card.

1 With a memory card inserted, and your Tablet showing the home screen, connect a micro USB data

cable from your Tablet's micro USB port to a USB port on your computer.

Note: You may need to remove the USB data cable from the charger power head.

Note: Make sure to connect the Tablet to a high power USB port. Typically, these are located directly on your computer.

- 2 Your Tablet shows a USB connection dialog at the top of the screen. Flick down, then touch **USB connected**. You will not be able to use the files on your memory card while it is connected.
- 3 Touch **Mount** (if asked) to connect your memory card.
- 4 On your computer, locate and click on the "Removable Disk" icon to access the Tablet's memory card.
- 5 Drag and drop your pictures, videos, music, ringtones, and more, to the Tablet folder on the memory card. To help manage your files, you can create more folders inside your Tablet folder.
- 6 When you're done, select the "Safely Remove Hardware" feature on your computer. On your Tablet, drag down the notification panel, touch **Turn off USB storage**, and select **Turn off**.

Memory card

Note: You need to install a memory card to use your

Tablet.

[Remove or format your memory card](#)

Before you remove or format your memory card you need to unmount it. Touch **Menu** > **Settings** > **SD card & Tablet storage** > **Unmount SD card**.

To format your memory card, touch **Format SD card**.

Warning: All data on your memory card will be deleted.

Tools

Stay on top of things

[Alarm clock](#)

 
Find it:  >  **Alarm Clock**

To turn on an alarm, touch the check box.

When an alarm sounds, touch **Dismiss** to turn it off or **Snooze** to delay.

To add an alarm, touch **Menu**  > **Add alarm**, then enter alarm details.

To enable or disable an alarm, touch the check box.

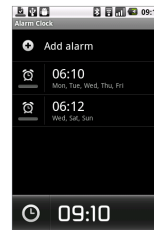

Calculator

Find it:  >  **Calculator**

Your calculator has basic and advanced views. To change views, touch **Menu**  > **Advanced panel** or **Basic panel**. To clear history, touch **Menu**  > **Clear history**.

Management

Stay in control

Wireless manager

Find it: **Menu**  > **Settings** > **Wireless & networks**

Manage all your wireless connections: Wireless Connection, WHT, airplane mode, & mobile networks.

Airplane mode

Use airplane mode to turn all your wireless connections off — useful when flying.

Update my Tablet

To keep your Tablet current, software updates may be available. Touch **Menu**  > **Settings** > **About Tablet** > **System updates** to see if your Tablet is up to date. If it isn't, touch **Update**.

Network

You should not need to change any network settings.

Contact your service provider for help.

 
Touch **Menu**  > **Settings** > **Wireless & networks** > **Mobile networks** to show options for roaming networks, network selection, operator selection, and access point names.

Security

Help keep your Tablet safe

Quick start: [Security](#)

Find it: **Menu**  > **Settings** > **Location & security**

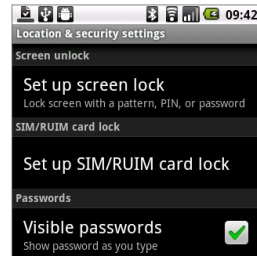

Screen lock

Note: You can make emergency calls on a locked Tablet. A locked Tablet still rings, **but you need to unlock it to answer.**

Lock the screen in the following ways:

- Press **Power** .
- Let the screen time out (don't press anything).
- Switch the power off.

To unlock the screen, press **Power** , or open the Tablet, then, drag  to the right.

Set unlock pattern

To set an unlock pattern, that you need to draw to unlock your screen, touch **Menu**  > **Settings** > **Location & security** > **Set unlock pattern**, then follow the instructions to draw your pattern.

To turn the lock off, touch **Menu**  > **Settings** > **Location & security** > **Require pattern**.

To change the lock pattern, touch **Menu**  > **Settings** > **Location & security** > **Change unlock pattern**.

Forgot your pattern or password?

If you forget your pattern or password, see your service provider.

FCC RF EXPOSURE INFORMATION:

WARNING!! Read this information before using your phone

In August 1986 the Federal Communications Commission (FCC) of the United States with its action in Report and Order FCC 96-326 adopted an updated safety standard for human exposure to radio frequency (RF) electromagnetic energy emitted by FCC regulated transmitters. Those guidelines are consistent with the safety standard previously set by both U.S. and international standards bodies. The design of this phone complies with the FCC guidelines and these international standards. Use only the supplied or an approved antenna. Unauthorized antennas, modifications, or attachments could impair call quality, damage the phone, or result in violation of FCC regulations. Do not use the phone with a damaged antenna. If a damaged antenna comes into contact with the skin, a minor burn may result. Please contact your local dealer for replacement antenna.

BODY-WORN OPERATION:

This device was tested for typical body-worn operations with the back of the phone kept 10mm from the body. To comply with FCC RF exposure requirements, a minimum separation distance of 10mm must be maintained between the user's body and the back of the phone, including the antenna. Third-party belt-clips, holsters and similar accessories containing metallic components shall not be used. Body-worn accessories that cannot maintain 10mm separation distance between the user's body and the back of the phone, and have not been tested for typical body-worn operations may not comply with FCC RF exposure limits and should be avoided. For more information about RF exposure, please visit the FCC website at www.fcc.gov

Your wireless handheld portable telephone is a low power radio transmitter and receiver. When it is ON, it receives and also sends out radio frequency (RF) signals. In August, 1996, the Federal Communications Commission (FCC) adopted RF exposure guidelines with safety levels for hand-held wireless phones. Those guidelines are consistent with the safety standards previously set by both U.S. and international standards bodies:

<ANSI C95.1> (1992) / <NCRP Report 86> (1986) / <ICIMIRP> (1996)

Those standards were based on comprehensive and periodic evaluations of the relevant scientific literature. For example, over 120 scientists, engineers, and physicians from universities, government health agencies, and industry reviewed the available body of research to develop the ANSI Standard (C95.1). Nevertheless, we recommend that you use a hands-free kit with your phone (such as an earpiece or headset) to avoid potential exposure to RF energy. The design of your phone complies with the FCC guidelines (and those standards).

Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the phone and may violate FCC regulations.

NORMAL POSITION:

Hold the phone as you would any other telephone with the antenna pointed up and over your shoulder.

RF Exposure Information:

This product is in compliance with FCC RF Exposure requirements and refer to FCC website search for FCC ID: 2ABN6S700 to gain further information include SAR Values.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and

(2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Do not use the device with the environment which below minimum -10°C or over maximum 50°C, the device may not work.

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Ad Hoc function is supported but not able to operate on non-US frequencies.