

reolink User Manual
Be Prepared, Be Reolink



Reolink C2
1440p Wireless Pan/Tilt Network Camera

Getting Started

Thank you for purchasing the Reolink Digital Video Surveillance (8CH) Product.

For the latest User Manual, Product Updates and more information about the products, please visit our website at:

<https://reolink.com/>



**RISK OF ELECTRIC SHOCK
DO NOT OPEN**



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER. NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

**WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT
EXPOSE THIS UNIT TO RAIN OR MOISTURE.**

**CAUTION: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF
THE PLUG TO THE WIDE SLOT AND FULLY INSERT.**

FCC Verification

Note: This equipment has been tested and found to comply with the limits for Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and the receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

These devices comply with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- These devices may not cause harmful interference.
- These devices must accept any interference received, including interference that may cause undesired operation.

Important Note:

All jurisdictions have specific laws and regulations relating to the use of cameras. Before using any camera for any purpose, it is the buyer's responsibility to be aware of all applicable laws and regulations that prohibit or limit the use of cameras and to comply with the applicable laws and regulations.

FCC Regulation(forUSA):

Prohibition against eavesdropping

Except for the operations of law enforcement officers conducted under lawful authority, no person shall use, either directly or indirectly, a device operated pursuant to the provisions of this Part for the purpose of overhearing or recording the private conversations of others unless such use is authorized by all of the parties engaging in the conversation.

WARNING:

Modifications not approved by the party responsible for compliance could void user's authority to operate the equipment.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.
This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

Important Safety Instructions

- Make sure product is fixed correctly and stable if fastened in place
- Do not operate if wires and terminals are exposed
- Do not cover vents on the side or back of the DVR and allow adequate space for ventilation

RoHS:

This product is fully compliant with the European Union Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment ("RoHS") Directive (2002/95/EC). The RoHS directive prohibits the sale of electronic equipment containing certain hazardous substances such as lead, cadmium, mercury, and hexavalent chromium, PBB, and PBDE in the European Union.


Content

Chapter 1 General Introduction of the camera	6
1.1 Physical Appearance	6
1.2 Product Feature	7
Chapter 2 Install Reolink Client software	8
2.1 Connection Diagram	8
2.2 Requirement for computer	9
2.3 Installing process	9
Chapter 3 Overview of client software	10
3.1 Live View	10
3.1.1 General Introduction of the icons	10
3.1.2 Zoom in/out the Image and Auto Focus	11
3.1.3 Pan/tilt, Preset and Cruise Path	12
How to set preset	13
3.2 Local Settings	14
3.2.1 Local Settings > General	14
3.2.2 Local Settings > Record Settings	15
3.2.3 Local Settings > Transcode	16
How to transcode the video file	17
3.3 Playback	17
3.3.1 Local Playback	17
3.3.2 Remote Playback	18
How to play back the video	19
How to download video from SD card	19
How to download some specific parts of the video	20
Chapter 4 Camera Configuration	21
4.1 Device Settings > Display	22
How to set up Mask	23
4.2 Device Settings > Recording	23
4.2.1 Recording > Encode	23
4.2.2 Recording > Option	24
4.2.3 Recording > Schedule	25
4.3 Device Settings > Network	26
4.3.1 Network > General	26
4.3.2 Network Advanced	28

DDNS Setup	28
NTP Setup	30
Email Setup	31
FTP Setup	33
Port Settings	35
4.3.3 Network Status	36
4.3.4 Wi-Fi Settings	37
How to connect to a wireless network	37
4.4 Device Settings > Alarm	38
4.4.1 Motion > Sensitivity	38
How to minimize the amount of noise in your images	40
4.4.2 Motion > Schedule	40
4.4.3 Motion > Motion Detect	40
4.5 Device Settings > System	42
4.5.1 System > General	42
How to configure DST Settings	43
4.5.2 System > Information	44
4.5.3 System > Maintenance	44
How to upgrade firmware	45
4.5.4 System > Performance	46
4.5.5 System > Reboot	46
4.6 Device Settings > Device	47
4.7 Device Settings > User	48
4.7.1 User > Online User	48
4.7.2 User > Add User	49
4.7.3 User > Manage User	49
How to change the login password	50
Chapter 5 Basic Settings	51
5.1 Basic Settings > OSD	51
5.2 Basic Settings > Encode	51
5.3 Basic Settings > Image	52
Chapter 6 Advanced Settings	53
Chapter 7 Warranty & Technical Support	54
7.1 Warranty	54
7.2 Technical Support	55

Chapter 1 General Introduction of the camera

1.1 Physical Appearance

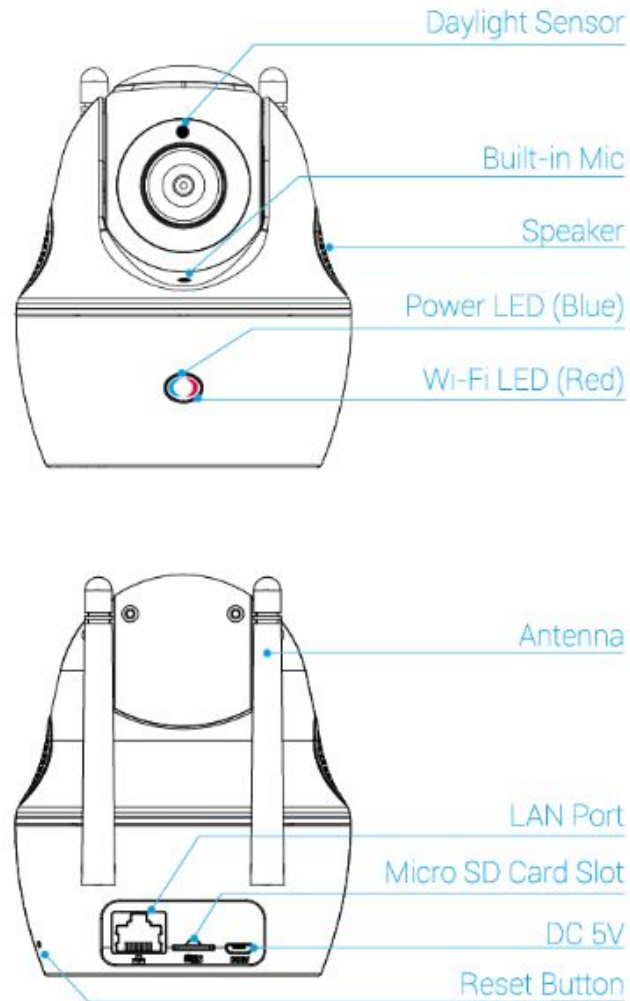

ITEM	DESCRIPTION
Power LED (Blue)	On: Power on
	Off: Power off
Wi-Fi LED (Red)	Flashing: Wi-Fi not connected
	Off: Wi-Fi connected successfully

1.2 Product Feature


	Model	C2
Hardware Features	Image Sensor	1/3" CMOS Sensor
	Display Resolution	2560 x 1440 (4 Megapixel)
	Lens	f=2.8-8mm Autofocus, F=1.6, With IRCUT
	Angle of View	Horizontal: 48° ~ 92°
		Vertical: 27° ~ 50°
	Pan/Tilt Angle	Horizontal: 355°
		Vertical: 105°
	Minimum Illumination	0 Lux (With IR Illuminator)
	IR Distance	12 Meters
	Dimensions	103 × 95 × 117mm
	Weight	300g
	Power Input	5V/2A, <6W
	Interface	One 10M/100Mbps RJ45
		Power Interface
		Built-in SD socket
		Built-in Microphone and speaker
		Reset Button
Software Features	Protocols & Standards	TCP/IP, UDP/IP, DHCP, FTP, SMTP, DDNS, NTP, UPnP, HTTP, P2P
	Image Compression	H.264/MJPEG
	Maximal Frame Rate	30fps
	Code rate	1024Kbps ~ 8192Kbps
	Audio	Two-way Audio
	Maximum User Access	20 Users
	Browser Supported	IE, Edge, Chrome, Firefox, Safari
	OS Supported	PC: Windows, Mac OS
		Smart Phone: iOS, Android
Wireless Features	Wireless Standard	IEEE 802.11a/b/g/n
	Operating Frequency	2.4GHz
	Wireless Security	WPA-PSK/WPA2-PSK
Other parameters	Temperature	Operating Temperature: -10°C~+55°C
		Storage Temperature: -40°C ~ 70°C
	Humidity	Operating Humidity: 20% ~ 85%
		Storage Humidity: 10% ~ 90%
	Waterproof	No

Chapter 2 Install Reolink Client software

2.1 Connection Diagram

For initial setup:

1. Connect the camera to the LAN port on the router by an Ethernet cable, otherwise, Reolink client software will not be able to find the camera.
2. Make sure the camera and your computer are connected to the same router.

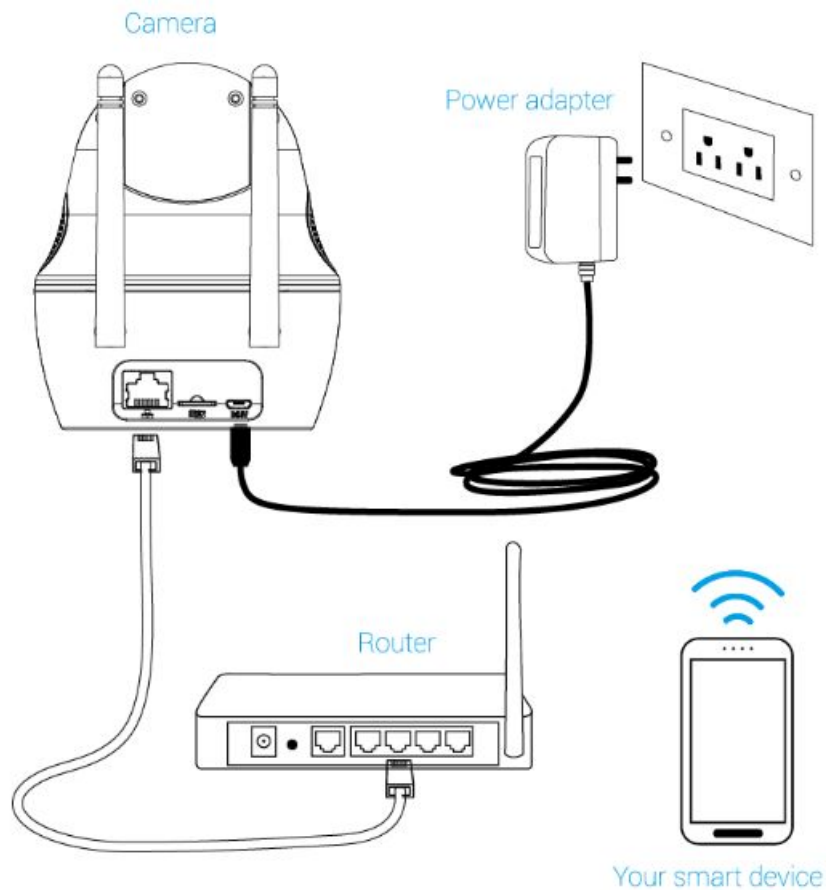

2.2 Requirement for computer

Item	Requirement
CPU	2.0GHz or faster
RAM	2 GB or more
Network adapter	10/100Mbps
Resolution	1024x768
Operating System	Microsoft Windows 7 and later

2.3 Installing process

Step 1: Insert the included CD into your computer, locate the file called Reolink and run this file.

Step 2: You may be asked by UAC (User Account Control) to allow Reolink to “make changes” to your system. Select **Allow** or **Continue**.

Step 3: Follow the installation wizard to install the software.

Chapter 3 Overview of client software

After the Client software is successfully installed on your computer, you can use it to manage your camera.




Double click on the icon to launch the client software on your computer.

3.1 Live View

Live view is the default mode. Under live view, users can view the video feed from the camera and go to configure the camera.

3.1.1 General Introduction of the icons

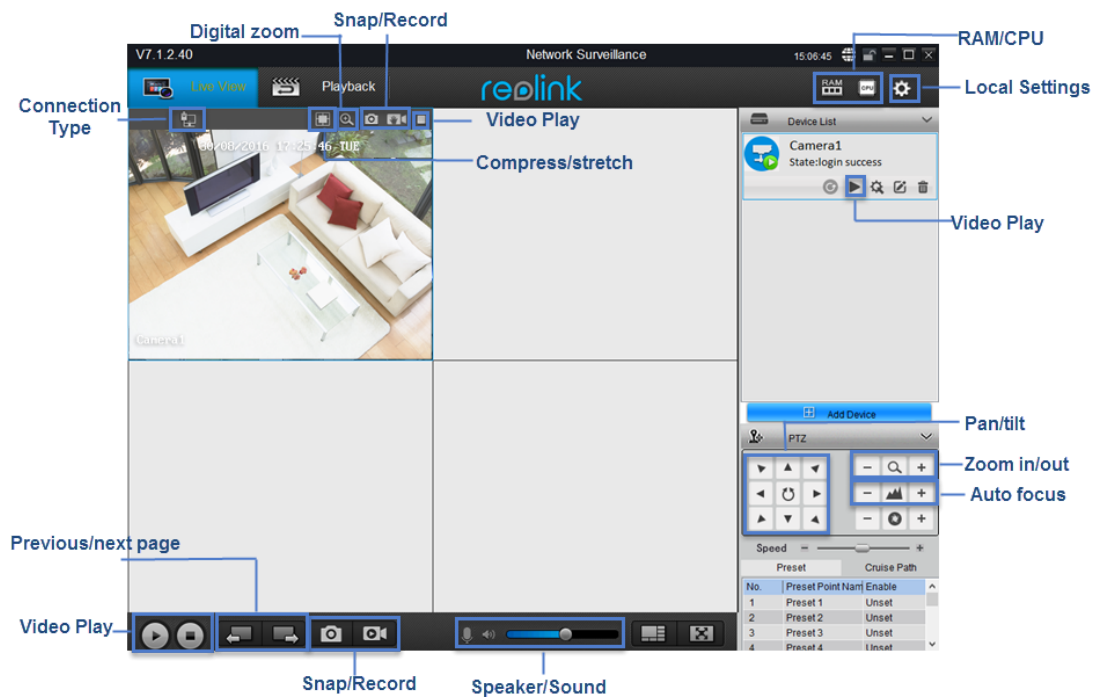

1. : Place your mouse over RAM/CPU icon, it will show the memory/CPU loading performance.
2. : **Local Setting**, set the parameters for the camera to record to your computer. For detailed configuration, please refer to [3.2 Local Settings](#).

3. **Device List:** Lists the cameras Reolink client has detected and added on your network, users can configure the camera, for detailed configuration, please refer to [chapter 4](#).
4. **PTZ:** Set the Pan/Tilt/Zoom Parameters. For detailed configuration, please refer to [3.1.3 Pan/tilt and Preset](#).
5. : Click to stretch the windows to full screen. Right click on the screen or hit ESC on the keyboard to exit full screen.
6. : Click to choose 1/4 and multi-channel view up to 32 Channels.
7. : Click to adjust its volume.
8.  / : Enable/disable audio.  means audio is enabled while  disabled.
9.  / : Enable/disable two-way audio.  means two-way audio is enabled while  disabled.
10. : Start/stop manual recording for all the channels. the video will be automatically saved to your computer.
11. : Click to snap a picture for all the channels. The still picture will be automatically saved to your computer.
12.  / : Click to see the cameras on the next page or previous page.
13.  / : Start/stop live feed for all the channels.
14.  / : Indicates the camera is connected to the router via an Ethernet cable or Wi-Fi and the Wi-Fi signal strength.
15.  / : Click  to compress the image to center or click  to stretch image to full window.
16. : Click to enter Digital Zoom. For more details, please refer to [3.1.2 Zoom in/out the Image and Auto Focus](#).
17. : Click to snap a picture for the selected channel. The still picture will be automatically saved to your computer.
18. : Start/stop manual recording for the selected channel. the video will be automatically saved to your computer.
19.  / : Start or stop live feed for the selected channel.

3.1.2 Zoom in/out the Image and Auto Focus

➤    **Zoom in/out:** Hold the  button to zoom out and  to zoom in.

- **Digital Zoom:** Click the  button on the live view window to enter digital zoom page.
 -  : Choose the zoom region
 -  : Zoom in
 -  : Zoom out
 -  : restore zoom back to default setting
 -  : Exit Digital zoom
-  **Auto Focus:** hold the  button to focus backward and  to focus forward.

3.1.3 Pan/tilt, Preset and Cruise Path

- **Pan/tilt buttons**



Click the directional arrows on the pan/tilt wheel to manually control the directions of the camera.

Click the  button in the middle to start automatic scan, click it again to stop it at the direction you prefer.

- **Set Preset**

Preset		Cruise Path
No.	Preset Point Name	Enable
1	Preset 1	Unset
2	Preset 2	Unset
3	Preset 3	Unset
4	Preset 4	Unset

 : Set preset, click this button to set a preset.


 : Delete preset, click the  button to delete the preset position if you do not want it, Enable status will go back to Unset.

: Call, click this button, the camera will turn to the preset position you have chosen.


How to set preset

1. Click the directional arrows on the pan/tilt wheel to turn the camera lens.
2. when it points to the position you prefer, choose Preset 1(highlighted in yellow color), then click the  button to record the preset position, Enable status will become Set.
3. When you need to set another preset, repeat the above steps, and choose Preset 2.
4. If you want the camera to turn to the preset you already set, choose the Preset Point Name, then click the  button.


➤ Cruise Path

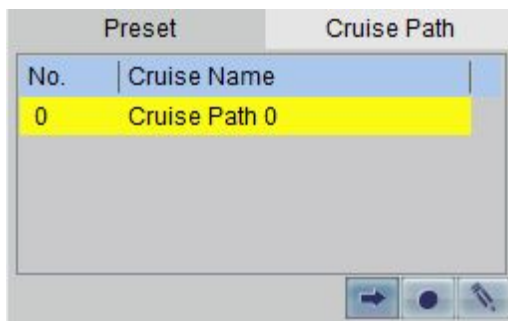

1. Choose **Cruise Path 0** and go to  to enter the **Cruise Setup** page.
2. Choose **Cruise Point 1** and go to **Cruise Point Setup**.

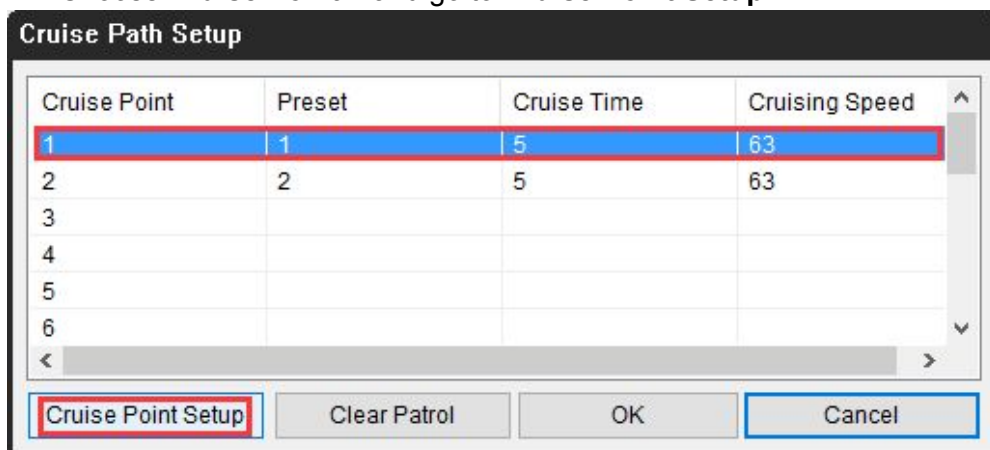

3. Choose the **Preset** you have set, input **Cruise Time** (how long it will stay when the camera moves to a preset point, unit: second) and **Cruising**

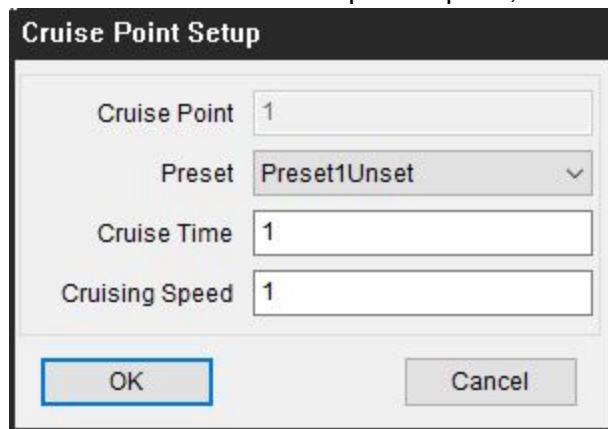

The 'Cruise Point Setup' dialog box contains the following fields and controls:

- Cruise Point:** A text input field containing the value '1'.
- Preset:** A dropdown menu showing 'Preset1Unset'.
- Cruise Time:** A text input field containing the value '1'.
- Cruising Speed:** A text input field containing the value '1'.
- Buttons:** 'OK' and 'Cancel' buttons at the bottom.


Speed.

4. Configure other **Cruise Point** according to your need.
5. Click **OK** to save and then click  to run the preset point. Click  to stop cruise.

3.2 Local Settings

Click the  on the upper right corner to open Local Settings which contains **General**, **Record Settings** and **Transcode**. Users can check and modify the video download path, recording settings and transcode the video file etc.

3.2.1 Local Settings > General

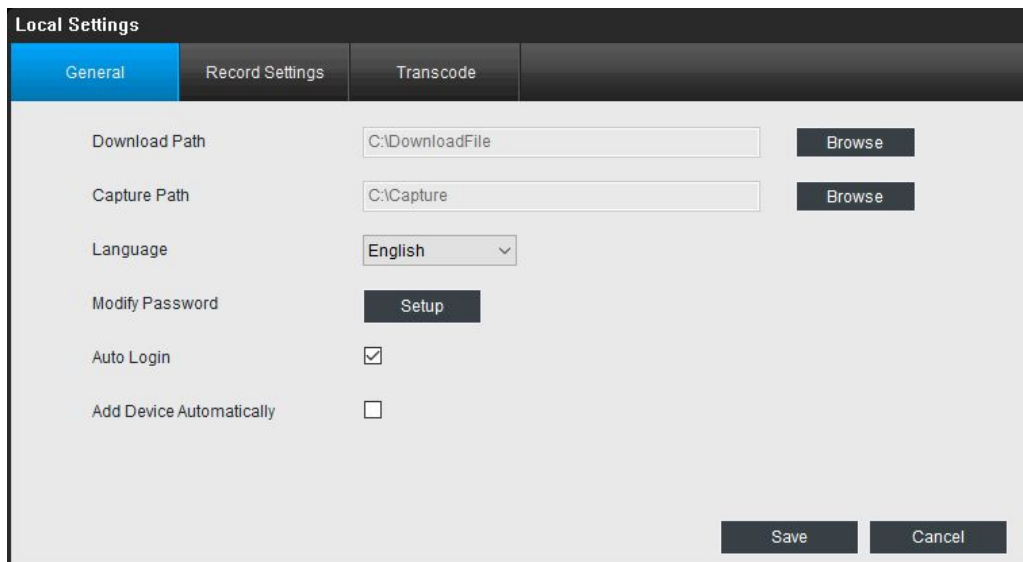

The 'Local Settings' window has three tabs: 'General' (selected), 'Record Settings', and 'Transcode'. The 'General' tab contains the following settings:

- Download Path:** Text input field with 'C:\DownloadFile' and a 'Browse' button.
- Capture Path:** Text input field with 'C:\Capture' and a 'Browse' button.
- Language:** Dropdown menu set to 'English'.
- Modify Password:** A 'Setup' button.
- Auto Login:** A checked checkbox.
- Add Device Automatically:** An unchecked checkbox.
- Buttons:** 'Save' and 'Cancel' buttons at the bottom right.

- **Download Path:** Where Reolink will save footage that you've downloaded from the Camera. Click Browse to choose another path on your computer if needed.
- **Capture Path:** Where Reolink will save still images captured using the snapshot function. Click Browse to choose another path on your computer if needed.
- **Language:** Select the language you want to Reolink to display.
- **Modify Password:** Change the password to login the Reolink client software. There is no password by default.
- **Auto Login:** whether permission to login the Reolink will be asked or not when launching the client software. It is suggested to check it as default.
- **Add Device Automatically:** allow or not allow Reolink to detect and add camera on the same network automatically.

3.2.2 Local Settings > Record Settings


The screenshot shows the 'Local Settings' window with the 'Record Settings' tab selected. The settings are as follows:

Setting	Value	Action
Record Path	C:\RecordFile	Browse
Recording file duration(1min~10mins)	5	
Hard disk space warning (MB)	1024	
Video recording folder size (GB)	☐ 10	
Record Schedule		Set
Stream Type	Clear	
Post-record	15 Seconds	

Buttons: Save, Cancel

- **Record Path:** Where Reolink will save recordings if you select Record from the Preview screen. Click Browse to choose another path on your computer if needed.
- **Recording file duration:** set the duration every record will have.
- **Hard disk space warning:** set the free space when Reolink will warn you.
- **Video recording folder size:** set the size of the folder which stores the recorded file. The minimum size is 10GB.
- **Record schedule:** click Set to enter the record schedule settings. Click the grid box to change the schedule type (Normal, Motion and None). If you want to

select a large area, click the schedule type to select it, then press the left-click button on the mouse and move it to select a period of time.

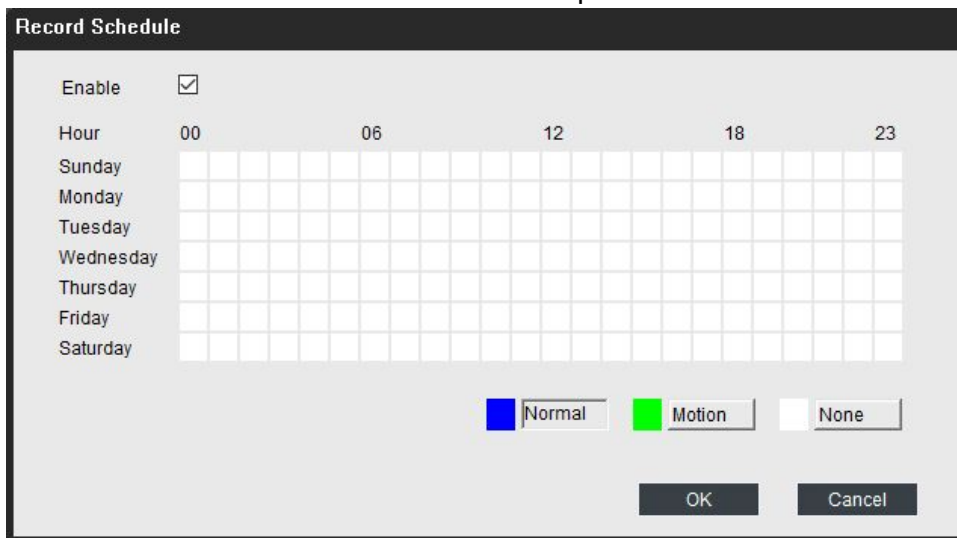

The 'Record Schedule' dialog box features an 'Enable' checkbox which is checked. Below it, a grid shows the days of the week (Sunday through Saturday) and time intervals (00, 06, 12, 18, 23). At the bottom, there are three radio buttons for recording modes: 'Normal' (selected, blue), 'Motion' (green), and 'None' (white). 'OK' and 'Cancel' buttons are at the bottom right.

Normal: it means the camera will constantly record during this time.

Motion: it means the camera will only record when motion is detected during this time.


None: it means the camera will not record during this time.

- **Stream Type:** choose the stream type for the recorded file, it includes Clear, Balanced and Fluent.
- **Post-record:** set the time of post-record when recording triggered by motion detect.

Click **OK** to save and enable the settings.

3.2.3 Local Settings > Transcode

On this page, users can transcode the H.264 file to AVI file.

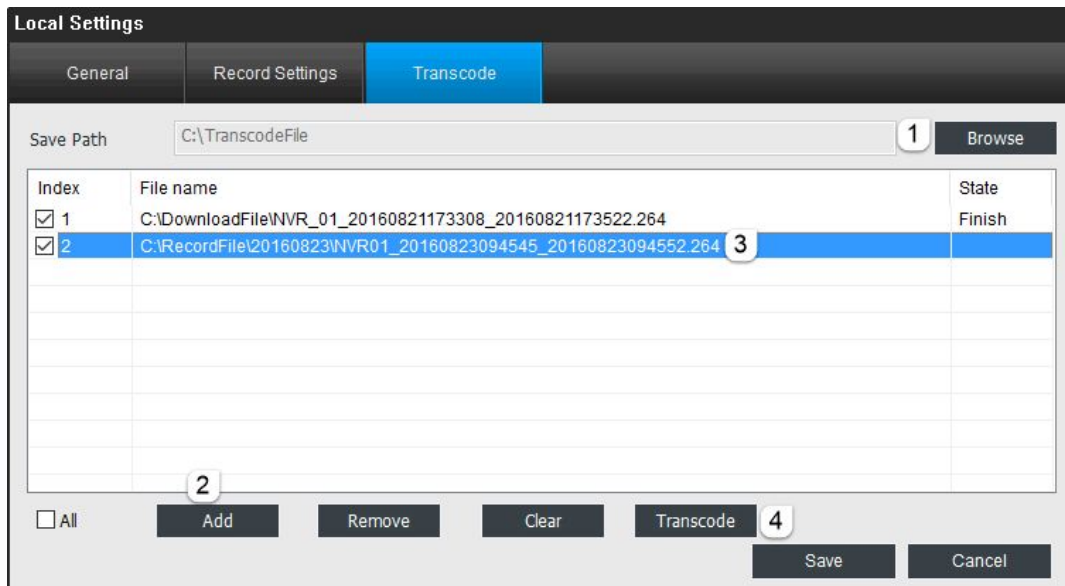

How to transcode the video file


1. Click **Browse** to select the save path for the transcoded file.
2. Click **Add** to add the file which you want to transcode to AVI format.
3. Choose the file, then click **Transcode**, it will show **Start** or **Finish** under **Status**.
Remove: Remove the selected file from the box.
Clear: Remove all the files in the box, no matter it is selected or not.

3.3 Playback

Under this menu, you can playback the recorded video both on your computer and the built-in SD card.

3.3.1 Local Playback


Click the Playback button and go to Local playback. On this page, you can play the recorded video saved on your computer.

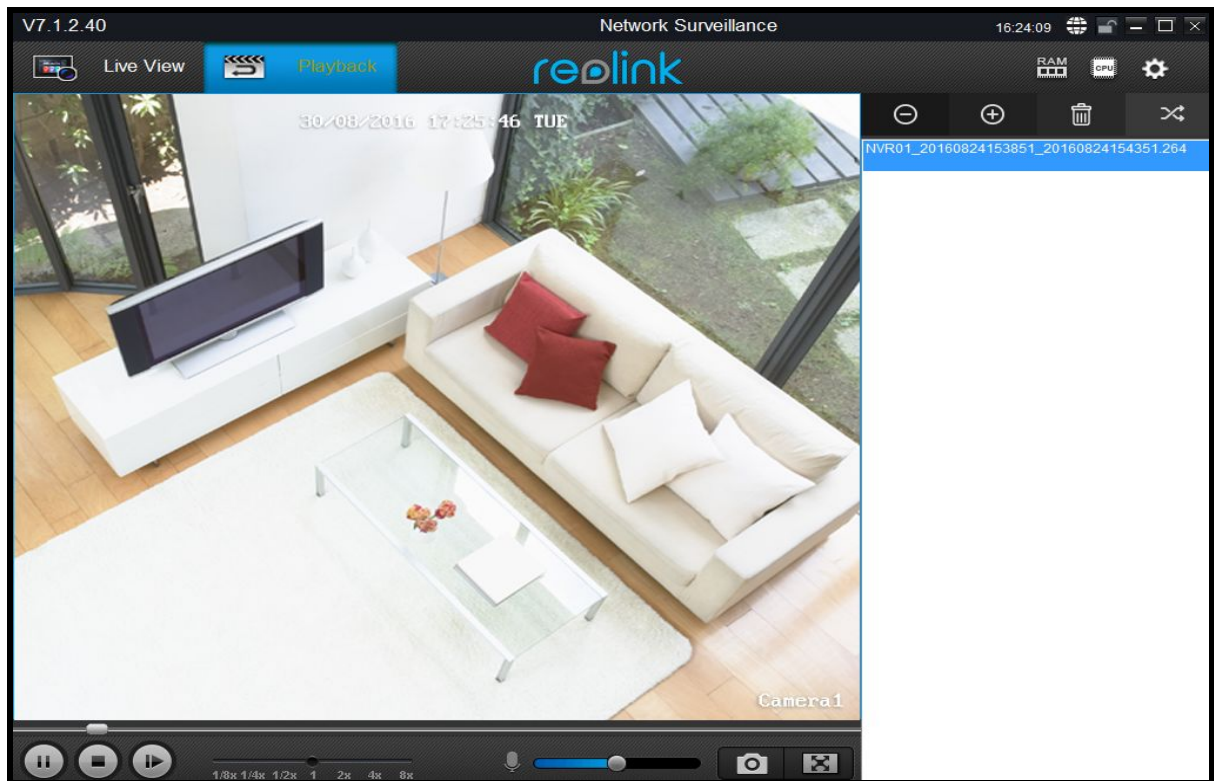

- Click the  button to choose a file saved on your computer to play. The video recorded by the camera has a default path which can be found under **Local Settings > General**.
- Click the  button to remove the selected file from the list.
- Click the  button to delete the selected file from the list and your computer.
- Click the  button to choose the play mode among single play, single cycle, order play and loop play.
- Click  to choose the playing speed.

3.3.2 Remote Playback

Click the Playback button and go to Remote Playback. On this page, you can play the recorded video saved on the SD card.

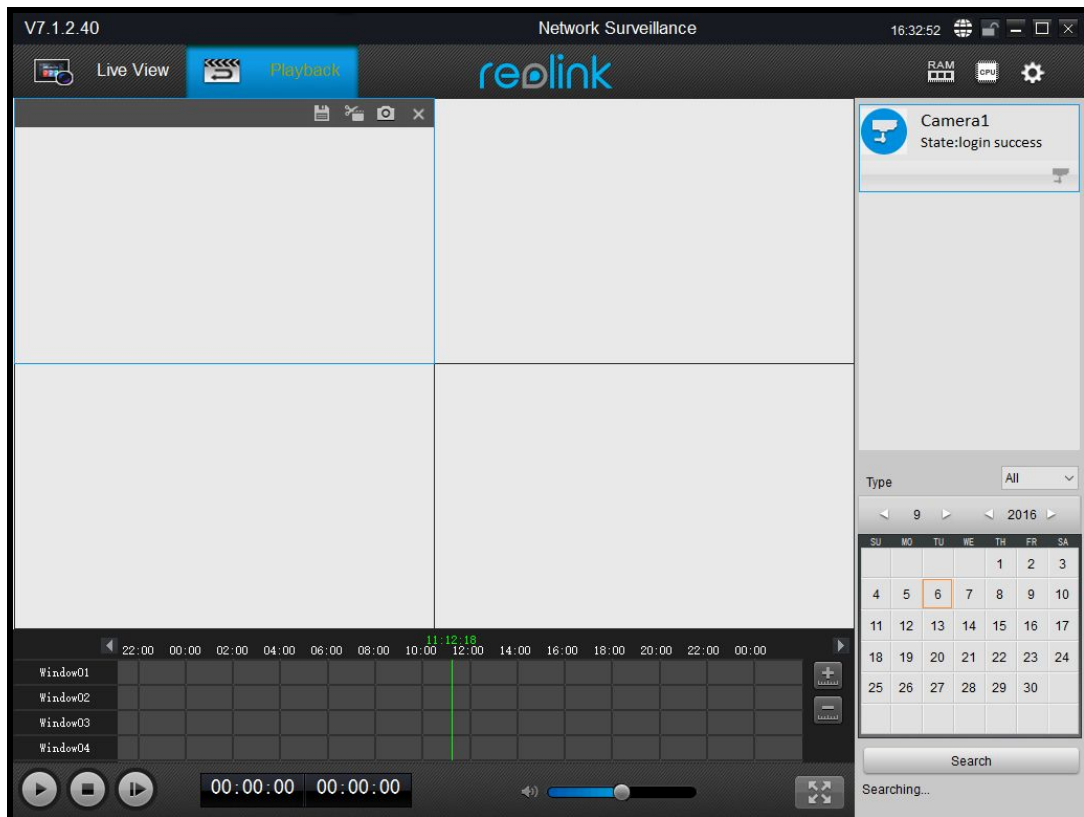


- : Click to download the video file from SD card.
- : Click to cut some specific parts of the video and download it.
- : Click to take a snap shot.

How to play back the video

1. Click on the camera whose video you want to check under Device List.
2. Click on the date when the video was recorded.
3. Click the  button to show time in detailed hours and minutes, click the left arrow or the right arrow to choose the time.
4. The recorded video will show in blue color, click on the segment where you want to play and hit the  button to play.


How to download video from SD card

1. Click the  button.
2. Choose the video you want and click on the download button.

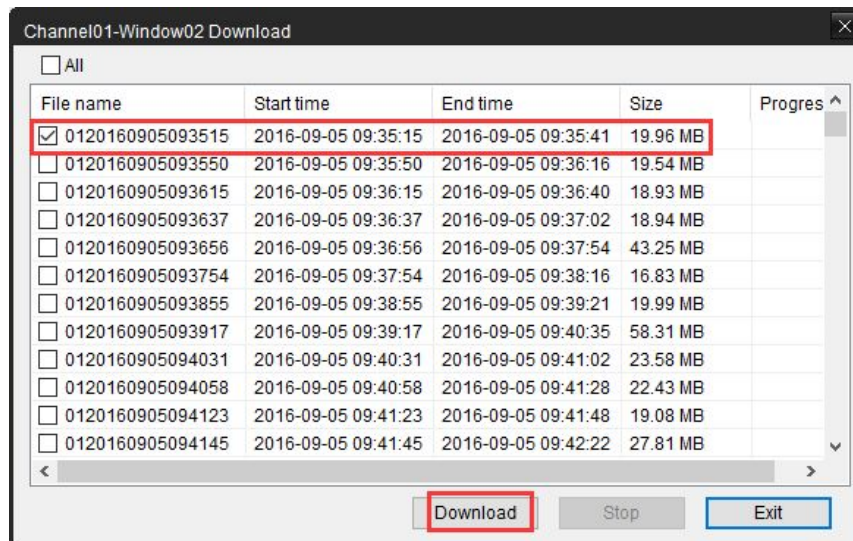

How to download some specific parts of the video


1. Click the  button.
2. Drag the scissors to choose the start time and end time of the video clip you would like. **00:23:05 01:26:41** indicates the start time and end time of the selected video.

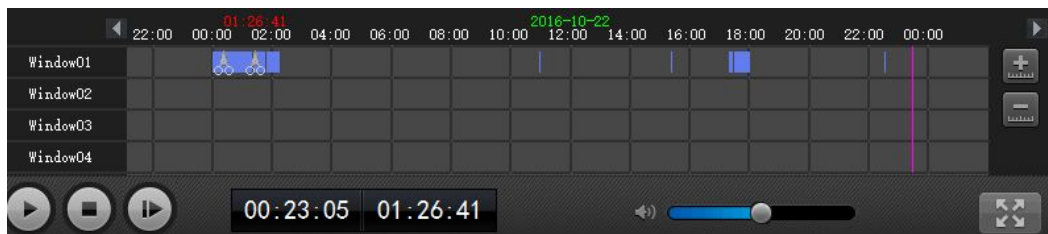

3. Click the  button to download the selected video clip.

Chapter 4 Camera Configuration

Under the camera listed in Camera List, you can refresh the camera, start or stop live view and configure device settings, edit or delete device. This chapter will mainly introduce how to configure Device Settings.

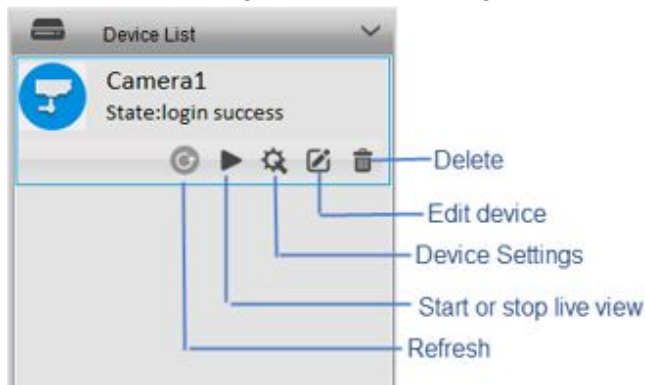

- **State:** It shows the current status of the camera, whether it is login success or login failed.
- **Refresh:** Click this button to refresh the camera which will make another attempt to login. This icon is available only when camera status is login failed.
- **Edit:** Click to edit the login information of the camera.
- **Delete:** Delete the camera from Camera List.


Device Settings

Click the  button to enter Device Settings page.



4.1 Device Settings > Display

Click **OSD** under **Display**, users can modify the display info of the camera on this page.

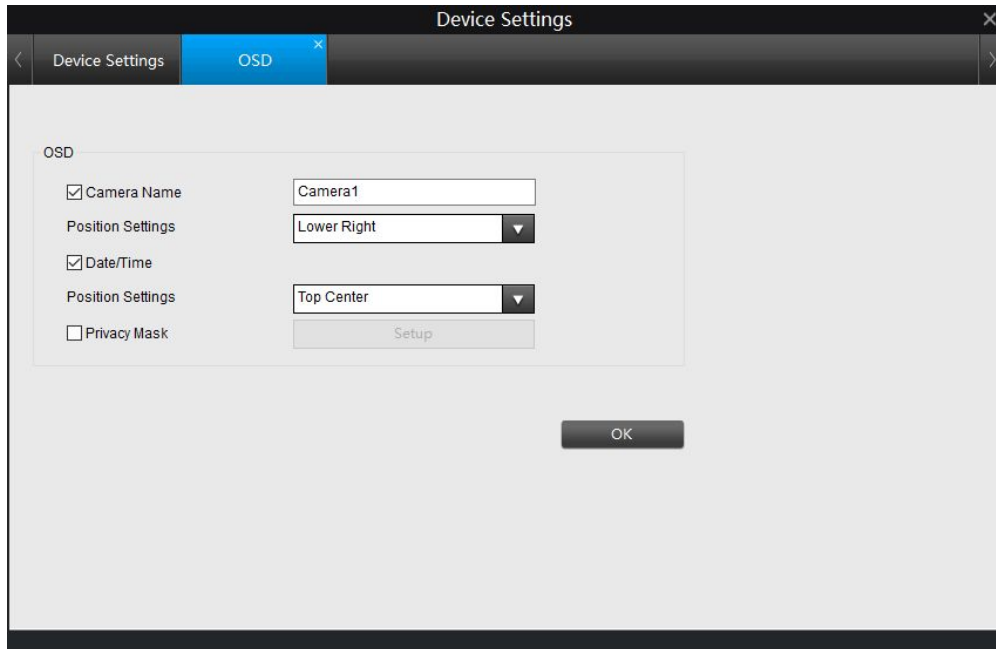


The screenshot shows a web interface titled "Device Settings" with a sub-tab "OSD". The "OSD" section contains the following settings:

- ☒ **Camera Name**: A text input field containing "Camera1".
- Position Settings**: A dropdown menu showing "Lower Right".
- ☒ **Date/Time**: A text input field containing "Top Center".
- Position Settings**: A dropdown menu showing "Top Center".
- ☐ **Privacy Mask**: A checkbox that is currently unchecked.
- Setup**: A button located below the "Privacy Mask" checkbox.
- OK**: A button located at the bottom right of the "OSD" section.

- **Camera Name**: Enable or Disable channel name, you may also rename the camera here.
- **Position Settings**: Choose where to display the **Camera Name** including upper left, lower left, upper right, lower right, top center or bottom center.
- **Date/Time**: Enable or disable to show the date and time on the screen.
- **Position Settings**: Choose where to display the time including upper left, lower left, upper right, lower right, top center or bottom center
- **Privacy Mask**: Turns on/off the masking function.

How to set up Mask

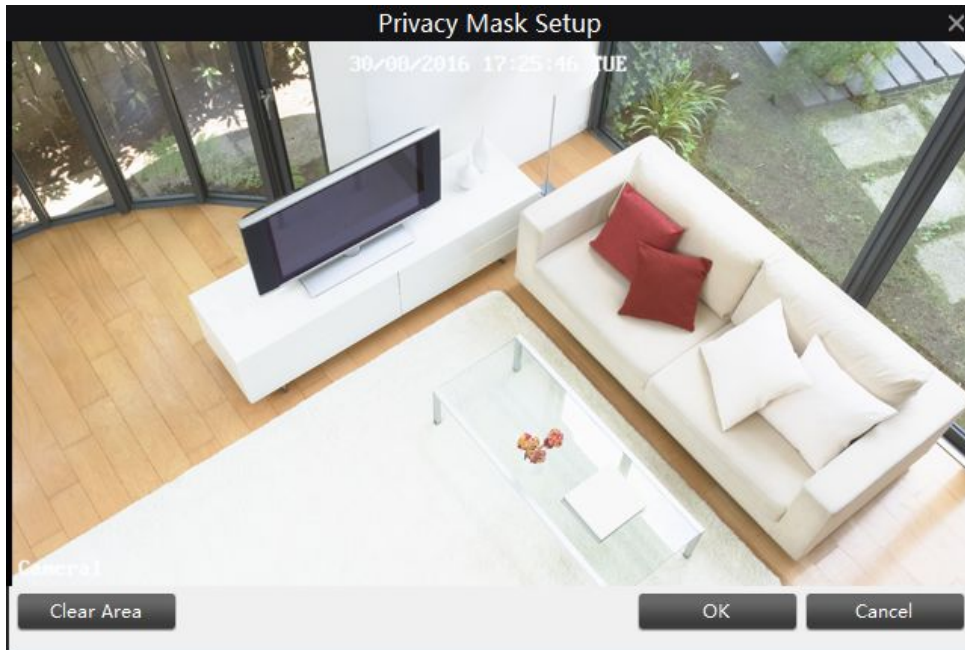

1. Check the box **Privacy Mask** to enable it, then click **Setup**.
2. Move the cursor to where you want to cover with a mask, press the left-click button on the mouse and move it to select the area. Click **Clear** to cancel the area you just selected.
3. Click **OK** to save the settings.


NOTE: 4 masks are the maximum areas you can set for one camera. And it Will affect recordings.

4.2 Device Settings > Recording

Users can modify parameters for different stream type (Clear and Fluent), option and schedule settings for the SD card.

4.2.1 Recording > Encode

It allows you to alter and customize how the camera records footage and “encodes” the files, such as **Resolution, Frame Rate, Maximum Bitrate and H.264 profile**.

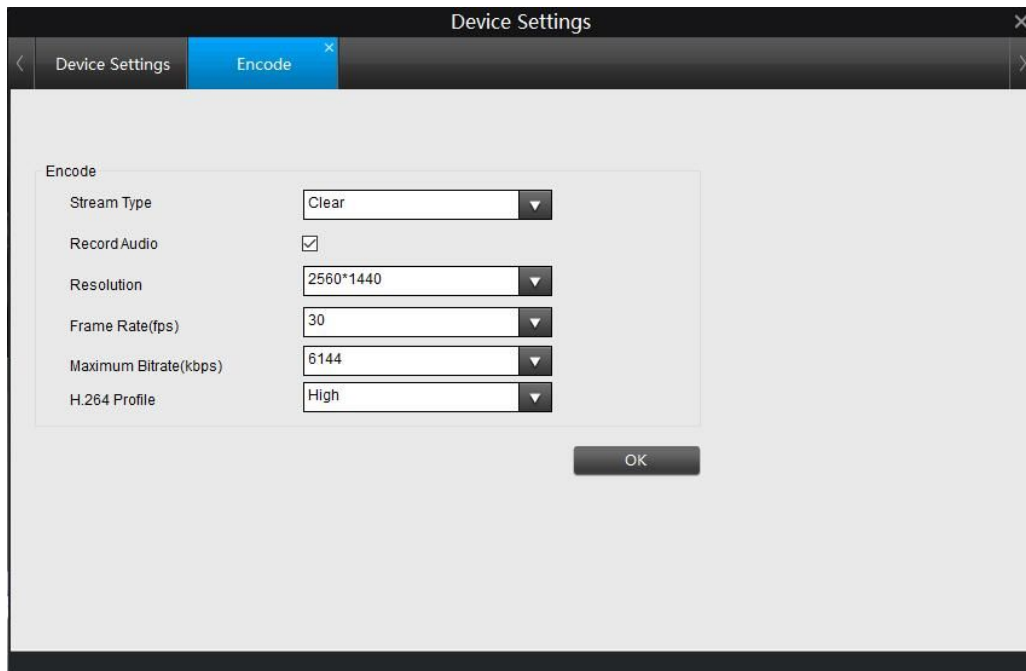


- **Stream Type:** choose the stream type you want to edit.
 - **Clear(Main-Stream):** the video feed that the Camera will record and display. This is the higher-quality stream.
 - **Fluent(Sub-Stream):** the video stream that the Camera will send to remote devices via a network or the Internet. It is the lower-quality stream as a reduction in video size makes it easier to send over a network.
- **Record Audio:** Check to enable recording with audio, otherwise, there will be no audio for the recorded file.
- **Resolution:** Choose the resolution for the selected stream type.
- **Frame Rate(fps):** Choose the Frame Type for the selected stream type.
- **Maximum Bitrate(kbps):** Choose the bitrate for the selected stream type. The higher the bitrate is, the better quality the recording will be, and the more space each recording will take up on the hard disk.
- **H.264 Profile:** set the H.264 profile to be **Baseline**, **Main** or **High**.

Note:

- Both the main-stream and the sub-stream are always operating - in fact, the sub-stream forms part of the main-stream. The options will affect the output quality of each stream, but won't change which one is being used in different circumstances.
- To enable audio in live view or recording, make sure Record Audio is checked.

4.2.2 Recording > Option

The **Option** page displays the recording settings to SD card.

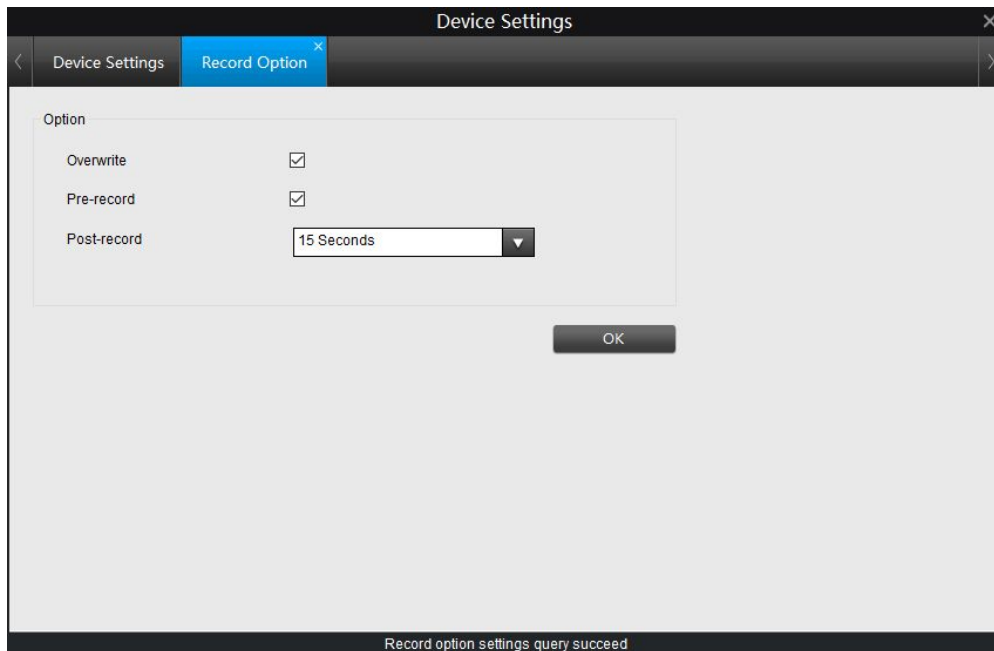

- **Overwrite:** Enable or Disable the camera to record over the oldest files on your SD card when it is full.
- **Pre-record:** Enable or Disable the camera to record for 5-8 seconds before an event occurs.
- **Post-record:** How long after an event occurs that the camera will continue to record.


Note:

This option will only be available when SD card has been inserted.

4.2.3 Recording > Schedule

This page allows you to set the recording schedule of the SD card. Click the grid box to choose different schedule type.

If you want to select a large area, click the schedule type to select it, then press the left-click button on the mouse and move it to select a period of time.

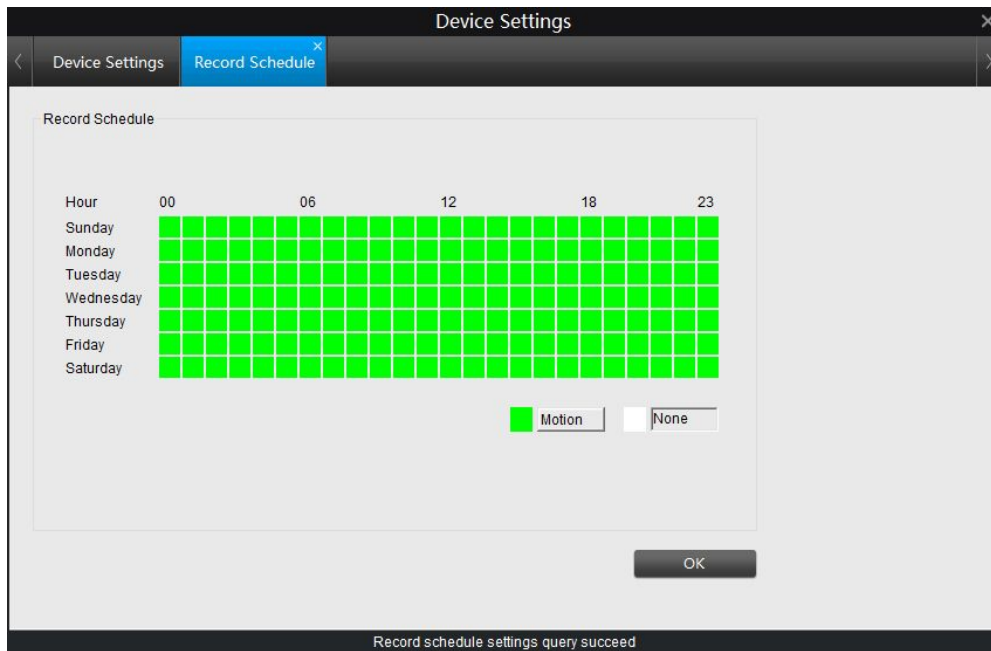

- **Motion:** SD card will start to record when motion is detected during this time.
- **None:** SD card will not record even when motion is detected during this time.

Note:

- This option will only be available when SD card has been inserted.
- SD card can only store Motion Detection alarm, it doesn't support continuous recording.

4.3 Device Settings > Network

Under Network, there are 4 sub menus including **General**, **Advanced**, **Status** and **Wi-Fi Settings**, you may check and configure the network parameters of the camera.

4.3.1 Network > General

On this page, you can configure the network parameters of the camera and check the MAC address.

The screenshot shows the 'Device Settings' window with the 'Network General' tab selected. The 'General' section contains the following fields:


- Network Access:** A dropdown menu set to 'Static'.
- IP Address:** A text field containing '192 . 168 . 10 . 43'.
- Subnet Mask:** A text field containing '255 . 255 . 255 . 0'.
- Gateway:** A text field containing '192 . 168 . 10 . 1'.
- DNS Settings:** Two radio buttons, 'Auto DNS' (unselected) and 'Static DNS' (selected).
- Preferred DNS:** A text field containing '192 . 168 . 10 . 1'.
- Alternate DNS:** A text field containing '192 . 168 . 10 . 1'.
- MacAddr:** A text field containing 'EC:71:DB:E9:5B:D4'.

An 'OK' button is located at the bottom right of the settings area. A status bar at the very bottom of the window displays the message 'Network general settings query succeed'.

- **Network Access:** select how you want the camera to get an IP address.
 - **DHCP:** Select this option when a DHCP server is installed on the network, an IP address will be automatically issued. This is the default way of the camera.
 - **Static:** Select this option when a fixed IP address is set. It is suggested to do a IP reservation on your router for the camera in order to avoid IP conflict.
- **IP Address:** enter a fixed IP address for the camera in dotted-decimal notation.
- **Subnet Mask:** Enter a subnet mask in dotted-decimal notation.
- **Gateway:** Enter a default gateway in dotted-decimal notation.
- **Preferred DNS:** Enter a DNS address in dotted-decimal notation.
- **Alternate DNS:** Enter a DNS address in dotted-decimal notation
- **MAC Addr:** Displays the MAC address of the camera, the MAC address is read-only.

Click **OK** to save and enable the settings.

4.3.2 Network Advanced

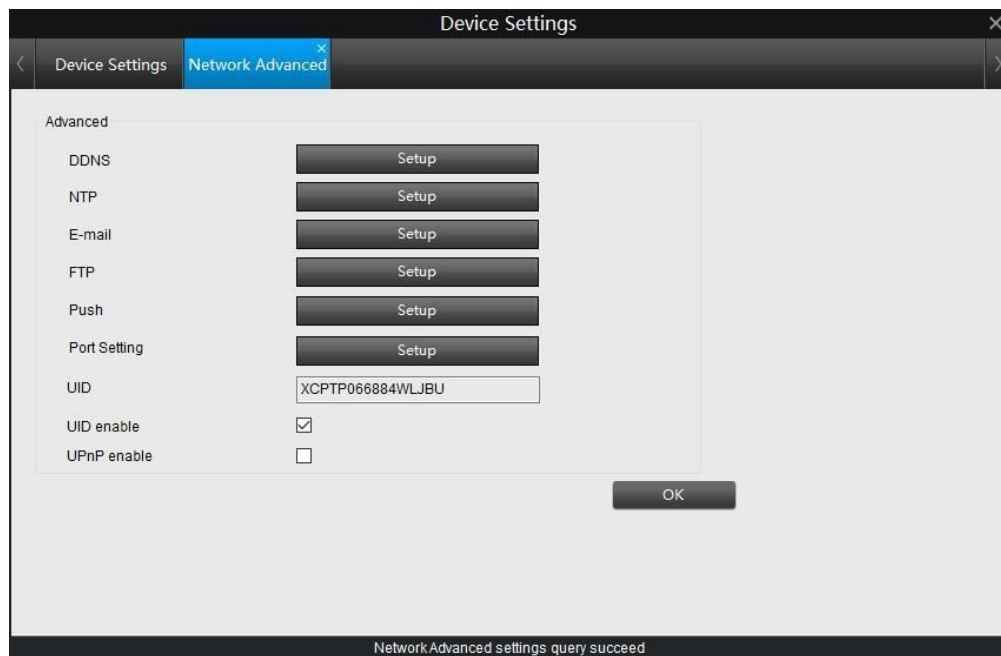

- **DDNS:** Configure the Camera to automatically update a dynamic DNS service. If you want to remotely access the Camera via the Internet, you'll probably need to configure a DDNS account. For detailed setup, please refer to [DDNS Setup](#).
 - **NTP:** Network Time Protocol. If you've got the Camera connected to the Internet, you can have it automatically sync time with an online server. For detailed setup, please refer to [NTP Setup](#).
 - **E-mail:** Setup the email account for the camera to send and receive image file or video file. For detailed setup, please refer to [Email Setup](#).
 - **FTP:** Setup the FTP server which the camera will upload its video or picture to. For detailed setup, please refer to [FTP Setup](#).
 - **Push:** Enable/disable Push Notification and setup its schedule.
 - **Port Settings:** Displays the port of the camera, users can change the port value here. For more information, please refer to [Port Settings](#).
 - **UID:** Displays the UID code of the camera. The UID is read-only.
 - **UID enable:** Enable or disable UID.
 - **UPnP enable:** Enable or disable UPnP.
- Click **OK** to save and enable settings.

DDNS Setup

DDNS allows users to access the camera remotely via an URL address which will automatically synchronize you WAN IP address once configured. Click the **Setup** button next to DDNS to enter the DDNS setup page.

Device Settings

Device Settings Network Advanced DDNS

DDNS ☒

DDNS Server Type DynDNS

Server Domain Name

User Name

Password

Confirm Password

OK

DDNS settings query succeed

Check the box to enable DDNS.

- **DDNS Server Type:** Choose the DDNS server, the camera current supports NO-IP and DynDNS.
- **Server Domain Name:** Enter the hostname that you set up in your DDNS service. This is the address you use to access your network.
- **User Name:** Enter the username you set up with your DDNS server.
- **Password:** Enter the password you set up with DDNS server.
- **Confirm Password:** Re-type the password to confirm.

Click **OK** to save and enable settings.

NOTE: If test is unsuccessful, a message will appear on screen informing you that "Update was Unsuccessful". This could mean that there's a problem with your network setup, or there's a problem with the DDNS Account Name and Password you're using.

NTP Setup

The screenshot shows a 'Device Settings' window with three tabs: 'Device Settings', 'Network Advanced', and 'NTP'. The 'NTP' tab is selected and highlighted in blue. Inside the 'NTP' tab, there are four configuration fields: 'NTP Server' with a dropdown menu showing 'pool.ntp.org', 'NTP Port' with a text box containing '123', 'Enable Auto-Synchronize' with a checked checkbox, and 'Synchronize Every' with a text box containing '1440' followed by the unit 'Minutes' and a range '(60-65535)'. At the bottom of the settings area are two buttons: 'Synchronize' and 'OK'. A status bar at the very bottom of the window displays the message 'NTP settings query succeed'.

- **NTP Server:** The server you intend to use to access the current date and time. The default is pool.ntp.org.
 - **NTP Port:** The port that the NTP server uses.
 - **Enable Auto-Synchronize:** enable or disable auto-synchronization.
 - **Synchronize Every:** Set the Sync interval time.
- Click **Synchronize** to synchronize the time now, click **OK** to save and enable settings.

NOTE:

1. If you have enabled NTP - set this to the time zone where you are.
2. Some NTP servers are NOT fully compatible with DST (Daylight Savings Time). This may cause your system to double-count adding one or removing one more hour than they should, or cancel each other out. You may need to change your timezone to adjust accordingly or simply not use NTP and DST simultaneously.

Email Setup


Click the **Setup** button next to E-mail to enter the setup page.

The screenshot shows the 'Device Settings' window with the 'E-mail' tab selected. The settings are as follows:

- Enable SSL or TLS: ☒
- SMTP Server:
- SMTP Port:
- Sender Address:
- Password:
- Recipient Address 1:
- Recipient Address 2:
- Recipient Address 3:
- Attachment: (dropdown arrow)
- Picture Only: ☐
- Interval: (dropdown arrow)
- Email Schedule:
- E-mail Test:

At the bottom right is an button. A status bar at the very bottom reads 'Email settings query succeed'.

- **Enable SSL or TLS:** Whether the email server you're using requires a secure link. This is on by default and should be left on if you're using any of the preset email servers.
- **SMTP Server:** Type in the SMTP server for the sender Address. The default server is for Gmail.
- **SMTP Port:** Set the correct port number for the SMTP server you use. The default value is the port number for Gmail.
- **Sender Address:** The address you're sending the email from. Type it in the format youraddress@gmail.com (please NOTE, the email address should be your own email account).
- **Password:** The password for the Sender email account.
- **Recipient Address:** The email address you want the Camera to send emails to. You can specify up to three recipient E-mail addresses.
- **Attachment:** Select to attach picture or video when send e-mail or receive only notification(disable).
- **Picture Only:** If checked, camera will only attach a picture in the email with our any text content. This option is only available when Attachment is Attach Picture.
- **Interval:** The length of time that must elapse after the Camera sends an email alert before it will send another.
- **Email Schedule:** Setup the schedule.

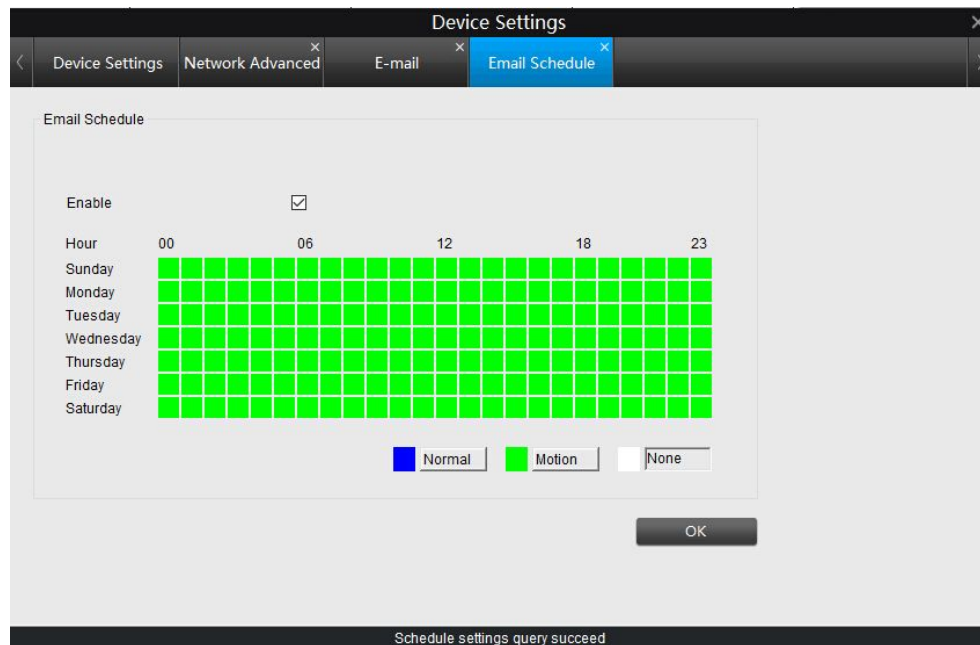

Normal: the camera will send you an email at a fixed time(interval time) during the selected time.

Motion: the camera will only send you an email when motion is triggered during the selected time.

None: the camera will not send you email during selected time.

- **E-mail Test:** Click this button to test whether the e-mail setting is successful. If test failed, please check the internet connection and the settings above. Click **OK** to save and enable settings.

FTP Setup

The recorded file can be uploaded to a FTP server. Click the **Setup** button next to FTP to enter the FTP settings.


The screenshot shows the 'Device Settings' window with the 'FTP' tab selected. The settings are as follows:

Field	Value
FTP Server	[Empty text box]
Port	21
Anonymous	☐
User Name	[Empty text box]
Password	[Empty text box]
Upload Directory	[Empty text box]
Maximum File Length(MB,10~1024)	100
File Type	Video and Picture
FTP Postpone	30 Seconds
FTP Schedule	Setup
FTP Test	FTP Test

Buttons: OK, Setup, FTP Test

Status bar: FTP settings query succeed

- **FTP server:** Type in the IP address or URL for your FTP server, and input the correct port.
- **Port:** service port of the FTP server, the default value is 21, you can modify it when necessary.
- **Anonymous:** Check this box when you FTP server does not have a username and password.
- **User Name:** Type in the username of your FTP server.
- **Password:** Type in the password for your FTP server.
- **Upload Directory:** Input the upload folder name.
- **Maximum File Length:** Set the size for the video uploaded to FTP server. The default value is 100.
- **File Type:** Select to upload picture or video to the FTP server.
- **FTP Postpone:** Set the post-record time after motion is detected. This option is Only available when File Type is Video and FTP Schedule is Motion.
- **FTP Schedule:** Set up the schedule time.

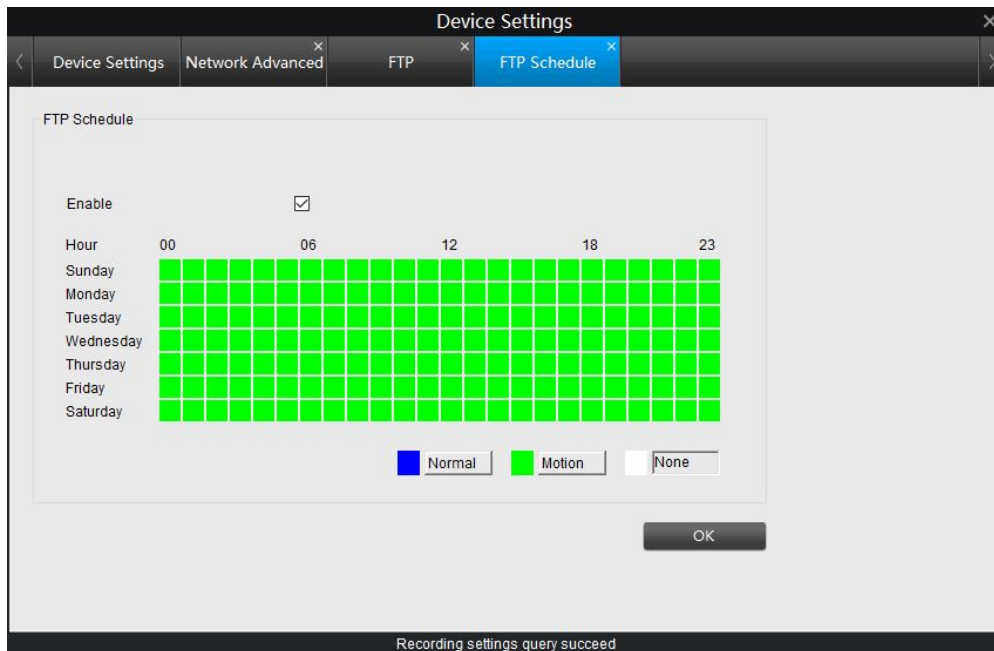

Normal: the camera will constantly record and upload to the FTP server during this time.

Motion: the camera will only record when motion is triggered and upload to the FTP server during this time.

None: the camera will not record and upload to the FTP server during this time.

- **FTP Test:** Click to test whether the FTP is setup successfully. If test failed, please check your configuration and try again.
Click **OK** to save and enable settings.

Port Settings

For some remotely accessing, you may need to check or change the port settings.

The screenshot shows a 'Device Settings' window with a 'Port' tab selected. The settings are as follows:


Port Type	Value
Media Port	9000
HTTP Port	80
HTTPS port	443
RTSP port	554
RTMP port	1935
Onvif Port	8000

At the bottom of the window is an 'OK' button. Below the window, a status bar indicates 'Port settings query succeed'.

- **Media Port:** Camera will use this port to login to the Reolink client software. The default value is 9000 and you can change it.
 - **HTTP Port:** Used to login to the web interface of the camera by a web browser. The default value is 80 and you can change it.
 - **HTTPS Port:** Default value is 443 and you can change it.
 - **RTSP Port:** Used to send the streaming file to Realplayer, the default value is 554 and you can change it.
 - **RTMP Port:** Used to send the streaming file to Flash Player, the default value is 1935 and you can change it.
 - **Onvif Port:** used to add the camera to third party Onvif client software. The default value is 8000 and you can change it.
- Click **OK** to save and enable settings.


4.3.3 Network Status

This page shows the network parameters of your camera including IP address, subnet mask, gateway, preferred DNS and alternate DNS.

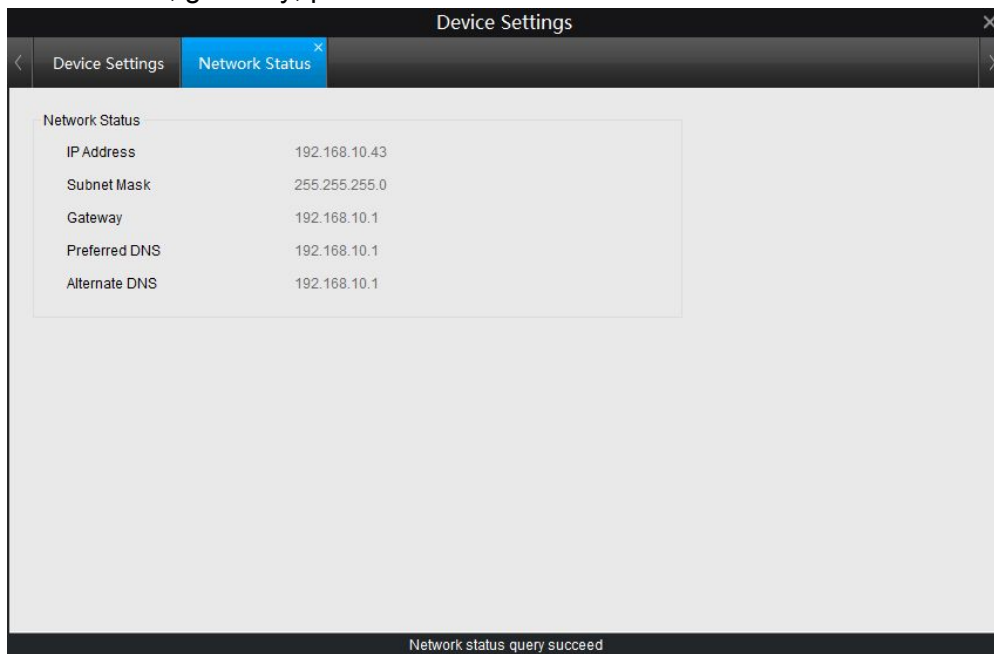

4.3.4 Wi-Fi Settings

You can configure the Wi-Fi settings and connect your camera to a wireless network on this page.

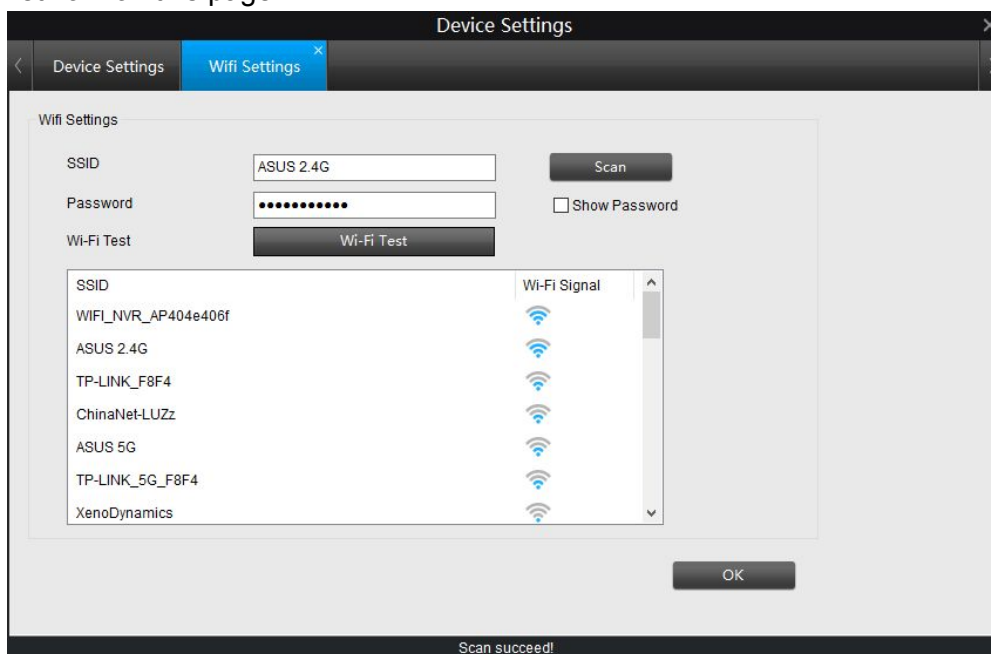

- **SSID:** Wireless Network Name, it displays the wireless network name you are connected or prepare to connect.
- **Password:** Input the Wi-Fi password of SSID you choose.
- **Show Password:** Tick to show the password.

How to connect to a wireless network

1. Click the **Scan** button, it will show all the **SSIDs** and the Wi-Fi Signal Strength.
2. Double click on the Wi-Fi network you want to Join, the **SSID** will show in the SSID field.
3. Enter the Wi-Fi password of the SSID you choose. You may click **Show Password** to display the password you entered, double check whether it is correct.
4. Click on Wi-Fi Test to test if the WIFI Setting is succeeded. If **Wi-Fi Test Succeed**, click **OK** to save the settings.
If **Wi-Fi Test Failed**, please check:
 - a) if the password is correct.
 - b) If the Antenna on Wi-Fi Camera connected properly.
 - c) if the Wi-Fi Router working properly.

Note:


1. The wireless network has to be set up by using cable network connection. After setting up successfully, you can remove the cable and use the camera via Wi-Fi

connection.

2. When changing the settings, they should always be made first in the camera and then in the wireless router. This ensures that the camera is always accessible when making changes.

4.4 Device Settings > Alarm

The camera will detect motion when there is a change in the picture. Check the Enable box to enable motion detection. you can set up the sensitivity, schedule, motion area

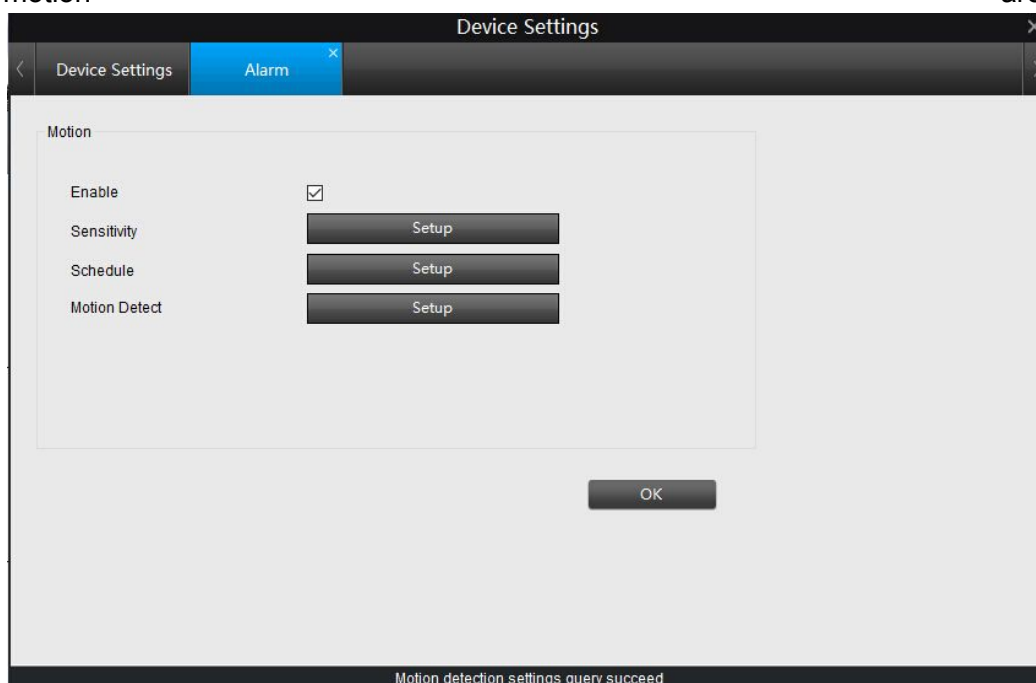

on this page.


Note:

Don't use PTZ system and motion detection simultaneously.

4.4.1 Motion > Sensitivity

It means how sensitive the camera will be to the change of the environment. Drag the slider to change the sensitivity value. The lower the number is, the more sensitive the motion detection will be, and the more frequent motion will be triggered.

Click the **Setup** button to enter the **Sensitivity** setup page.

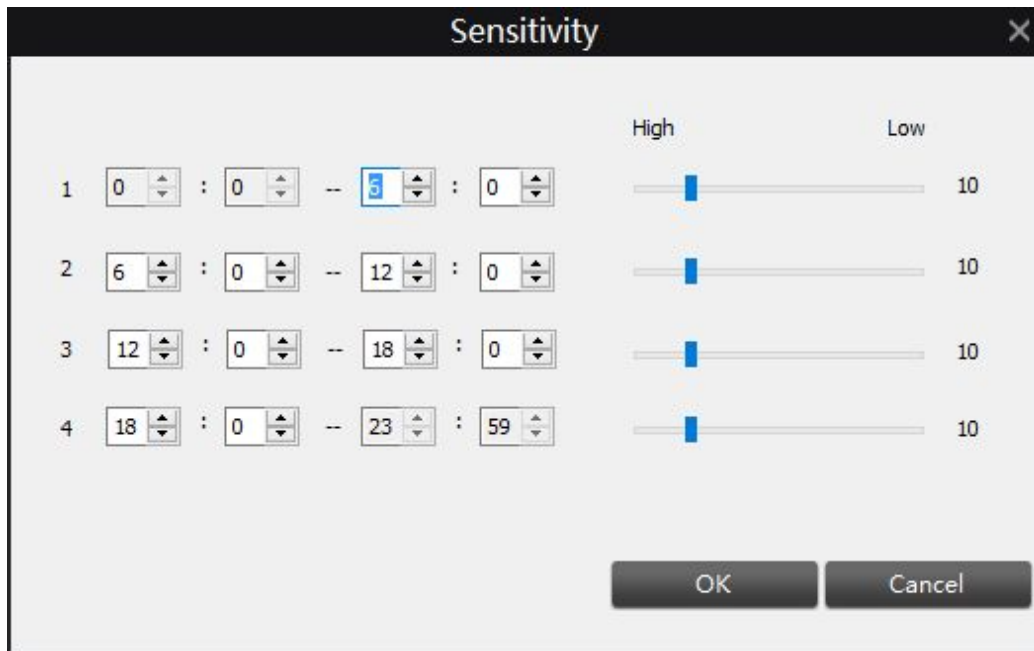

Tips:

1. The day is divided into four periods by default, you may change each period's start and end time to best match the changing lighting conditions in your location.
2. During the daytime, the light is good enough for the camera to capture the whole scenario, the sensitivity is suggested to set the values between 5–10 which will give good results.
3. During the night time, the motion detection is more sensitive, the value is suggested to set to 25-30 or even higher which will significantly avoid some fault trigger.

Note:

The motion detection will be affected by the light and weather, it is suggested that you should test your motion detection sensitivity both during the day and at night to ensure your sensitivity setting is suitable for either lighting condition.

- **False Triggers:** Setting the motion detection at high sensitivity levels (4 or lower) increases the frequency of false alarms. On the other hand, low sensitivity levels (20 or higher) increase the risk that a significant motion event (such as an intruder) will not trigger the motion detection to record.
- **Check the Motion Detection settings both during the day and night:** In low-light conditions (or when your cameras are using infrared night vision) the Camera may be more or less sensitive to motion, depending on the circumstances. The difference might be very dramatic!
- **Weather:** The weather conditions are going to affect your motion detection. Dramatic weather phenomenon such as heavy rain, strong winds, lightning and so on, may trigger the motion detection with surprising frequency. On the other hand, things like fog, mist and other obscuring kinds of weather might mask or obscure something moving to the point that the Camera fails to detect them.


How to minimize the amount of noise in your images

1. Try adjusting the Image Settings to fine-tune the brightness and contrast to get a more stable image.
2. Limit the motion sensitive area to only the areas in view that a target could be. In particular, large featureless areas in the camera's view are the ones most likely to give false triggers - turning off the motion sensitivity to any area a target cannot move in front of will help reduce false triggers.

Note: The motion detection feature will seem more sensitive at night, particularly when using low-light or active infrared cameras. We recommend that you test your motion detection sensitivity both during the day and at night to ensure your sensitivity setting is suitable for either lighting condition.

4.4.2 Motion > Schedule

You can set up the time schedule when the camera will detect motion. The red box means when motion is detected, it will trigger an alarm.

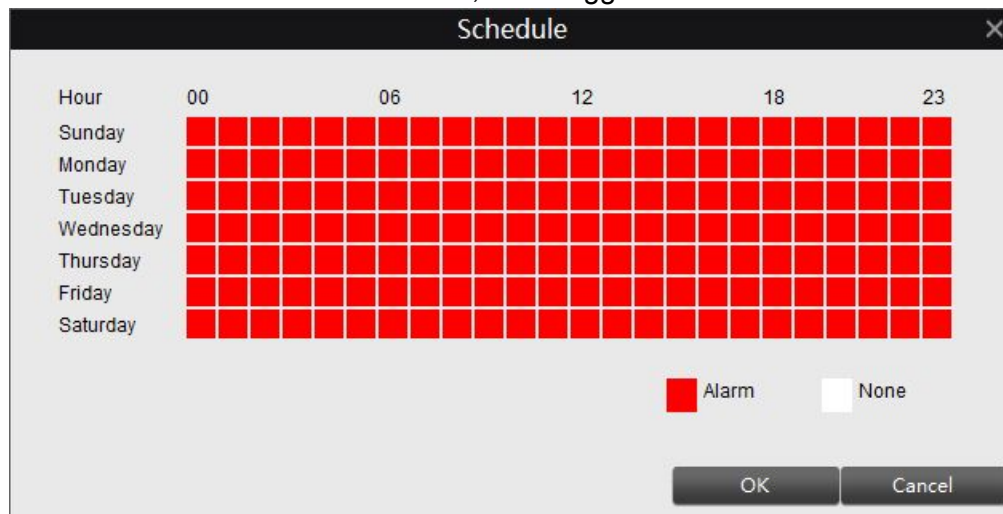


Alarm: Camera is sensitive to motion and will trigger an alarm during this period.

None: Camera is not sensitive to motion and will not trigger an alarm during this period.

4.4.3 Motion > Motion Detect

Click the **Setup** button to enter the motion detect setup page. You can set the motion detection area on this page. Areas marked by white boxes will be sensitive to motion, those not marked will not be. Click and drag the left-click button on the mouse to select or deselect the area you want.

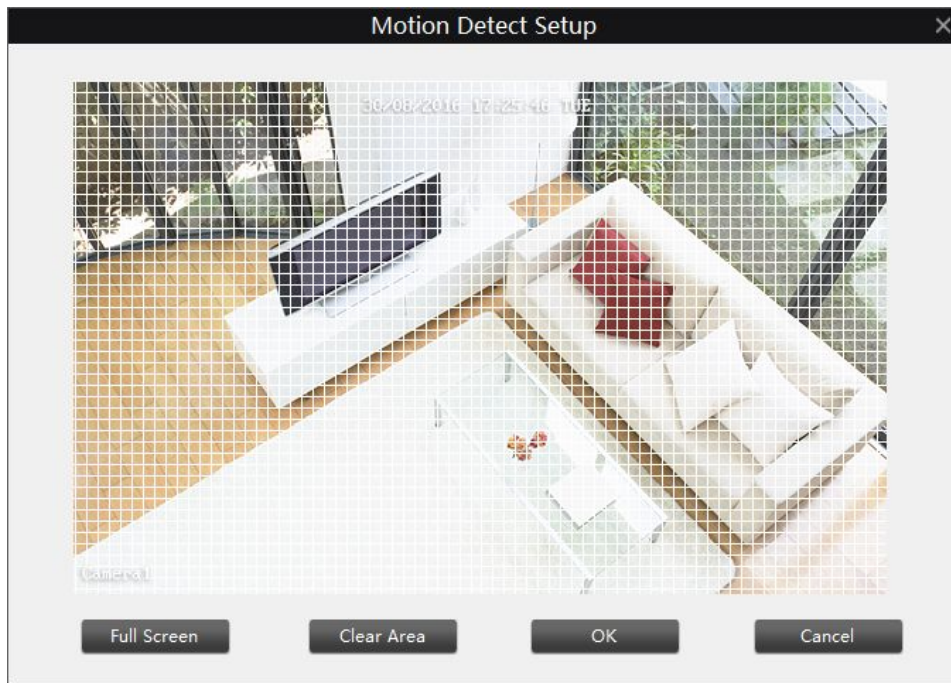

- **Full Screen:** Click to select the whole screen as the motion detection area.
- **Clear Area:** Click to clear all the motion detection area you configured.
- **OK:** Click to save the motion detection area configured.
- **Cancel:** Cancel the settings you just made.

Tips:


1. Click mouse to select and click again to deselect.
2. Click and drag the left-click button on the mouse to select or deselect certain area you want.
3. Click **OK** on the Alarm page to save and enable settings.

4.5 Device Settings > System

Under this menu, you may check the system information of the device, configure the time settings, upgrade the firmware of the camera and reboot it.

4.5.1 System > General


Under **General**, users can set up the Video Standard and time settings etc.

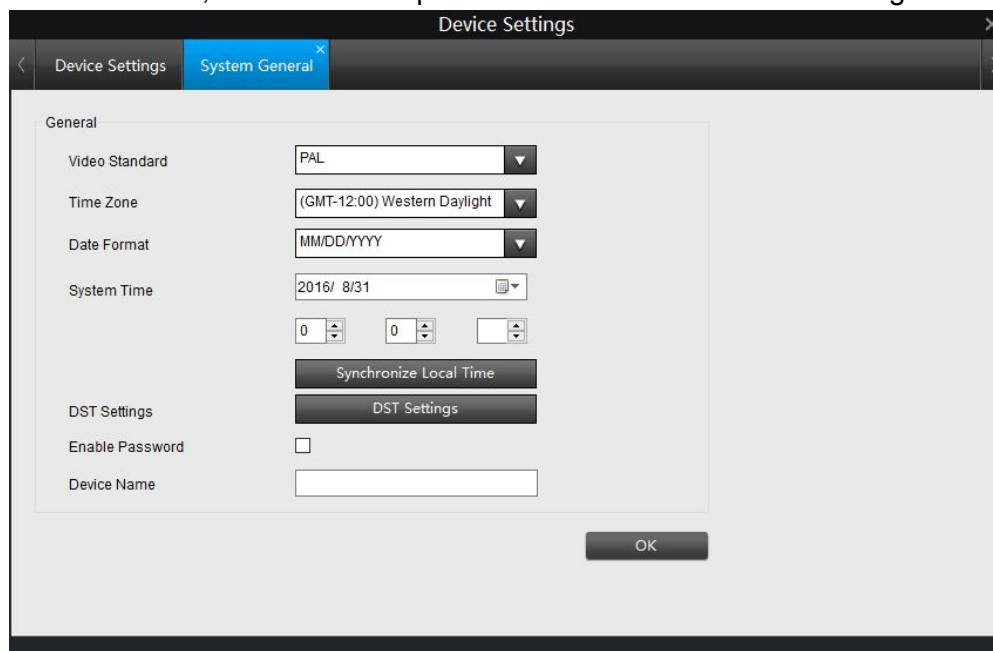

- **Video Standard:** Choose **PAL** or **NTSC** according to your area. If this is set incorrectly, the camera's picture may be black and white, flickering or similar.
 - **PAL:** used in Western Europe and Australia.
 - **NTSC:** used in the US, Canada and Japan.
- **Time Zone:** Choose the time zone where you are.
- **Date Format:** the format of the date you want the camera to show.
- **System Time:** the current time of the camera. It could be edited manually.
- **Synchronize Local Time:** Click to synchronize the camera time with local PC time.
- **DST Settings:** Turn on and set up DST if DST is applied in your area, As to how to configure it, please refer to [How to configure DST Settings](#).
- **Enable Password:** Enable or disable the password to login the camera.
- **Device Name:** Shows the name of your camera. You can modify the name here. Click **OK** to save and enable settings.

How to configure DST Settings

1. Click on DST Settings to enter the setup page.
2. Check **Enable** to enable DST Settings.
3. Choose the **offset** time (1 hour or 2 hours ahead) according to the DST policy in your area.
4. Type in the Start time and End time when DST is started or ended in your area.

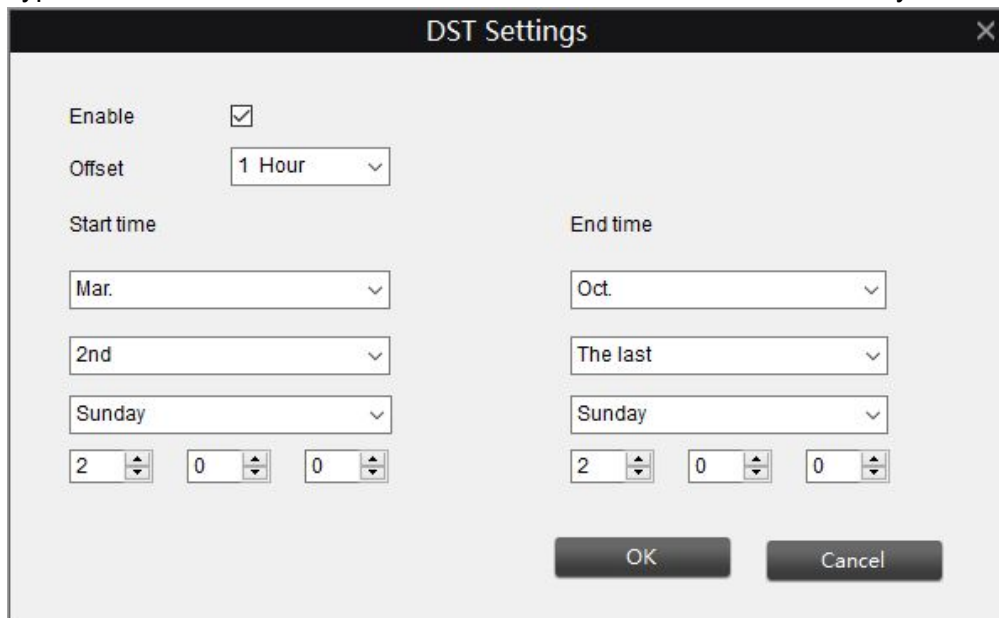


The image shows a 'DST Settings' dialog box with a title bar and a close button. It contains the following controls:

- Enable:** A checkbox that is checked.
- Offset:** A dropdown menu set to '1 Hour'.
- Start time:** Three dropdown menus for month ('Mar.'), day ('2nd'), and day of the week ('Sunday'). Below them are three spinners for hour (2), minute (0), and second (0).
- End time:** Three dropdown menus for month ('Oct.'), day ('The last'), and day of the week ('Sunday'). Below them are three spinners for hour (2), minute (0), and second (0).
- Buttons:** 'OK' and 'Cancel' buttons at the bottom right.


4.5.2 System > Information

This page shows some basic information of the camera including device name, model number and firmware version etc.

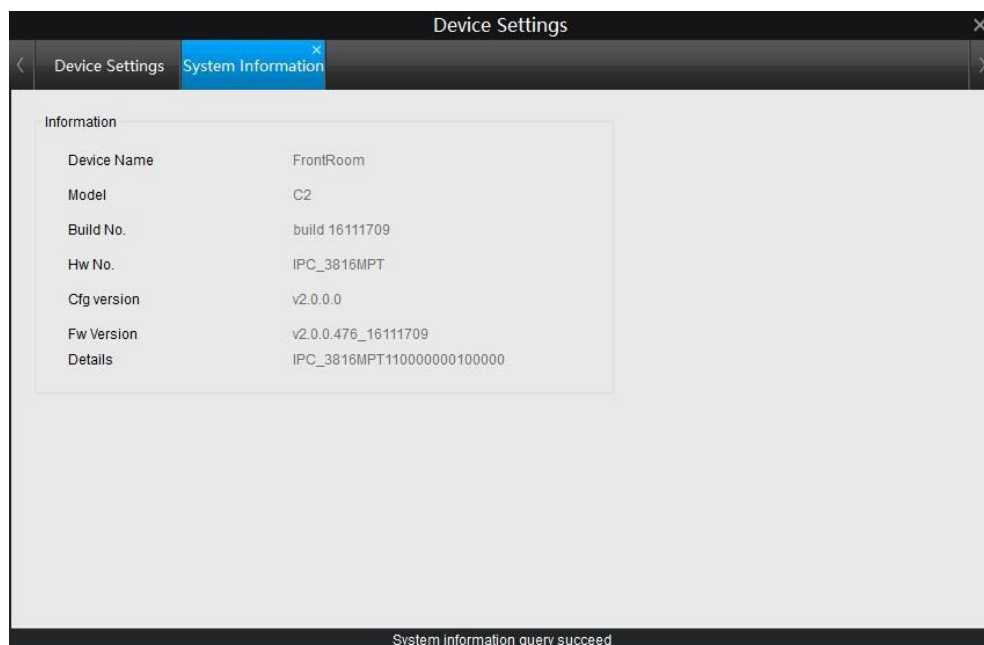

4.5.3 System > Maintenance

On this page, you can set the camera to reboot itself automatically at a certain time, reset the camera to default settings and upgrade the firmware etc.

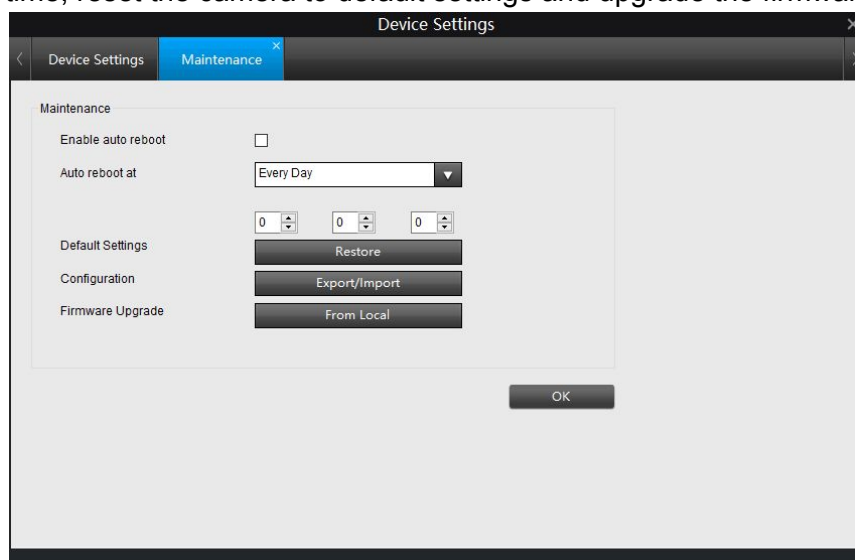


- **Enable auto reboot:** Enable or disable auto reboot of the camera.

- **Auto reboot at:** Choose when you'd like the camera to reboot.
- **Default Settings:** Click Restore to reset the camera to factory default.
- **Configuration:** Export or import the configuration file including all the settings done to the camera.
- **Firmware Upgrade:** Instructs the Camera to update its firmware.

How to upgrade firmware


1. Download the firmware from Reolink official website: <https://reolink.com/firmware/>
2. Go to Device Settings > System > Maintenance, click on From Local.
3. Click on Browse to locate the upgrading file (end with pak), click on Upgrade to upgrade the firmware.

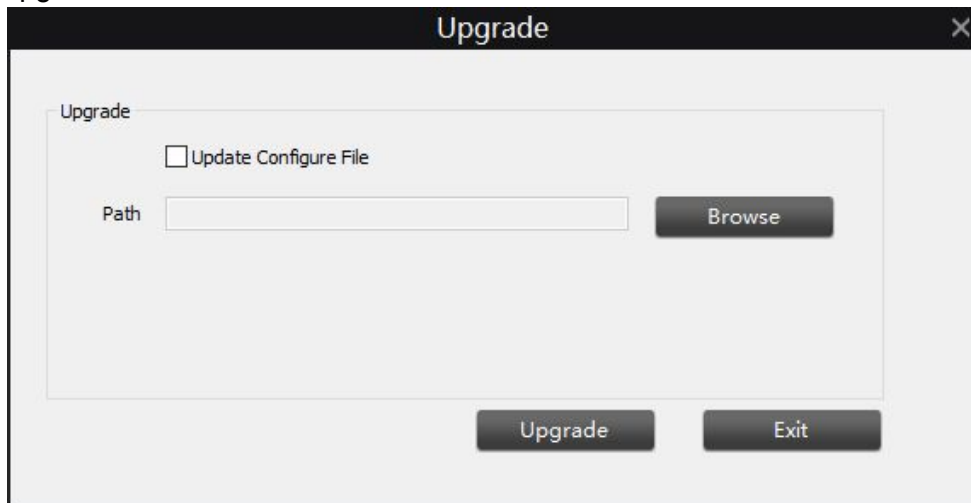

Note: It is suggested to check Update Configure File when upgrading the firmware. And the configuration set to the camera will be erased, you will need to configure the camera again.


4.5.4 System > Performance

This page shows the CPU loading for the connected Camera, bit rate and Ethernet Port Throughout.

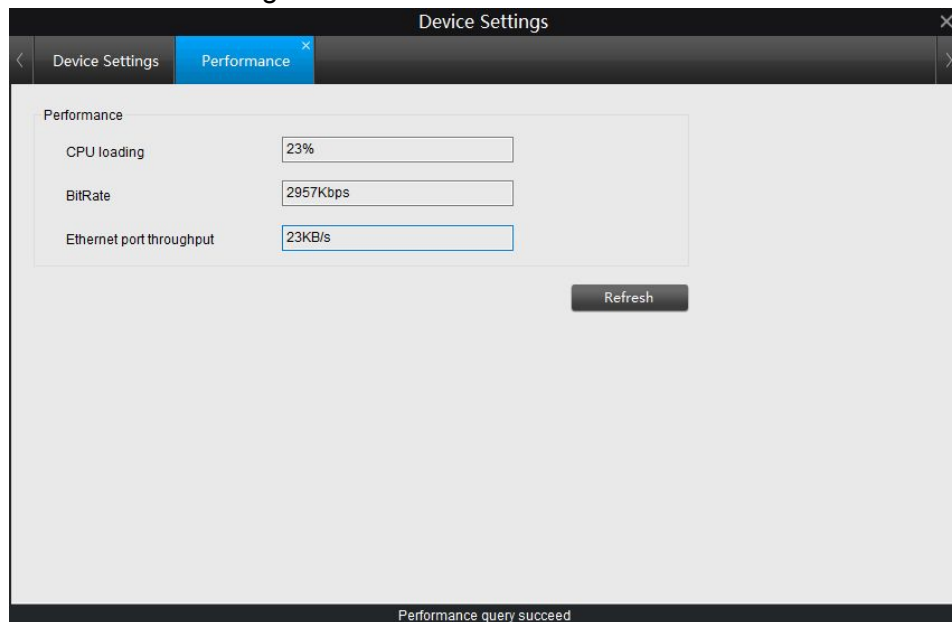


4.5.5 System > Reboot

Click the **Reboot** button on this page to restart the camera.

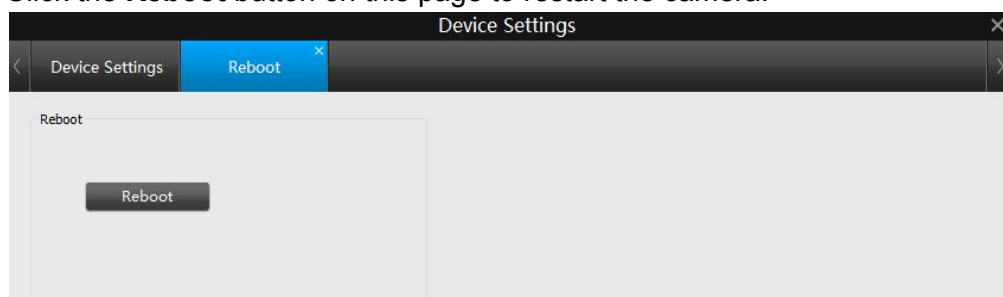

4.6 Device Settings > Device

Users can check the SD card info or format the SD card on this page.

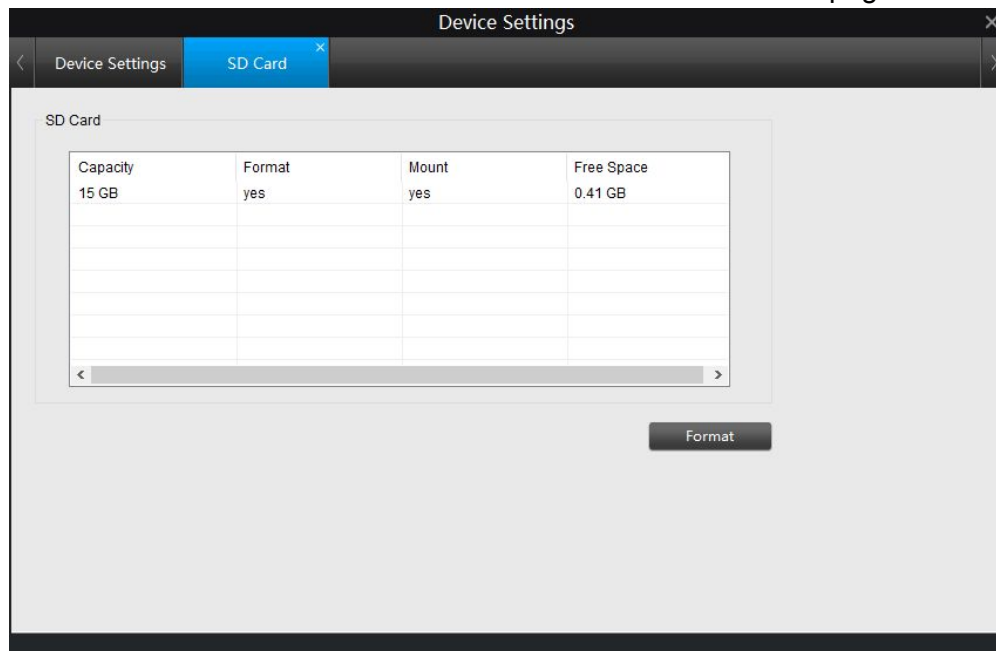

Note:


1. This option will only be available when SD card has been inserted.
2. Before insert the SD card, please power off the camera, otherwise, SD card may not be recognized by the camera.

4.7 Device Settings > User

Under this menu, you can check and modify the user information.

4.7.1 User > Online User

It shows the current users who are accessing the camera.

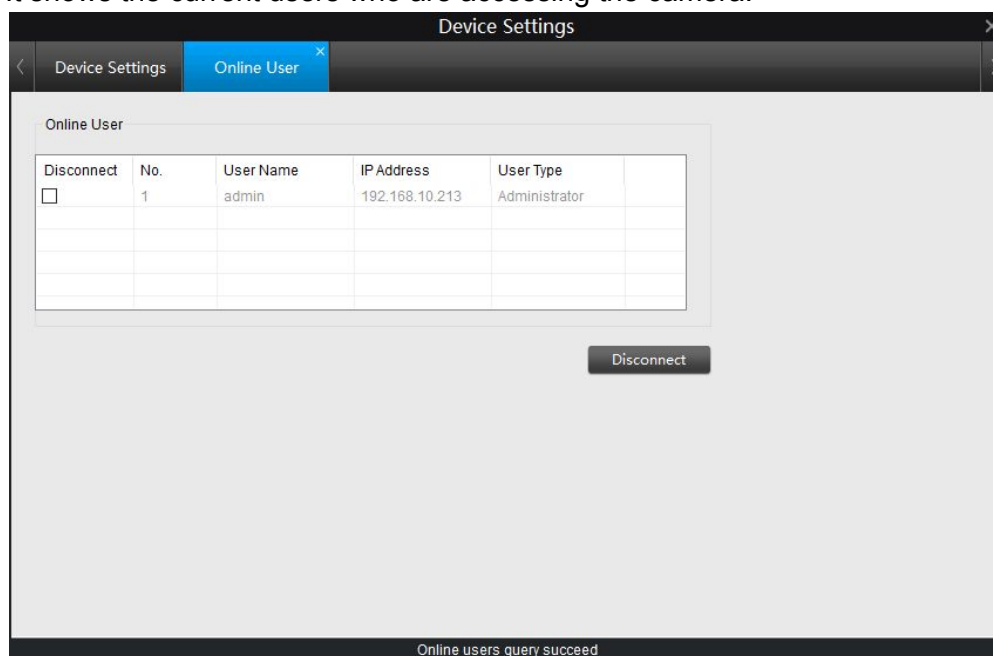

4.7.2 User > Add User

The admin account has the authority to add other users. The maximum number of users is 32.

The screenshot shows a window titled "Device Settings" with a tab labeled "Add User". Inside the window, there is a form titled "Add User" with the following fields and options:

- User Name:** A text input field.
- Enable Login Password:** A checked checkbox.
- Administrator:** An unchecked checkbox.
- Password:** A text input field.
- Confirm Password:** A text input field.

At the bottom right of the form is an "OK" button.

- **User Name:** Type in a user name.
 - **Enable Login Password:** check to enable password for the added user.
 - **Administrator:** Whether or not this account has administrator authority.
 - **Password:** Type a password for the added user.
 - **Confirm Password:** Re-type the password to confirm.
- Click **OK** to save and enable settings.

4.7.3 User > Manage User

Change the password for the User or delete user on this page.

The screenshot shows a window titled "Device Settings" with a tab labeled "Manage User". Inside the window, there is a table titled "Manage User" with the following data:


No.	User Name	User Type
1	admin	Administrator
2	guest	Common User

Below the table are two buttons: "Modify Password" and "Delete User".

At the bottom of the window, a status bar displays the message: "Users query succeed".

How to change the login password

1. Highlight the user account whose password you want to change, go to **Modify Password**.
2. Check **Enable Login Password**, enter the old password, input the new one and re-type it to confirm, then go to **OK**, it will show “**Operation Succeed**” on the bottom which means the password changed successfully.

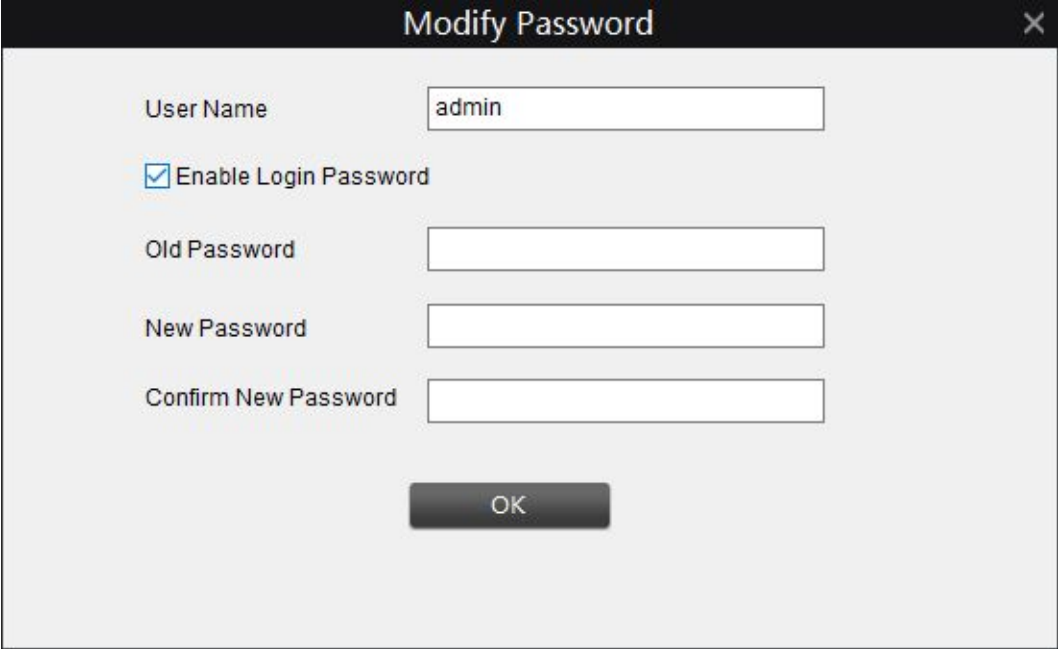

The screenshot shows a dialog box titled "Modify Password" with a close button (X) in the top right corner. The dialog contains the following fields and controls:

- User Name:** A text field containing the value "admin".
- Enable Login Password:** A checkbox that is checked.
- Old Password:** An empty text field.
- New Password:** An empty text field.
- Confirm New Password:** An empty text field.
- OK:** A button at the bottom center of the dialog.

Note:


1. If the old password is the default one, please leave the Old Password field blank.
2. Users cannot change the username of “admin”.

Chapter 5 Basic Settings

Click Basic Settings to display the submenus including **OSD**, **Encode** and **Image**.


5.1 Basic Settings > OSD

Please refer to [4.1 Device Settings > Display](#).

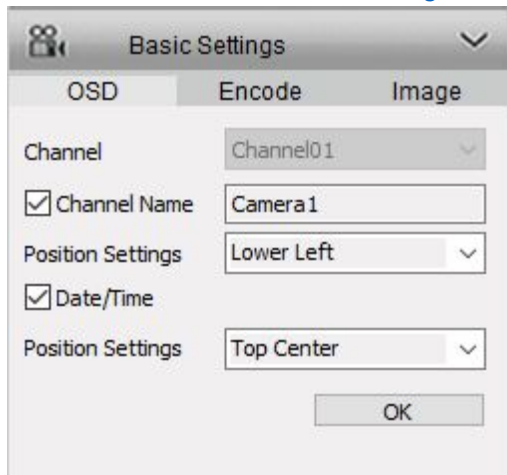


5.2 Basic Settings > Encode

Please refer to [4.2.1 Record > Encode](#).

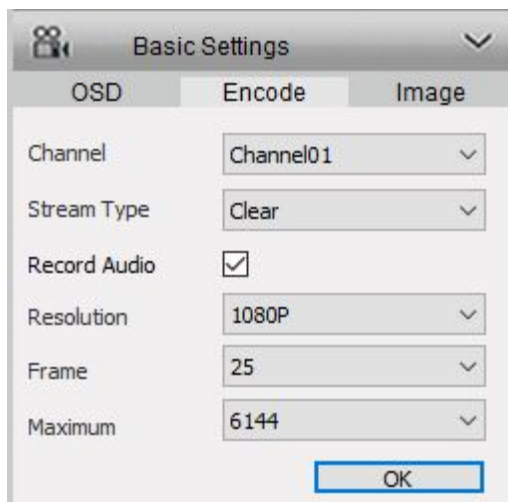

5.3 Basic Settings > Image

You can adjust the picture for live feed under this menu.

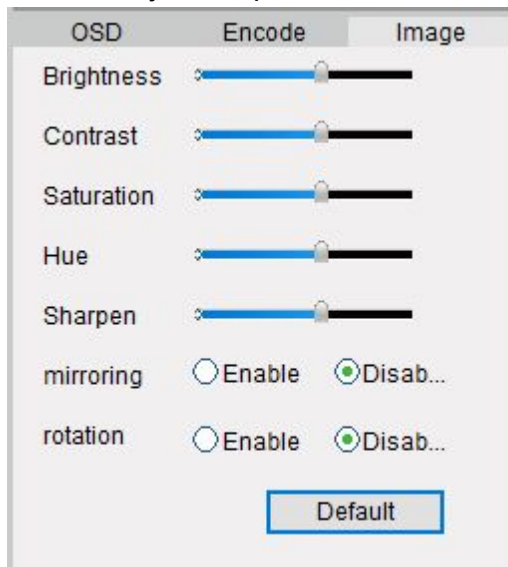


- **Brightness:** Changes how light the image appears to be.
- **Contrast:** Increases the difference between the blackest black and the whitest white in the image.
- **Saturation:** Alters how much color is displayed in the image. The higher the saturation, the brighter and more vivid colors will appear to be.
- **Hue:** Changes the color mix of the image (this can have very dramatic results).
- **Sharpen:** Sharpen image to increase the Signal Noise Ratio.
- **Mirroring:** Choose **mirroring** ☒ **Enable** to change the orientation of the image to be horizontally reversed.
- **Rotation:** Choose **rotation** ☒ **Enable** to turn the image upside down.
- **Default:** Click Default to restore default image settings.

Note: Your image settings will affect your recordings!

Chapter 6 Advanced Settings

You can adjust various camera settings according to the environment where the camera is installed under this menu.

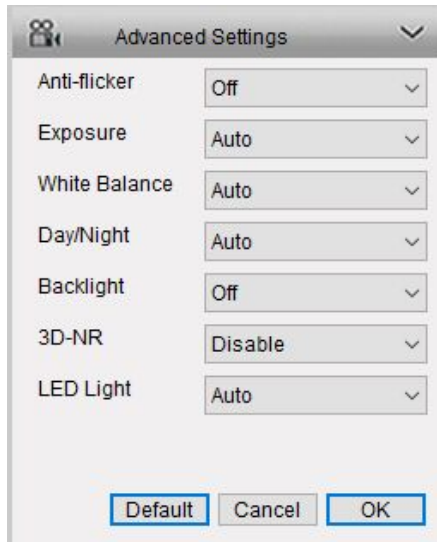

- **Anti-flicker:** Use this feature if some devices such as TV screens and lights are flickering.
 - **50GHz:** Used for Australia and the UK.
 - **60GHz:** Used for the USA and Canada.
 - **Exposure:** Select the exposure level of the camera based on pre-defined conditions. Select Manual to adjust shutter range and gain value of the camera manually.
 - **White Balance:** Change the way the camera processes white balance to correct image colors. Select Manual to adjust red gain and blue gain.
 - **Day/Night:** Set the camera's color mode during different times of the day and night.
 - **Color:** the camera will show a colorful image which is usually in the day time.
 - **Black and white:** the camera will show the image only with black and white color which is usually during the night when the IR LEDs are on.
 - **Auto:** the camera will automatically switch between **Color** and **Black and white** according to the light conditions.
 - **Backlight:** Optimize brightness and contrast levels to compensate for differences between dark and bright objects using either BLC or WDR mode. This may improve image clarity in high contrast situations but should be tested at different times of the day and night to ensure there is no negative effect.
 - **3D-NR:** Short for 3D-Noise Ratio, if Enabled, it may decrease the noise of the image.
 - **LED light:** Turn on/off the IR LEDs.
 - **Default:** Restore to default settings.
- Click **OK** to save and enable settings.

Chapter 7 Warranty & Technical Support

7.1 Warranty

Reolink warrants this product against defects in workmanship and material for a period of **Two** (2) years from its original purchase date. You must present your receipt as proof of purchase for warranty validation. Any unit which proves defective during the stated period will be repaired without charge for parts or labor or replaced at the sole discretion of Reolink. The end user is responsible for all freight charges incurred to send the product to Reolink's repair center. The end user is responsible for all shipping costs incurred when shipping from and to any country other than the country of origin.

The warranty does not cover any incidental, accidental or consequential damages arising from the use of or the inability to use this product. Any costs associated with the fitting or removal of this product by a tradesman or other person or any other costs associated with its use are the responsibility of the end user. This warranty applies to the original purchaser of the product only and is not transferable to any third party. Unauthorized end user or third party modifications to any component or evidence of misuse or abuse of the device will render all warranties void.

By law some countries do not allow limitations on certain exclusions in this warranty. Where applicable by local laws, regulations and legal rights will take precedence.

7.2 Technical Support



If you have any questions or problems, you may refer to <https://reolink.com/faqs/> for the answers and solutions.



If you may need any technical support, please contact us at support@reolink.com



We have developed user-friendly products and documentation. You may download the software and manual from <https://reolink.com/software-and-manual/>



You may download Firmware from <https://reolinkhello.com/firmware/>