

尺寸：80\*104mm 材质：128g铜版纸 四色 折页

SEE ME HERE



BV130  
Bluetooth Speaker

Contents

Chapter1: Getting to know

1 Warnings

2 Standard Configuration

2 Features

3 Parameters

5 Power on/off

5 Connect and Play

6 Play Music on Micro SD Card

Chapter3: Troubleshooting

Chapter2: Getting started

4 Keys and Components

Getting to Know

Warnings

- Please use and store this product at room temperature;
- Do not expose this product to rain or wet conditions;
- Do not throw and drop this product, avoid damage;
- Do not self-dismantle, repair and transform the product;
- Only charge with a rated voltage charger(DC5V≐1A);
- Long time high volume may cause hearing impairment; please adjust the volume appropriately when listening, especially for long time listening;
- Unauthorized dismantlement will void the warranty.

①. Note: Improper battery replacement may cause explosion; only replace with same or equivalent battery.

②. Do not expose the battery to sunlight, fire or excessive heat.

Standard Configuration

1 Master unit: 1pc

2 USB cable:1pc

3 Manual: 1pc

Features

 
- ◆ Wireless bluetooth playback
- ◆ Support Micro SD card music playback
- ◆ Output power is 3W THD=10%
- ◆ Built-in 600 mAh polymer battery
- ◆ Support MP3/WMA/WAV formats audio playback

 
Parameters

 
| Appearance             |                                           |
|------------------------|-------------------------------------------|
| External interfaces    | Micro USB interface , Micro SD card slot  |
| Product specifications | W81 × D79 × H36 (mm)                      |
| Net Weight             | 154g (including built-in lithium battery) |
| Basic parameters       |                                           |
| Product type           | Portable Bluetooth speaker                |
| Speaker system         | 1.5 inch loudspeaker                      |
| Volume control mode    | Touch the button to adjust                |
| Features               | Bluetooth 2.1+EDR                         |
| Storage type           | Micro SD card (MAX 32G)                   |
| Power supply           | Built-in 600mAh lithium battery           |
| Technical parameters   |                                           |
| Output power           | 3W THD = 10%                              |
| Frequency response     | 90Hz~18KHz                                |
| USB specification      | USB2.0, compatible with USB1.1            |
| Charging time          | DC5V≐500mA around 3 hours                 |
| Audio play time        | Around 6 hours at Mid-volume              |
| Functions              |                                           |
| File format            | MP3, WMA, WAV                             |
| Micro SD card playback | Micro SD card music playback              |
| Bluetooth play         | Yes                                       |

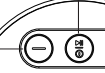 
Getting Started

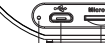 
Keys and Components

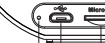 
Previous/VOL-: Press it to switch to previous track, press and hold it to turn down the volume.

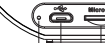 
Power: Long press to turn on/off, short press to pause/playback.

Switch key: Press it 2 seconds quickly switching it between Bluetooth mode and micro SD card mode.

Next/VOL+: Press it to switch to next track, long press to turn up the volume.

Reset hole: Reset the device with thin stick when the speaker halted.

Micro SD card: Insert a micro SD card and play the audio files.

USB port: Charging

Power on/off

1 Press and hold for 3 seconds to turn on/off the speaker

Press and hold for 2 seconds to turn on the speaker, the speaker makes a ding dong sound, and the blue LED starts flashing; press and hold for 2 seconds again to turn off the speaker.

Connect to other Bluetooth devices

1 Bluetooth connection

Turn on Bluetooth on the mobile phone, tablet PC or other devices, search for Bluetooth device "BV130" , and then tap Connect to confirm.

2 Successfully connect to Bluetooth and play

After pairing successfully, the device makes ding-dong-ding sound, the blue LED stays, and then you can select and play music files on mobile phone or tablet PC.

1. If necessary, type "0000" and tap OK to connect

2. The Bluetooth speaker will connect to the last paired device automatically (when turned on)

3 Disconnect Bluetooth device

When the speaker and the device are connected, press both   to disconnect the Bluetooth connection, accompanied by a thud sound; the speaker is available for connect now and the blue LED starts flashing.

4 Bluetooth reconnection

When the Bluetooth is disconnected, you can tap  to connect to last paired device.

Playing music on Micro SD card

1 Insert a Micro SD card and turn on the device

Insert a Micro SD card with music files into the card slot, press and hold the Power button to turn on the speaker, accompanied by a ding-dong sound.

2 Switch to Micro SD music mode

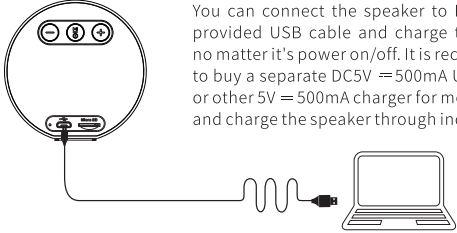 
Press twice the Mode switch button  , and the speaker will make a dong-dong sound and play the music files on Micro SD card.

Tip: BT is the default mode of the Bluetooth speaker; if want to play music on Micro SD card, switch to Micro SD card mode first; if the speaker is turned on, the files on the Micro SD card will be played automatically when the card is inserted.

Charging mode

1 Charging mode

You can connect the speaker to PC with the provided USB cable and charge the speaker no matter it's power on/off. It is recommended to buy a separate DC5V ≐500mA USB charger or other 5V ≐500mA charger for mobile phone and charge the speaker through indoor outlet.



Troubleshooting

| Fault                      | Solution                                                                                                |
|----------------------------|---------------------------------------------------------------------------------------------------------|
| Pairing failed repeatedly  | 1. Turn off the speaker and restart it                                                                  |
|                            | 2. If your device requires code, type 0000                                                              |
| Music play interrupted     | 1. Check if the device is out of effective range, or if there is barrier between speaker and the device |
| Micro SD card format error | 1. Check if the Micro SD card format is proper (speaker supports FAT32 format)                          |
|                            | 2. Check if the file formats of the Micro SD card are WAV, WMA, Mp3                                     |
| No sound during playing    | 1. Check if the speaker volume is adjusted properly                                                     |
|                            | 2. Check if the speaker is or paused                                                                    |
| Can't turn on the speaker  | 1. Restart the speaker, use the reset function                                                          |
| No reaction                | 1. Restart the speaker, use the reset function                                                          |

Tips: If the device isn't used for a long time, pls charge it before use it again. It will automatically power off after 10 minutes without connecting with bluetooth or not inserting micro SD card.

This device complies with part 15 of the FCC Rules. Operation is subject to the condition that this device does not cause harmful interference (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.  
Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.  
NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.  
If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:  
--- Reorient or relocate the receiving antenna.  
--- Increase the separation between the equipment and receiver.  
--- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.  
--- Consult the dealer or an experienced radio/TV technician for help.  
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.  
  
FCC ID:2ABNJ-BV130