

ALL RIGHTS RESERVED

©2015. All rights are reserved. No part of this document can be reproduced without permission. All trademarks and brand names mentioned in this publication are property of their respective owners.

While all the efforts have been made to ensure the accuracy of contents in this manual, we presume no responsibility for errors or omissions or statements of any kind, whether such errors are omissions or statements resulting from negligence, accidents, or any other cause. We operate a policy of continuous development and reserve the right to make changes, modifications and improvements to the device, device features/ specifications or any of its parts without prior notice.

Your device may have preinstalled bookmarks and links for third party internet sites and may allow you to access third party sites. These are not affiliated with us, and we do not endorse or assume liability for them. If you access such sites, take precautions for security or content.

The limited warranty does not cover user manuals or any third party software, settings, content, data or links, whether included/downloaded in the product, whether included during installment, assembly, shipping or any other time in the delivery chain or otherwise and in any way acquired by you. To the extent permitted by applicable law(s), we do not warrant that any our software will meet your requirements, will work in combination with any hardware or software applications provided by a third party, that the operations of the software will be uninterrupted or error free or that any defects in the software are correctable or will be corrected.

 *User's Manual is provided just to guide the user about the functionality of the device. This is not any certificate of technology. Some functions may vary due to modifications and upgrades of software or due to printing mistakes.*

SAFETY PRECAUTIONS

Please read the following safety guidelines before using the device.

- Do not use the phone while you are driving.
- Do not place magnetic storage media near your phone. Radiation from the phone may erase the information stored on them.
- Keep your phone and its accessories away from children.
- Mobile phones can interfere with the functioning of medical devices such as hearing aids or pacemakers. People having active medical implants should keep their cell phone at least 15 cm away from the implant.
- Permanent hearing loss may occur if you use earphones or headphones at high volume.
- Use a wireless hands-free system (headphone/headset) with a low power Bluetooth emitter.
- Make sure the cell phone has a low SAR.
- Keep your calls short or send a text message (SMS) instead. This advice applies specially to children adolescents and pregnant women.
- Use cell phone when the signal quality is good.

Notice:

- Do not dismantle the device or accessories otherwise, manufacturer is not liable to pay for damages as the device and accessories are not covered by warranty.
- Use only original batteries and charging devices.
- Please back up your important data timely and keep them properly. The company is not liable

for any failure to call or loss of data due to mis-operation, poor signal or power cut, etc.

- All the screens in this manual are for reference only, and some contents actually displayed may depend upon the presetting of the service provider or the network operator, or the SIM card. If any functions referred to in this manual are different from those of your device, please follow your device.
- Do not put use it in a place with flammable gas such as a petrol pumps. The temperature recommended for using the device is 5-35°C. Do not touch the charger, power cable or socket with wet hands. This may cause an electric shock.

 ***If your phone or any of its accessories do not function normally, then please visit your nearest authorized service facility. The qualified personnel will assist you, and if necessary, will arrange for the service.***

TABLE OF CONTENTS

ALL RIGHTS RESERVED	1
SAFETY PRECAUTIONS	3
TABLE OF CONTENTS	5
1. UNDERSTANDING YOUR DEVICE	7
1.1 DEVICE OVERVIEW	8
2. INSTALLING CARDS	9
2.1 INSTALLING CARDS & BATTERY	9
2.2 POWERING ON/OFF THE DEVICE	10
3. SYSTEM GUIDE	12
3.1 MAIN SCREEN OPERATING	12
3.2 USING YOUR PHONE	12
3.3 CALLING	12
3.4 MESSAGING	13
3.5 CONTACTS	14
3.6 EMAIL	14
3.7 BROWSER	14
4. HOME SCREEN	15
4.1 CUSTOMIZING SCREEN	15
5. MULTIMEDIA	16
5.1 FILE MANAGER	16
5.2 CAMERA	16
5.3 GALLERY	16
5.4 FM RADIO	16
6. NETWORK	17
6.1 WI-FI	17
6.2 BLUETOOTH	17
7. SETTINGS	18
7.1 SIM MANAGEMENT	18
7.2 WIRELESS & NETWORKS	18
7.3 AUDIO PROFILES	18
7.4 DISPLAY	18
7.5 STORAGE	18

7.6 BATTERY	19
7.7 APPS	19
7.8 LOCATION	19
7.9 SECURITY	19
7.10 LANGUAGE & INPUT	20
7.11 BACKUP & RESET	20
7.12 ACCOUNTS	20
7.13 DATE & TIME	20
7.14 SCHEDULED POWER ON&OFF	20
7.15 ACCESSIBILITY	20
7.16 ABOUT PHONE	20
8. APPLICATIONS & UTILITIES	21
8.1 CALCULATOR	21
8.2 CLOCK	21
8.3 GMAIL	21
8.4 PLAY STORE	21
9. SPECIFICATIONS	23
ENVIRONMENTAL CONCERN	24

1. UNDERSTANDING YOUR DEVICE

Elite 6.0L is a smart phone, such as **Android version 5.1, Wi-Fi, 1.3G Quad Core Processor, 13 MP Digital Camera**, etc. This phone is provided with two SIM slots for two different SIM cards. The SIM card inserted in the slot1 is called SIM1, and the second SIM inserted in slot2 is SIM2. You can select to operate SIMs as per your personal and professional needs.

1.1 DEVICE OVERVIEW



Position of Keys

1. Earphone Jack	2. Earpiece
3. Touch Screen	4. Power Key
5. Volume Control Key	6. Camera Lens
7. Front Camera Lens	8. USB Port
9. Speaker	10. Battery Cover

2. INSTALLING CARDS

2.1 INSTALLING CARDS & BATTERY

Please switch off your device before inserting or removing the SIM card and memory card.

Installing SIM Card

Your device is provided with two SIM slots for two different SIM cards. In order to install battery and SIM card in the device, please follow the steps mentioned below:

- Remove the card slot cover of the device.
- Insert the SIM cards.
- Attach the card slot cover.




Installing Memory Card

Your device supports T-Flash card, which is a multimedia memory card used to multiply the memory of the device. The T-flash card is small and should be pulled out and installed carefully and prudently in order to avoid any kind of damage. Please follow the steps mentioned below to install the memory card in the device:

- Switch off your device.
- Remove the card slot cover.
- Insert the T-Flash memory card into the slot.

- Fix the battery cover until it mounts properly into place.

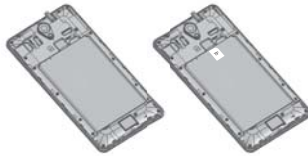

Charging the battery

The device prompts a warning tone and message stating insufficient battery when the battery power is low. Please follow the instructions mentioned below to charge your device:

- Plug the connector of the charger into the jack of the device.
- Plug the charger into a standard AC wall outlet.

Charging.....  Fully Charged..... 

You should fully charge the battery before using the device for the first time. It is recommended to charge the battery for three hours before using the device for the first time.

2.2 POWERING ON/OFF THE DEVICE

Turning On the Device

After installing the SIM card/s and charging the battery, you are now ready to turn on your device.

- Long press and hold the Power Key to turn on the device.
- The first screen that appears is known as the home/idle Screen.
- Drag the lock icon sideways to unlock the screen.
- If the screen turns off, then short press the Power Key to turn on the display.

Turning Off the Device

- Press and hold the Power Key.
- A pop-up window appears, select Power off.
- Select OK to confirm.

3. SYSTEM GUIDE

3.1 MAIN SCREEN OPERATING

Notification Panel

The table below lists various icons that might appear on the notification Panel of the device.

	Network intensity of SIM card 1 or SIM card 2
	Battery level of the device
	New short message
	Missed call notification
	Headset is plugged in
	USB connected
	Wi-Fi is connected
	Bluetooth is activated
	GPRS network is in use

3.2 USING YOUR PHONE

Enter main menu

In idle mode press the  key to enter the main menu on the desktop and press the (Home) key to return.

Enter sub menu

In the main menu click the icon to select the sub menu, press the Back key to return to the previous menu, and press the Home key to return to the Home screen.

3.3 CALLING

To Make Calls

If the icon  appears on the screen, then you can make or receive calls.

To make a call, please follow the steps mentioned below:

- Tap , enter the phone number using the on-screen keyboard.
- Tap  to delete a wrong number. Tap and hold it to erase the entire number.
- After entering phone number, tap .
- To end the call, tap .

Answer/Reject an Incoming Call

When you receive an incoming call, a notification message appears on the screen. In order to accept the call, drag  towards the right. If you wish to reject the call, drag  towards the left.

3.4 MESSAGING

For using your device for sending and receiving of SMS (Short Message Service) and MMS (Multimedia Message Service), go to Main Menu and then select Messaging.

Creating a Message

- Tap  Compose new message.
- In To field; enter the recipient's phone number.
- Type message in the Type to compose field.
- Tap  to Send.

Receiving and Managing Messages

When you send and receive messages to or from a contact, these messages are grouped as a message thread. A message thread looks like an exchanged conversation.

MULTIMEDIA MESSAGE

A Multimedia message or MMS can contain letters, an image, an audio or video file. To create and send a MMS, please follow the steps mentioned below:

- Enter the Main Menu, select Messaging.
- Tap  Compose new message.
- Select Menu > Add subject.
- In the To field, enter the recipient's phone number or email address and enter the Subject.
- To insert a picture or video file, etc, tap .
- To insert text, tap Type to compose, and then enter your message.

3.5 CONTACTS

You can save information such as name, phone numbers, etc. for each contact listed in your Contacts menu.

To add a Contact

- Enter the Main Menu select People.
- Tap  add to contacts .
- Store the contact to SIM card or Phone contact.
- You can fill out as many or as little fields as you'd like for the contact.
- Tap Done to save the contact.

3.6 EMAIL

Your device allows you to compose, read and send emails.

3.7 BROWSER

The Browser is the tool which enables you to access the Internet.

4. HOME SCREEN

4.1 CUSTOMIZING SCREEN

The device features a touchscreen with idle displays and access to utilities at just one-touch. So swipe right or left to navigate through various screens accessing your favorite features without entering the main menu. Each screen can be customized by adding various widgets, shortcuts and folders.

Shortcuts

In order to add a shortcut on the screen: Long press on the desired application to add on the screen.

Widgets

Save time with live updates right on Home screen and get all of your personalized updates at one place.

Setting the wallpaper

You can customize the wallpaper of your Home screen with default wallpaper or with pictures taken from your device.

- Tap the Menu Key > Wallpapers.

Rotating Your Mobile Phone Screen

- The orientation of most screens will change to landscape or portrait view when you rotate your phone sideways.
- On the Home screen, tap  > Settings > Display > Auto-rotate screen to disable this function.