


Exit Golf Mode

ENG


Exit Golf Mode from the App

- On the app's main screen, press [Golf Mode Off] to exit golf mode.
- Even if you don't manually exit, golf mode will automatically end if the device remains inactive for 2 hours.

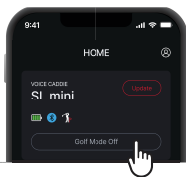

Exit Golf Mode from the device


- Golf Mode will end when you press [Exit Golf Mode] on the device's settings screen.

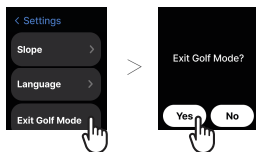


Golf Mode Details

Main Screen

- Slide left / right to navigate views or screens.

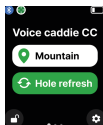

Quick Menu

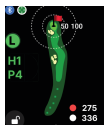


Course View



Approach View

Hole Change

- If hole auto recognition is set to [ON], it will automatically move to the current hole based on your location.
- Manual Change: Slide the screen up or down to change to the desired hole.

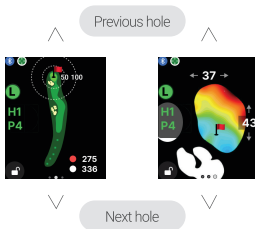


Golf Mode Details

ENG

Couse view / Approach view

- ① App connection status & Hole auto recognition activated Icon
(Displayed when Hole auto recognition is ON)
- ② Display 50/100-yard arcs from the pin location.
(Pin position will not display if Auto Pin is off or unsupported.)
- ③ Left/Right Green Display : (Configurable in the app)
- ④ Hole/Par Information
(Current hole : green / Not current or Hole auto recognition OFF : white)
- ⑤ Display distances from Red and White tees
- ⑥ Display green width and depth
- ⑦ Green map & Undulation
- ⑧ Center pin displayed on the green
(You can long-press the green area to change the pin position.)

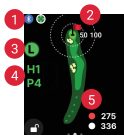

Course View



Green view

Golf Mode Details

Change Pin Position in Green View

- A pin icon is displayed at the center of the green.
- You can move the pin position by long-pressing the green area.




Golf Mode Details


ENG

Quick Menu

- In the Quick Menu, you can check and change the current golf course and course name, refresh the hole, and access the settings.
- When Hole auto recognition is set to [ON], the Hole Refresh button will be displayed. Pressing the button will move you to the hole corresponding to your current location.

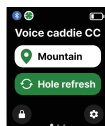

Hole Auto
Recognition [ON]

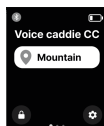


Hole Auto
Recognition [OFF]



Golf Mode Settings

Hole Auto Recognition

- Please set the app's location permission to [Always Allow] to use this feature.
- After connecting the app, if Hole auto recognition [ON] is enabled, the course view / green view of the current hole is displayed automatically.

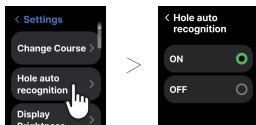

- If you switch to a hole other than your current location, pressing the [Hole refresh] button in the Quick Menu will return you to your current hole.
- When you are on your current hole, the Hole auto recognition activated icon and hole / par information at the top of the screen are shown in green.

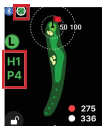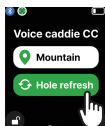

[Current hole]




[Not current hole]

Golf Mode Settings

Left / Right Green Selection

- In dual-green courses, select the left or right green.
- In Course View / Green View, you can long-press the left/right green icon to switch between them.

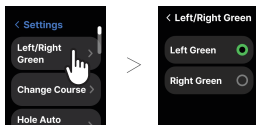

Change Course

- If an incorrect course is selected, you can switch to the correct one.



Product Parts



① Laser Receiver / Object Lens

② Laser Diode

③ Charging LED
(Charging: Red flashing
/ Fully Charged: Green)
Slope LED (OFF: Red)

④ Display

⑤ M Button


⑥ Power/Measure Button

⑦ Eyepiece and Focus Control Unit

⑧ USB-C Port
(located at the bottom)

Description of Laser LCD Screen

ENG

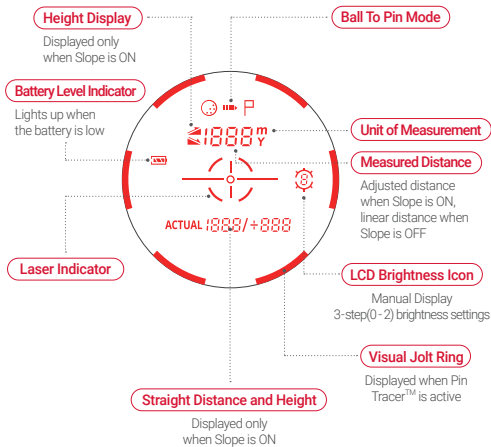

Power ON


After charging the battery, press the Power/Measurement button () to turn on the power and screen.

Viewfinder




With the power ON

>

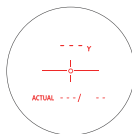

Standby mode for
measurement

Display

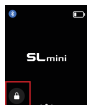

Main Screen

※ After turning on the device, press the touch lock button to enable the touch screen.

Power OFF

Screen OFF

The screen will automatically turn off after 10 seconds of inactivity.



Power OFF

The device will power off automatically after 30 minutes of inactivity.

Viewfinder brightness adjustment


While the device is powered on, hold the Power/Measure Button () and press the M Button () to adjust the brightness.

- Brightness levels: Manual 0~2 levels

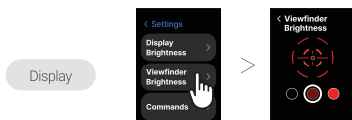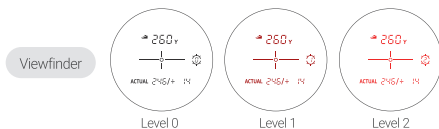

Alternatively, adjust brightness under Settings > Viewfinder Brightness.

Display brightness adjustment

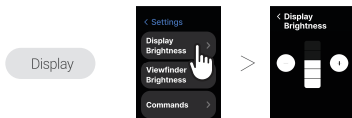


Adjust brightness under Settings > Display Brightness.

Unit Change

With the device powered on, double-press the M Button (**M**) to toggle between meters (M) and yards (Y).

※ Units can only be changed when the slope function is ON.

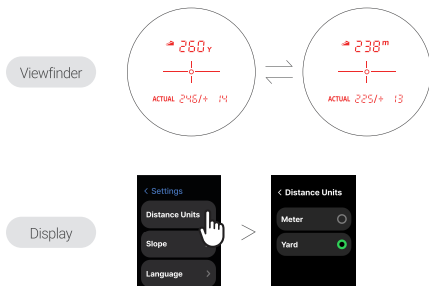

The distance unit can be changed in Settings > Distance Units.

Focus Adjustment

Turn the focus knob on the eyepiece left or right to sharpen the image on the LCD screen.

Slope ON / OFF


ENG

To toggle Slope ON/OFF :


Hold the M Button () for 5 seconds while powered on.

- When the Slope is ON, the V-Algorithm™ calculates and displays the adjusted distance.
- When the Slope is OFF, the straight-line distance is displayed.

Viewfinder

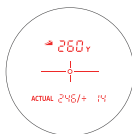

Slope ON

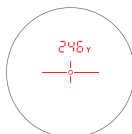

Slope OFF

Display




Alternatively, use Settings > Slope.

Distance Measurement

Spot Measurement


- With the power on, press the Power/Measurement button() briefly to measure.
- Quickly measure various targets such as fairways, bunkers, and hazards to show the distance.

Viewfinder

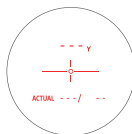

Aim at the target

>

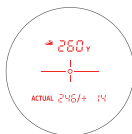

Measurement completed

Display



Slope ON

>



Slope OFF

- During measurement, the distance information will be displayed on the display screen.