

OTG Cable: User methods and notice

OTG Cable can transmit the data between devices without the HOST.

The unit offer very easy-to-use OTG Function. User can copy the data in USB drives to this unit and can also copy the data to USB drives.

When using the OTG cable, please connect to OTG external devices.

Notice: When connecting to the external devices, make sure it's powered on connected with external power supply. Otherwise, it will cause problem because of lacking battery Power on the unit with the external device, choose "USB External device" to enter the interface of the USB drives files list after identifying the USB drives successfully.

To disconnect the OTG external device, first disconnect the power supply on the external device, and then disconnect the OTG external device.

Pictures

In the main function interface, click "Gallery" option to enter the photo thumbnails interface. Click any image file into the picture browsing interface. Click any position on the screen can display or hide the picture settings menu, dragging the pictures left and right can switch the last and the next image, two-point scale may be enlarged or narrow the current picture.



Click to send current pictures



Click to edit the pictures

In the picture browsing interface, click  to popup sub menu. Click it, the relevant operation can be performed.

Delete: click to delete the current photo

Slideshow: click on the image will automatically play in slide form

Editor: click to edit images

Rotate left/Rotate right: Click can rotate the picture in left or right

Crop: click on the current image can be cut and save

Details: check the detailed information of the picture

Set picture as: set the current picture as wallpaper

Camera

In the main function interface, click the "Camera" option to shoot. Double-click or touch two points on the screen can zoom in or out the camera lens.



Click to shoot a picture and keep it automatically. Click the icon on the bottom-right to see the photos already shot.



Exposure compensation mode



Smiling face photograph mod



Multi-angle camera mode



Switch the front and rear lens



HDR mode



Open the camera flash



Open the flash automatically



Submenu



Video settings



Optimum photograph mode



Nighttime mode



Panorama camera mode



Facial beautification mode



Camera mode



Close the camera flash



Setting menu



Camera settings

Click  to take a video, and re-click to stop and save it automatically. Click the bottom-right icon to see the videos. Double click or put two points touch can zoom in or out the lens.



Pause the video



Continue to take a video after the pause

Phone

Click the "Phone" to enter the communication interface



Call log



Contacts



Dial pad



Dial



Settings



Find contacts

Messaging

Click "Messaging" on the main interface to enter the message operation interface.



New message: message edition page



Menu: click to popup the submenu as follows.



Search messaging: input the content and search for the message

Wappush message: delete all the messages

Settings: click to enter the SMS, MMS, Notifications and General page

Media Player

In the main function interface, click on the "MX Player" option to enter video file list interface, click on any video files into the video play interface



Lock screen: click to lock screen, unlock by clicking on the upper left corner  logo



Last: click to play the last video (drag the progress bar can be fast and back)



Pause and play: click to pause and play the video



Next: click to play the next video (drag the progress bar can be fast and back)



Screen Settings: click to set the screen cut, 100%, adapt to the screen or stretching



Audio track: click to set the audio track



Set icon: click can pop-up drop-down menu

Play: click to set the background play, single cycle, all cycle, random broadcast, network flow

Display: click can set the screen rotation, progressive scan, aspect ratio,

Onscreen caption: click on the open, the panel can be set up

Tools: click to set the deletion, attributes

Help: click to view the updated content, function, FAQ, updated, error report, about.

Music player

In the main function interface, click on "music" option, enter the music file list interface.

Artist: click to view the artist name

Album: click to view which album the song belongs to

Song: click to view all the songs

Playlists: click to view recently added songs



Click here to return the playlist



Random play icon: click random playback can be opened or closed



Click this icon can set up "repetitive play the songs, play all the songs, closed repeats," and so on



Click can play the last song, press long time can retreat



Click to pause and play the song



Click can play the last song, press long time can fast forward



In music playback interface, click  the icon, will show the music function setting menu to choose "music library, party random broadcast, added to the playlist, used as a ringtone, delete, sound" to enter the setting interface.

HDMI Output

The device support dual screen display, the two ends of the HDMI cable respectively connect the TV and tablet HDMI port, switch the TV to HDMI mode, the device will recognize and switch to HDMI output automatically.

TF Card and SIM Card

1. Insert TF card and SIM card by the correct way into tablet PC card socket.
2. If you want to unplug the TF card or SIM card, first make sure players do not currently operate on the card, and then look at his hand soft reduction card, the card will automatically pop up at this time
3. When using the TF card, please format the TF card, to ensure that the file format is FAT32 of this system is fully compatible with FAT32 file format
4. If you have plug TF card, in the "Settings" menu can check the capacity of the TF card has been used and available capacity

Note: 1. Please insert or unplug the TF card or SIM card in off state if possible, in case of lost program or data error. 2. Try not to open the 3G network and the WIFI at the same time, in order to avoid data conflicting.

Clock

In the main menu interface, click the "clock" option, enter the clock Interface.
Click any point on the screen to adjust the brightness of the screen
Click "alarm setting" to add alarm function

AppInstaller

This device supports APK installation, uninstallation.

Click any APK in the File Management to access installation Interface. Click "installation" to start installing this APK.

Uninstallation: enter "applications interface" in the "setting" menu to uninstall the APK

Mobile storage function

The device with high-speed USB2.0 interface, the standard removable disk function, support for Windows98 (need to install the driver), Windows2000/XP/Vista (do not need to install the driver) system, use the USB cable (please try to use the original Ainol data line) connected with the PC after (wait a few minutes), the player is displayed as on-line mode; (After the "📁" appears on the windows desktop, double-click the "Numpy 3G" in the my Computer to read and write)

Copy files / folders

Download files from your computer to the tablet, just simply drag the file / folder onto your tablet disk. At the same time, it also can copy the files from computer to the device

Delete a file / folder

Select File / folder on the keyboard, press the "Delete (delete)" key for file / folder deletion. Click "OK" to delete,

Note: When the tablet is exchanging data with the computer, do not to unplug USB cable, otherwise it will result in loss of control buttons, and even loss of programs;

After using, with the right mouse button click on the lower right corner of the Windows desktop 📁 icon, according to the computer guide to disconnect USB connection safely; Or click "closed the USB storage device".

USB Recharge

When the screen prompts "battery low" Or battery icon shows red or an exclamation point, at this time, please charge before use the device. When you use the charger to recharge the machine, please connect the power adapter to the tablet computer USB interface, the other side on the power socket.

When charging for the device, it displays charging mode, when completes, battery power display full, when use USB to charge have to continue for 5 hours (the first two times 8 hours is needed to active the battery).

FAQ

The machine could not be power on

Check whether the battery is empty.
Check it again after connects the power adapter.
If you still cannot power on after charging, please contact our sales.

No sound is available when playing.

Please check whether the volume is set to 0.
Please check whether the earphone's connection is a problem.

Serious noise

Please check whether the earphone plug is clean, dirt can lead to noise. Check is the music files have broken. Try to determine the other music. If the file has been damaged, it will lead to very serious tone of the noise or jump.

Garbled screen

Please check whether it has set the correct language option, the language chosen can set in the Settings.

The files can not be downloaded

Confirmed the connection between the computer and the player is proper
Confirm whether the memory is full of storage space.
Confirm whether there is any damage in the USB cable.

It can not go on line or display videos

Confirm WIFI is turned on and connected
Confirm WIFI message is good.

Product Specification

Model Number	NUMY 3G AX1
DDR	DDR3 1GB
Flash	16GB
Power Input	USB 1A
CPU	MTK Mt8389 Quad-core
SIM	Dual card and daul standby
Operation	5 points capacitive touch screen with button (Power, VOL -, VOL+, HOME)
Screen	Screen LCD: 7 inch , 1024*600 high Resolution
USB Connection	High speed USB 2.0
Micro SD card	2GB~4GB~8GB~16GB~32GB
OS	Android 4.2
WIFI	802.11b/g/n Support External
Audio format	Support MP3,WAV,(APE,FLAC,AAC,OGG need install the third software)
Video format	Support MOV,MKV,AVI,TS,TP,M2TS,VOB,DAT,MPEG,MP4,PMP,3GP, FLV,WMV,ASF etc.
Photo format	JPG,BMP,PNG,GIF
2G/3G function	GSⅡ850&GSⅡ1900&WCDⅡA850&WCDⅡA1900
Temperature	Working temperature: -10~45℃
Languages	Support Chinese,English and multi languages
Support system	Win2000/XP/VISTA/Win7
Battery power	Built in 3000mAh lithium battery
Camera	Front 2.0 Mega / Back 5.0 Mega Pixels.
BT function	Bluetooth 4.0 Supported

FCC STATEMENT

- 1. This device complies with Part 15 of the FCC Rules.
Operation is subject to the following two conditions:**
 - (1) This device may not cause harmful interference, and**
 - (2) This device must accept any interference received, including interference that may cause undesired operation.**
- 2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.**

NOTE: This equipment has been tested and found to comply with the limits For a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference In a residential installation. This equipment generates, uses and can radiate Radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.--Increase the separation between the equipment and receiver.**
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.**
- Consult the dealer or an experienced radio/TV technician for help.**

Specific Absorption Rate(SAR) information:

This MID meets the government's requirements for exposure to radio waves. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons regardless of age or health.

FCC RF Exposure information and statement the SAR limit of USA(FCC) is 1.6W/kg averaged over one gram of tissue. Device types: Nummy 3G AX1 (FCC ID: 2ABTP-NUMY-3G)has also been tested against this SAR limit.The highest SAR value reported under this standard during product certification for use at the ear is 0.364W/Kg and when properly worn on the body is 0.529W/kg.

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This device and its antenna must not be located or operating in conjunction with any other antenna or transmitter. The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.