

User Manual

PBT9550

(Fold Inward) — — — — ▶

(Back Cover)

(Front Cover)

Definiciones Etiquetas de Clasificación

- Simbolo de corriente continua.
- ⌚ Este simbolo significa que el producto no debe desecharse como basura domestica y debe entregarse a una instalacion de recoleccion adecuada para su reciclaje. La eliminacion y el reciclaje adecuado ayudan a proteger los recursos naturales, la salud humana y el medio ambiente.
- Ⓡ Este simbolo significa y declara que este equipo tiene carga de bateria que cumple con la CEC y la eficiencia energetica.
- Bluetooth Este simbolo significa que se trata de un dispositivo inalámbrico con tecnologia Bluetooth®.
- CE Este simbolo representa la Declaración de Conformidad y Cumplimiento con la FCC

Póliza de Garantía

AUDIO
PERIODO DE GARANTIA / 6 MESES

Felicitaciones por su compra, estamos confiados que este producto le entregará momentos de gran satisfacción. Por favor desine algunos minutos a leer detenidamente el MANUAL DE INSTRUCCIONES, antes de apertar su nuevo producto, de esta forma se asegurará de hacerlo correctamente y sin riesgos.

Este producto ha sido fabricado bajo estrictas normas de calidad y ha sido sometido a un riguroso control antes de su comercialización, lo que asegura un excelente funcionamiento en condiciones normales de uso.

En cumplimiento con lo establecido en la ley 19.496 (Ley del Consumidor), se otorga a este producto una garantía por el periodo de 6 meses, a contar de la fecha de adquisición, siempre que debere ser acreditada adjuntando su respectiva factura de compra.

Esta garantía cubre defectos de funcionamiento de origen técnico de la unidad o de sus componentes, mano de obra y repuestos necesarios para la restitución del producto a su estado original de normal funcionamiento "siempre que este no se hubiere deteriorado por algún hecho imputable al consumidor" (Art. 21, Parágrafo 1, Ley 19.496).

Por lo tanto, esta política no cubrirá daños físicos, roturas o defectos de funcionamiento provocados por mala instalación, omisión de instrucciones precautorias, golpes, succiones, uso no domestico familiar, intervención de personas no autorizadas evidenciada por la violación de sellos en tornillos de cierre o ajuste, conexión a fuentes de energía inadecuadas, o en general cualquier condición de uso que el sentido común indique riesgo de daño para el artefacto o para el usuario.

Para hacer efectiva esta garantía, el propietario en Región Metropolitana deberá acudir o enviar su producto al **Servicio Técnico SD Servicio Ltda.** Ubicado en Av Italia 1729, Nuiños, Fono: 23417750.

En regiones deberá acudir a la red de servicios técnicos autorizados de la marca, quienes repararán gratuitamente su producto, al cumplir las condiciones y plazos indicados en esta Póli.



Servicio al Cliente
Fono: 02-23417750
Av Italia 1729, Nuiños
Info@serviciotecnico.cl
www.serviciotecnico.cl



Designed in US
Printed in China
v2, 05-2021

Polaroid

Atención al Cliente
Si el producto fue adquirido en Chile,
favor considere este manual de usuario
y garantía.



©2021. All rights reserved.

Polaroid, Polaroid Color Spectrum and Polaroid Classic Border Logo are trademarks of PLR IP Holdings, LLC, used under license. PLR IP Holdings LLC, does not manufacture this product or provide any manufacturer's warranty or support.

Polaroid




PBT9550
Vintage Wireless Speaker
Manual de Usuario

Antes de empezar...

- ⚠ Precaución**
Para garantizar un uso seguro y adecuado, lea toda la información de seguridad antes de usar el dispositivo. Úselo únicamente con baterías, cargadores, accesorios y suministros aprobados por el fabricante.
- **ESTE DISPOSITIVO NO ES UN JUGUETE**, NO permita que niños o mascotas lo usen o jueguen con este dispositivo.
 - No desarme, modifique ni repare el dispositivo.
 - No lo exponga a temperaturas extremas (calor o frío), llamas directas, humedad o condiciones húmedas.
 - La baja potencia puede provocar conexión Bluetooth deficiente y distorsión de sonido.
 - No sobrecargue las baterías.
 - Si lo usa con un adaptador USB, asegúrese de que el adaptador no esté dañado.
 - No permita que el puerto USB o los conectores del cable USB suministrados se expongan al polvo o al agua, o que entren en contacto con materiales conductores como líquidos, polvos metálicos.
 - El altavoz incorpora baterías, las que no deben ser desechadas junto al resto de la basura domiciliaria. Por favor consulte con las autoridades locales sobre el modo correcto de eliminación del producto.

- Dentro de la caja
- PBT9550 – Parlante Portátil (x1)
 - Cable de carga micro-USB (x1)
 - Manual de usuario (x1)

Ubicación de los Controles

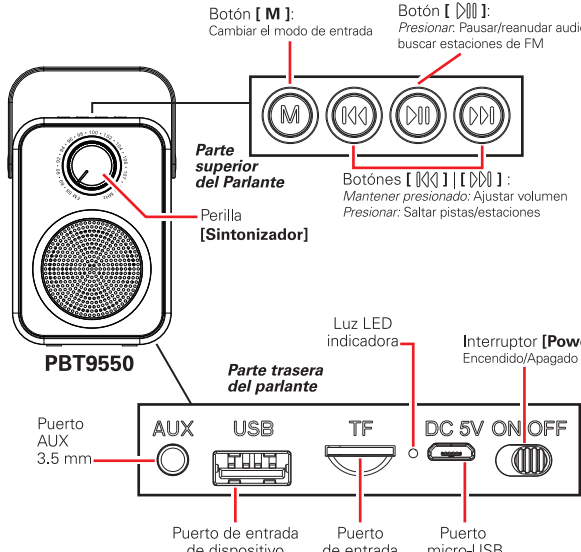

Cargar el parlante

Enchufa el conector micro-USB pequeño del cable de carga incluido en el puerto correspondiente en la parte trasera del parlante. Enchufa el conector USB grande en una fuente de energía USB, como el de una computadora, o en un **adaptador de carga USB de 5 V** (no incluido) y conéctalo a un tomacorriente de pared.

Encendido/Apagado

- Mueve el interruptor **[POWER]** en la parte trasera del parlante para encenderlo o apagarlo.
- Cuando el parlante esté encendido, estará automáticamente en el modo radio FM.

Ajustar volumen

En todos los modos, el volumen puede ser ajustado con los botones sobre el parlante. En el modo de AUX y Bluetooth, el volumen puede también ser controlado por tu dispositivo conectado.

- Mantén presionado el botón **[III]** para **subir** el volumen.
- Mantén presionado el botón **[I]** para **bajar** el volumen.

Ajustar reproducción

En el modo Bluetooth, radio FM, TF y USB, la reproducción puede ser controlada por los botones sobre el parlante.

- Presiona **[II]** para pausar la reproducción, Presiona nuevamente para reanudarla.
- Presiona el botón **[III]** para saltar a la siguiente pista/estación.
- Presiona el botón **[I]** para saltar a la siguiente pista/estación.
- Presiona el botón **[III]** para retroceder a la pista/estación anterior.

Cambiar el modo de entrada

Presiona el botón **[M]** para pausar la reproducción del parlante para cambiar entre los modos de entrada disponibles.

Debes tener una tarjeta micro TF o un dispositivo USB insertado conectado para cambiar a estos modos.

Conexión con Bluetooth

1. Enciende el parlante y conecta Bluetooth en el modo de entrada. El indicador de la luz azul LED parpadeará rápidamente.
2. Configura tu teléfono móvil para buscar dispositivos Bluetooth. Cuando aparezcan, selecciona **PBT9550** de la lista de dispositivos encontrados.
3. Después de una vinculación exitosa, se escuchará un tono y el indicador de la luz azul LED parpadeará lentamente.

En el modo Bluetooth, radio FM, TF y USB, la reproducción puede ser controlada por los botones sobre el parlante.

- Presiona **[II]** para pausar la reproducción, Presiona nuevamente para reanudarla.
- Presiona el botón **[III]** para saltar a la siguiente pista/estación.
- Presiona el botón **[I]** para retroceder a la pista/estación anterior.

Usar la entrada AUX

Conecta el extremo del cable auxiliar de 3,5mm (no incluido) en el puerto correspondiente tras el parlante. Inserta el otro extremo en el conector para auriculares o el puerto de salida auxiliar de tu dispositivo de reproducción multimedia.

Cambia al modo AUX antes de conectarte.

En el modo AUX, la reproducción puede ser controlada por tu dispositivo conectado.

Usar una tarjeta TF o un dispositivo USB

Para insertar una tarjeta TF, colócala en el puerto de entrada del parlante con la parte de metal hacia abajo y empujla hasta que suene un clic.

Para insertar un dispositivo USB como una unidad flash que contiene archivos de audio, conéctala en el puerto USB en la parte trasera del parlante.

Cambia los modos de entrada antes de insertar una TF o un USB. El parlante automáticamente comenzará a reproducir música desde el dispositivo. Nota: debes tener una tarjeta TF o un dispositivo USB insertado para estar en el modo TF o USB.

En el modo de tarjeta TF o USB, la reproducción puede ser controlada por los botones del parlante.

- Presiona el botón **[II]** para pausar o reanudar la reproducción.
- Presiona los botones **[III]** y **[I]** para saltar pistas.

Usar la radio FM

Saca la antena adherida al parlante hacia arriba. Cambia el modo de entrada antes de entrar a radio FM.

En el modo radio FM, la reproducción puede ser controlada por los botones en el parlante.

- Usa la perilla [sintonizador] para ajustar la estación FM manualmente.

Compliance Information

FCC Information
This device complies with Part 15 of the FCC Rules.

Caution: Any changes or modifications not expressly approved could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Radiation Exposure Information
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

WARNING Li-Ion Battery Inside
This product is fitted with a Li-Ion battery. Do not damage, open, or dismantle the battery and do not use it in damp and/or corrosive conditions. Use only with compatible chargers. Never dispose of batteries in a fire, and never expose them to high temperatures. Do not expose the product to temperatures exceeding 60°C (140°F).

Rating Label
— Direct current symbol.

Definitions
⌚ This symbol signifies the product must not be discarded as household waste, and should be delivered to an appropriate collection facility for recycling. Proper disposal and recycling helps protect natural resources, human health and the environment.

Ⓡ This symbol signifies and declares that this equipment has battery charging which complies with California CEC and energy efficiency.

Bluetooth This symbol signifies that this is a wireless device powered by Bluetooth® technology.

CE This symbol represents FCC Declaration of Conformity and compliance.

Warranty Information

90-day Limited Warranty
Territory: United States/Canada

LIMITED WARRANTY TO ORIGINAL CONSUMER
This product (including any accessories included in the original packaging) as supplied and distributed new by an authorized retailer is warranted by Southern Telecom, Inc., to the original consumer purchaser against defects in materials and workmanship ("Warranty") as follows:

To obtain warranty service:

- Visit our customer support portal www.customersupport123.com
- Select the brand and model of your device
- Select "Service Request" and fill out the form to begin your inquiry
- Exchanges require dated proof of purchase from an authorized retailer

Your product will be repaired or replaced, at our option, for the same or similar model of equal value if examination by the service center determines this product is defective. Products received damaged as a result of shipping will require you to file a claim with the carrier.

Warranty service not provided
This warranty does not cover damage resulting from accident, misuse, abuse, improper installation or operation, lack of reasonable care, unauthorized modification including software modifications such as the installation of custom firmware. This warranty is voided in the event any unauthorized person opens, alters or repairs this product. All products being returned to the authorized service center for repair must be suitably packaged.

NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, OTHER THAN THOSE EXPRESSLY DESCRIBED ABOVE, SHALL APPLY. DISTRIBUTOR FURTHER DISCLAIMS ALL WARRANTIES AFTER THE EXPRESS WARRANTY PERIOD STATED ABOVE. NO OTHER EXPRESS WARRANTY OR GUARANTEE GIVEN BY ANY PERSON, FIRM OR ENTITY WITH RESPECT TO THE PRODUCT SHALL BE BINDING ON DISTRIBUTOR, REPAIR, REPLACEMENT OR REFUND OF THE ORIGINAL PURCHASE PRICE - AT DISTRIBUTOR'S SOLE DISCRETION - ARE THE EXCLUSIVE REMEDIES OF THE CONSUMER. IN NO EVENT WILL DISTRIBUTOR OR ITS MANUFACTURERS BE LIABLE FOR ANY INCIDENTAL, DIRECT, INDIRECT, SPECIAL, PUNITIVE OR CONSEQUENTIAL DAMAGES (SUCH AS, BUT NOT LIMITED TO, DAMAGES FOR LOSS OF PROFITS, BUSINESS, SAVINGS, DATA OR RECORDS CAUSED BY THE USE, MISUSE OR INABILITY TO USE THE PRODUCT, EXCEPT AS STATED HEREIN. NO OTHER WARRANTIES SHALL APPLY. NOTWITHSTANDING THE FOREGOING, CONSUMER'S RECOVERY AGAINST DISTRIBUTOR SHALL NOT EXCEED THE PURCHASE PRICE OF THE PRODUCT SOLD BY DISTRIBUTOR. THIS WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL CONSUMER WHO PURCHASED THE PRODUCT AND IS NOT TRANSFERABLE.

Some countries, states or provinces do not allow the exclusion or limitation of incidental or consequential damages or allow limitations on warranties, so limitation or exclusions may not apply to you. This warranty gives you specific legal rights, and you may have other rights that vary from state to state or province to province. Contact your authorized retailer to determine if another warranty applies.



Designed in US
Printed in China
v2, 05-2021

Polaroid

Have questions? We've got answers.

Visit us at customersupport123.com



©2021. All rights reserved.

Polaroid, Polaroid Color Spectrum and Polaroid Classic Border Logo are trademarks of PLR IP Holdings, LLC, used under license. PLR IP Holdings LLC, does not manufacture this product or provide any manufacturer's warranty or support.

Polaroid



PBT9550
Vintage Wireless Speaker
User Manual

Before You Begin...


READ CAREFULLY AND KEEP THIS MANUAL

Customer Support
For any questions or problems with your product, please visit our website at customersupport123.com.

- ⚠ Caution**
To ensure safe and proper use, read all safety information before using the device. Only use with manufacturer-approved batteries, chargers, accessories, and supplies.
- **THIS DEVICE IS NOT A TOY.** Keep away from children and pets.
 - Do not disassemble, modify, or repair the device.
 - Do not expose to extreme temperatures (heat or cold), open flames, humid, or wet conditions.
 - **Do not submerge in water.**
 - Low power may cause poor Bluetooth connection or sound distortion.
 - Do not overcharge battery.
 - If using with a USB adapter, make sure the adapter is not damaged.
 - Do not allow the USB port or the connectors of the supplied USB cable to be exposed to dust or water, or to come into contact with any conductive materials such as liquids, metallic powders, etc.
 - The speaker contains a built-in battery and should not be disposed of with regular household waste. Please consult the local authorities on the correct way to dispose of this device.

- In the Box
- PBT9550 - Wireless Speaker (x1)
 - Micro-USB Charging Cable (x1)
 - User Manual (x1)

Location of Controls

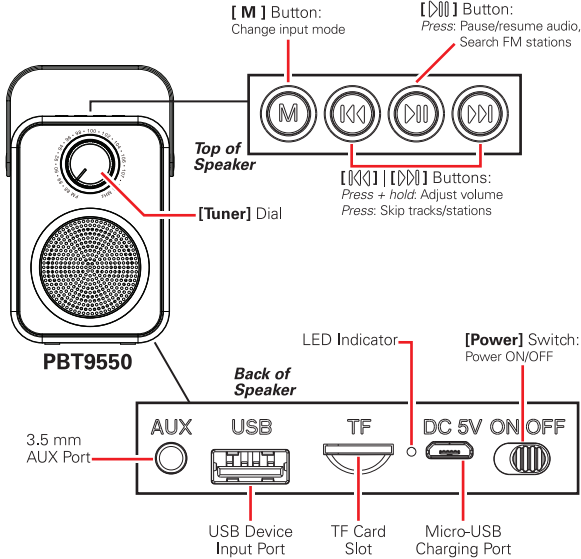

Getting Started

Charging the Speaker

Plug the small connector of the included charging cable into the charging port on the back of the speaker. Plug the large connector into the USB port on a computer, or into a **5V USB adapter** (not included) and plug into a wall outlet.

The charging LED indicator will **turn RED** while charging and turn OFF when fully charged. When the speaker is low on power, a tone will be heard indicating that it needs to be recharged.

Powering ON/OFF

- Move the **[Power]** switch on the back of the speaker to power ON and OFF.
- When powered ON, the speaker will enter FM radio mode.

Adjusting Volume

In all modes, overall volume can be adjusted with the buttons on the top of the speaker. In AUX and Bluetooth modes, volume can also be controlled by your connected device.

- Press + hold the **[III]** button to **increase** volume.
- Press + hold the **[I]** button to **decrease** volume.

Adjusting Playback

In Bluetooth, FM Radio, TF and USB modes, playback can be controlled by the buttons on the top of the speaker.

- Press the **[II]** button to pause playback. Press again to resume.
- Press the **[III]** button to skip to the **next** track/station.
- Press the **[I]** button to skip to the **previous** track/station.

Changing Input Modes

Press the **[M]** button on the top of the speaker to switch input modes.

ATF card or USB device must be inserted or connected to switch to these modes.

Bluetooth Pairing

1. Power the speaker ON, and switch to Bluetooth input mode. The LED indicator will **quickly flash BLUE**.
2. Set your mobile device to search for Bluetooth devices. When the list appears, select **PBT9550** from the found devices.
3. After a successful pairing, a tone will be heard and the LED indicator will **slowly flash BLUE**.

In Bluetooth mode, playback and volume can be adjusted with your paired device or the controls on the speaker listed below.

- Press the **[II]** button to pause playback. Press again to resume.
- Press the **[III]** button to skip to the **next** track.
- Press the **[I]** button to skip to the **previous** track.

Using the AUX Input

Insert one end of a 3.5 mm AUX cable (not included) into the AUX port on the back of the speaker. Insert the other end into the headphone jack or 3.5 mm aux output port on your media-playing device.

Switch input modes until you reach AUX mode.

In AUX mode, all playback will be controlled by your connected device.

Using a TF Card or USB Device

To insert a TF card, insert a TF card into the TF card input port on the speaker with the metal contacts facing down, and push in until it clicks.

To insert a USB device, such as a USB flash drive containing audio files, insert the USB device into the USB device port on the back of the speaker.

Change input modes until you enter TF or USB mode. The speaker will automatically begin playing music off the device. **Note:** You must have a TF card or USB device inserted to switch to TF or USB input mode.

In TF card and USB mode, all playback is controlled by the buttons on the speaker.

- Press the **[II]** button to pause and resume playback.
- Press the **[III]** and **[I]** buttons to skip tracks.

Using the FM Radio

Extend the speaker's attached antenna toward the sky. Change input modes until you enter FM radio mode.

In FM radio mode, all playback will be controlled by the buttons on the speaker.

- Use the **[Tuner]** dial to adjust the FM station manually.