
TABLE OF CONTENTS

TABLE OF CONTENTS.....	1
1 OUTLOOK DESCRIPTION	3
2 POWER BUTTON USAGE	4
3 TOUCH-SCREEN NAVIGATION	4
4 U-Disk.....	4
5 USING MICRO-SD CARD	5
6 GETTING STARTED	5
Charge the device	5
Turn the device on.....	5
Wi-Fi Network Setup	5
HDMI video play	6
7 DESKTOP	6
8 SCREEN LOCK.....	7
9 PRE-LOADED APPLICATIONS	7
10 STATUS AND NOTIFICATION AREA	9
11 APPLICATION MANAGEMENT.....	10
Install Android Applications	10
Download Android Applications direct from a Website	11
Uninstalling Android Applications	11
12 WEATHER.....	11
13 CLOCK.....	12
Alarm	12
14 APP MARKET	13
Download Applications	13
App Market Function Menu	13
15 BROWSER	13
16 CALENDAR.....	14
Add Event	14
17 CAMERA.....	14
Take Pictures	15
Take Videos	15
Single-motion Panorama	15
18 CALCULATOR	15
19 MYRECORDER	16
20 EMAIL	16
Add Email accounts	16
Email Inbox	16
Edit Email Accounts.....	17

Delete Email Accounts	17
21 FILE BROWSER	18
Copy Media between Computer and Tablet	18
Connected to the local area network shared folders	19
Delete files	19
22 MY MUSIC	19
Play Music.....	19
Create Music Widget	20
The Operation with Music and Playlist.....	20
Sort by title or date added	21
23 MY VIDEO	21
Play Video	21
Create Video Widget	21
The Operation with Video	21
The Operation with Playlist	22
24 MY PHOTO	22
The operation with picture list.....	22
Slide show and settings	22
Doodle.....	23
Create Photo Widget.....	23
25 Gallery	23
The operation with photo and video list.....	23
26 SCREEN CAPTURE	24
27 TASK MANAGER	24
Stopping Applications	24
Uninstall Applications.....	24
Install Applications	24
28 WI-FI	25
29 PPPoE SETTINGS	25
30 ETHERNET	25
31 SETTINGS	25
FREQUENTLY ASKED QUESTIONS	28
BATTERY MANAGEMENT	29
Charge battery.....	30
IMPORTANT SAFETY PRECAUTIONS	30
FCC STATEMENT	30

1 OUTLOOK DESCRIPTION

Front:



Right side:



Top:



2 POWER BUTTON USAGE

Turn On: Press the power button and hold for 2 seconds.

Turn Off: Press the power button and hold for 2 seconds → tap **Power off** → tap **OK**.

Reboot: Press the power button and hold for 2 seconds → Tap **reboot**.

Quickly Hibernate/wake-up: Press the power button and hold for 2 seconds → tap **Hibernate** enable the device to hibernate, or press the power button briefly make the device to hibernate/wake-up.

Airplane mode: Press the power button and hold for 2 seconds → Tap **Airplane mode**.

Silent mode: Press the power button and hold for 2 seconds → Tap .

Vibrate mode: Press the power button and hold for 2 seconds → Tap .

Normal mode: Press the power button and hold for 2 seconds → Tap .

Force Off: If device does not respond, press and hold the power button for 5 seconds.

(Warning: Force off could lead to unpredictable system errors!)

Reset: Press the reset button could be reset the device. It's will clear the all data, Please careful with the function. (**Note:** After the current reset function can't restart, can only be turned off, so you need to press the power button restart the device after reset.)

3 TOUCH-SCREEN NAVIGATION

The touch-screen allows for quick, easy and convenient navigation for all applications.

Refer to the following method to operate the touch screen by the finger pulp:

Tap: Quick tap & release on an item on the screen.

Touch & hold: Touch and hold in place approx 2 seconds, and then release to display an options window.

Finger slide: Touch & slide your finger across the screen and then release.

☆ *To avoid scratching or crushing, do not place objects on the touch screen surface.*

4 U-Disk

Insert U-Disk

Insert your U-disk into the device via USB host transfer cable. When ready for use, enter into the file browser, switch to the USB folder to view it.

Remove U-Disk

Close all applications or documents which have been opened on the U-disk. Tap



→ **Settings** → **Storage** → **USB storage** → **Unmount this storage device**. When it displayed **Mount this device** and then you can unplug the U-disk.

☆ *Don't insert and remove the U-disk repeatedly in a short time, as this may cause damage to the U-disk.*

5 USING MICRO-SD CARD

☆ *The device supports a maximum 32GB microSD card.*

Insert your card into the microSD slot until it clicks into place. It's OK.

Remove microSD Card

Close all applications or documents which have been opened on the card. Tap 

→ **Settings** → **Storage** → **SD card** → **Unmount this storage device**. When it displayed **Mount this device** and then press the card lightly; it is partially ejected allowing you to pull the card out.

☆ *Don't insert and remove the U-disk repeatedly in a short time, as this may cause damage to the card.*

☆ *We recommend using major brands of memory cards to avoid incompatibility.*

6 GETTING STARTED

Charge the device

☆ *It is not recommended to use the device while charging.*

Plug the power adapter into an electrical wall outlet, and then connect to the device to fully charge the battery before use (A full charge takes about 6 hours in the off status).

Turn the device on

Press the power button briefly.

Wi-Fi Network Setup

Since many features require a Wi-Fi connection, we recommend you set up your Wi-Fi network now.

1. Tap  → **Settings**.

2. Slide **Wi-Fi** switch to turn on.

The device automatically scans and lists all local Wi-Fi Network found. A lock indicates secure **Wi-Fi** networks that require input password to connect.

3. Tap the desired network to which you want to connect → enter the **Network Password** if applicable → tap **Connect**.

4. Tap  to return to the Desktop screen.

☆ If your Wi-Fi network is set as hidden, it won't be found by the auto scan. Tap **Add Wi-Fi network** and follow the prompts to add your network.

HDMI video play

This device support through the Mini HDMI connected with TV, it makes TV and device displayed synchronic. For using this feature, insert the Mini HDMI cable into the right side of the device interface to connect with TV.

7 DESKTOP



1. Back.
2. Home.
3. Recent Apps.
4. Hide status bar.
5. Menu.
6. Current time.
7. Screen capture.
8. Volume.
9. Wireless network
10. Battery Status.
11. Google search.
12. Voice search.
13. Add Widgets/Apps shortcuts or setting wallpapers and more.
14. Tap to view the applications screen

Through add icon  can make many personalized operation, such as, add widgets, application shortcuts, set wallpaper, add bookmarks, email accounts and set up the shortcut.

☆ Tap on any application icon to launch it.

 
☆ Touch, hold and then slide icons to reposition then on the screen.

☆ Touch, hold and slide icons onto  to remove them from the **Desktop** screen.

8 SCREEN LOCK

Can be set to automatically lock screen or quickly press the power button to manually lock screen. The system provides four lock screen style for users. You can enter **Settings** → **Security** → **Lock Screen** to switch.

Lock screen displays the following:

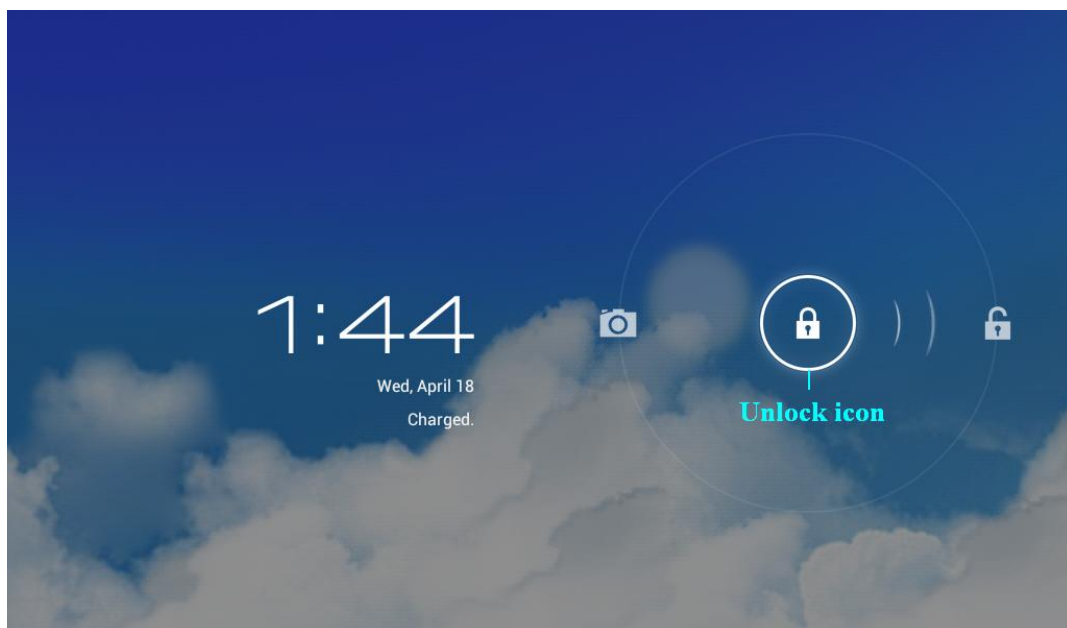

Tap the unlock icon and drop it to the right and out of the circle to unlock.

9 PRE-LOADED APPLICATIONS

	Weather	Set up the degree of temperature, weather auto-refresh rate, add city and view the city's weather.
	Clock	It can display the time and set the alarm.
	App Market	Downloaded applications quickly & easily.
	Browser	Access internet.
	Calendar	Calendar.
	Camera	Take normal photos, panoramic photos and take video.
	Calculator	Do calculation.
	Email	Send/Receive email using your existing email addresses.
	File Browser	File manager application for viewing and managing files and apps. Use to install Android apps, and to backup files to your SD card.
	My Music	Play and manage audio files.
	My Video	Play and manage video files.
	My Photo	View and manage photo files.
	Gallery	Play, view, and manage video and photo files.
	Picture Capture	Capture image of the screen.

	Task Manager	Application manager for managing processes.
	Voice search	Voice search.
	Flash player settings	Flash player settings.
	Downloads	View the downloads and the download progress.
	Hi 乐逗	Download android games.
	Search	Local search and online search.
	Settings	Multiple settings for personalizing and enhancing your Device.

- ☆ To move an icon to the **Desktop** screen, touch & hold the icon, and then release it when it appears on the **Desktop** screen.
- ☆ Touch, hold and then slide icons to reposition them on the screen.
- ☆ Touch, hold and slide icons onto  to remove them from the **Desktop** screen.

10 STATUS AND NOTIFICATION AREA

On the **Desktop** screen, click the icons which in the state bar to view more state information and events.



Airplane mode	Switch airplane mode.
Wi-Fi	Access to Wi-Fi settings interface.
Auto-rotate screen	Auto-rotate switch. After opening, and the screen will automatically rotating screen with gravity induction.
Brightness	Setting screen brightness.
Notifications	Open or close the notification.
Settings	Access to settings.

11 APPLICATION MANAGEMENT

Install Android Applications

☆ *There are many interesting and free Android applications that can be found on the web. Such as launch your web browser and do a search for “Android applications”.*
Purchased or free Android applications that you have downloaded to your computer can

be installed quickly & easily on your Tablet using the  **File Browser** or **task**

manager application.

1. Copy the **.apk** files that you want to install onto a SD card or USB device → insert or connect to your Device.
2. Tap the  **File Browser** application icon.
3. Tap  or  and locate the folder in which the .apk application files were saved.
4. Tap on a **.apk** file → **Install**.
The application is installed and the application icon is added to the **Applications** screen.
5. Tap **Open** to launch the application now, or tap **Done** to return to the **File Browser** screen.

Download Android Applications direct from a Website

You can download Android applications directly from websites, and then quickly and easily install them on your device.

1. Tap the  **browser** application icon to launch the internet.
2. Enter the desired website URL, and tap the **download** link for the application you want to install on your device.
3. After the download is completed, tap  → **Downloads**. Open the applications from app list.

Uninstalling Android Applications

You can also quickly and easily uninstall the Android applications that you have installed.

1. Tap  → **Settings** → **Apps** → **All**.
2. Tap the application you want to uninstall → **Uninstall**.
3. Tap **OK** to confirm the Uninstall.



12 WEATHER

Tap the  **Weather** application icon.

General setting

You can set Temperature Unit(°C), Update frequency .

About

View software version number and relevant legal information.

Add city

You can add city to **Weather** and view the city's weather information.

Select city

In the list of cities, click the city to view the weather information. After selected the city,

tap  delete the city, tap  refresh the weather information.

You can make the weather displayed on the **Desktop** through adding widget. The way is: tap

 → **Widgets** → **Weather Widget**.



13 CLOCK

Tap the  **Clock** application icon. You can see the time and date.

Alarm

You can use your device as an alarm clock by setting multiple alarms.

Add Alarm

1. Tap the  **Clock** application icon.
2. Tap  **Set alarm** → **Add alarm**.
3. Set up your alarm as desired.
4. Tap **OK**.
5. Selected the alarm clock.

Shut Off Alarm Alert

When a scheduled alarm is activated, a pop-up window with the alarm title appears.

Tap **Snooze** if you want to be reminded again in 10 minutes.

Tap **Dismiss** to cancel the alert.

Turn Alarm on

1. In the Alarm list, find the desire alarm.
2. Click the  on the left.
3. After the  change to , tap **Done**.

Edit Alarm

1. Tap the  **Clock** application icon → **Click** .
2. Tap on the alarm you want to edit → make desired edits.
3. After editing, tap **OK**.

Delete Alarm

1. Tap the  **Clock** application icon → **Click** .

2. Tap on the alarm you want to delete.
3. Tap **Delete** → **OK**.

Tap  to return to the **Desktop** screen.



14 APP MARKET

The App Market has many applications that you can quickly and easily download to your Tablet.

Download Applications

1. Tap the  **App Market** application icon.
 ☆ *The first time, it will prompt “**Register**” and “**Login**” options. If you have not yet registered an account, tap **Register**. Otherwise, tap **Login** and enter your login information and then tap **Login** again.*
2. You can select applications from the default **Featured** group, by **Categories**, **Top** (latest, hottest, random), or search by name.
3. Tap on an application → **Download**.
4. After the app is downloaded, tap **Install**.
5. Tap **Open** to launch now, or **Done** to return to the **App Market** screen.

History

After downloading apps, tap on **History** to manage the installed applications. You can add and/or view comments from other users, launch apps, and uninstall them.

App Market Function Menu

Tap  to display the App Market Function Menu.

Profile

Tap to access your profile information. You can Change Password, Change Email and Save Password. Tap **Logout** on the top right corner of **Profile** to exit your account.

About

 
Displays App store version and support information.




15 BROWSER

Users can connect to the Internet through browser.

Click the browser icon on the Desktop , and then you can open the Web browser.

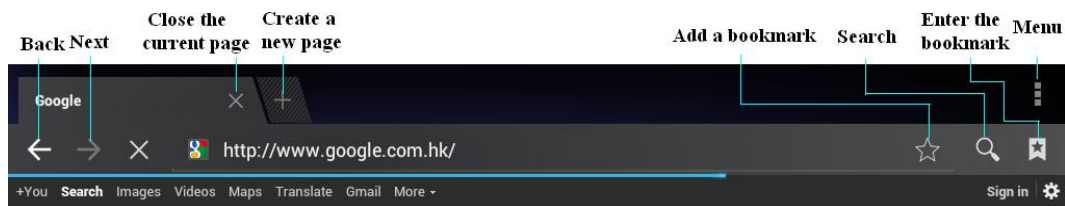

 Google.com.hk offered in: [中文\(繁體\)](#) [中文\(简体\)](#)



16 CALENDAR

Tap the  **Calendar** application icon.

For the first time using the **Calendar**, you need to add an Exchange account. Enter account email address and password. Enter the system **Settings** → **Account & sync** → **Add account**. According to the prompts complete the setting. After then you can use the calendar. Only to view the calendar need not to add Exchange account.

Add Event

1. On the **Calendar** screen, tap on the date to which you want to add an event.
2. Tap on the event time → tap .
3. In each field, enter the details of the related activities.
4. Tap **Done**.

Click the date time in the upper left to choose the calendar you want, such as DAY, WEEK, MONTH and AGENDA display mode.

☆ Dates with gray bars indicate scheduled events.



17 CAMERA

Tap the  Camera application icon.

Take Pictures

1. Tap  switch to video, and you can take picture.
2. Tap  take picture.
3. The picture will be saved.
4. Tap the picture thumbnail  to enter **My Photo** to scan the picture.
5. Press **Back** to the **Camera**.
6. Tap  to exit the **Camera** and back to the **Desktop**.

Take Videos

1. Tap  switch to video, and you can take videos.
2. Tap  to begin and tap  to stop.
3. The video will be saved.
4. Tap the video thumbnail  to play the video.
5. Press **Back** to the **Camera**.
6. Tap  to exit the **Camera** and back to the **Desktop**.

Single-motion Panorama

For capturing larger scenes, tap  icon and switch to single-motion panorama mode. In this mode, the user starts an exposure and then slowly turns the Camera to encompass as wide a perspective as needed. The Camera assembles the full range of continuous imagery into a single panoramic photo.

Note: You can tap  on the top left of the interface to choose the files are stored in the ROM, SD card or USB storage.



18 CALCULATOR

1. Tap the  Calculator application icon.

2. Tap the numbers and sign of operation to do the calculation.
3. Tap **CLEAR** to clear the result one by one, tap and hold **CLEAR** to clear all.



19 MYRECORDER

1. Tap the  recorder icon.
2. Tap the  record icon to start recording.
3. Tap the  record icon to stop record.
4. Tap the  play button to play the voice of recording.



20 EMAIL

☆ *POP3 and SMTP accounts are supported.*

Add Email accounts

You can enter one or more personal email addresses that you would like to access through your Tablet.

1. Tap the  **Email** application icon.
2. On the **Account setup** screen, Tap in the **Email address** entry field → enter your email address.
3. Tap in the **Password** entry field → enter your email password.
4. Tap **Next**.
5. **Manual Setup (optional)**: The server settings are automatically populated based on your email account provider (*i.e., gmail.com, etc*). However, if you need to change the server settings tap **Manual Setup** and make necessary changes.
6. According to the selected mailbox server, enter or select the parameter and server type ,and then Tap **Next**.
7. Optional: Enter a name for the account.
8. Enter name for outgoing message → tap Done.

☆ *After setup, if you are unable to connect to a free email account, check with your email provider to make sure their servers support free accounts on Post Office Protocol (POP) or Simple Mail Transfer Protocol (SMTP).*

Email Inbox

1. Tap the  **Email** application icon.
2. If you set up only one email account, it opens immediately. If you set up multiple accounts, they are listed in the **Accounts** screen.
3. Tap on the desired email account → tap **Inbox**.

Open Email Message

1. On the **Inbox** screen, tap on an email to open it.
2. For attachments, tap **Open** to launch appropriate application, or tap **Save** to save attachment to a SD card.
3. To replay, tap  **Reply** or  **Reply all**.
 - a. Tap in the Compose Mail entry field to enter your reply message.
 - b. Tap Send to send immediately, Save as draft to save without send or Discard to discard without saving or sending.
4. To delete the email immediately, tap **Delete**.

Compose New Email Message

1. On the Inbox screen, tap .
2. Enter the e-mail address in the recipient field. if you want to add Cc or Bcc recipients, tap  → , and then enter the recipient's email address.
3. Tap in the **Subject** entry field to enter your desired subject title.
4. Tap in the **Compose Mail** area to enter your personal message.
5. If desired, tap  →  to attach a file.
6. When ready to send the email, tap .

Edit Email Accounts

1. Tap the  **Email** application icon.
2. On the Inbox screen, tap  → **settings**.
3. Set your desired preferences to customize your email account.
4. Tap  to return to the Inbox screen.

Delete Email Accounts

☆ *If you have multiple accounts, and you delete the account designated as the default account, the next email listed is automatically set as the default.*

1. Tap the  **Email** application icon.
2. On the **Inbox** screen, tap  → **Settings**.

3. Click the account you want to delete.
4. In the pop-up **Account options** window, tap **Delete**
5. Tap **OK** to confirm the deletion.

Set Default Email Account

You must always have one account designated as the default account, so if you have multiple email accounts, you can select any one as the default.

1. Tap the  **Email** application icon.
2. On the Inbox screen, tap  → **Settings**.
3. Tap the desire account.
4. In the right settings list, tap **Default Account** to select it.

If you delete the account that was designated as the default account, the next email listed is automatically designated as the default.



21 FILE BROWSER

Tap the  **File Browser** application icon to view the files on all storage devices (*Internal memory, SD card, USB device*), and to quickly & easily install Android application on your Tablet.

Use the icons across the top of the screen as follows:

-  **ROM** Internal Flash (ROM)
-  **SD** SD Card
-  **USB** USB Storage
-  **Paste**
-  **Back** to the previous folder
-  **Switch** folder display mode.
-  **Menu**

Copy Media between Computer and Tablet

You can use the File Browser to copy files between an external storage devices and your computer. You can first copy the desired files onto a SD card or USB device.

☆ *The internal device storage is titled "ROM", a memory card "SD", and a USB storage device is titled "USB".*

☆ *The instructions below are for copying from a SD card or USB storage device into the device. You can use the same method to copy from the device to a SD card or USB storage device, and then connect the storage device to your computer to transfer the files into the desired folder on your computer.*

1. Tap **GoTo**, select  or  to display the contents of your storage device.
2. Tap and hold a folder/file and enter into the multi-select mode, select the folder/file as desire → tap **Copy**.
3. Tap **GoTo**, select  Internal Memory → tap on the folder into which you want to copy the file → tap .

Connected to the local area network shared folders

You can view all of the LAN shared folders.

1. Connect to LAN.
2. Tap  **Net share** → **Add new sharing point** → **Choose the mode used of sharing** → **Editor of network folder sharing**.
3. After connect successes .Enter **network sharing settings** and open the list of shared folder directly.

Delete files

Tap and hold a folder/file and enter into the multi-select mode, select the folder/file as desire → tap **Delete** → **OK** to confirm the deletion. → tap **Delete** → Tap **OK** to confirm the deletion.



 
22 MY MUSIC

☆ *Audio file formats supported: MP2, MP3, WAV, AAC, WMA.*

Play Music

1. Tap the  **My Music** application icon.
2. Select an audio file from All/Albums/Artists/Directories/My Favorites/User Defined Playlists to play it.
3. To stop the music, tap the **Pause**  icon.
4. When you playing the music you can tap  or  return to the previous screen.

Click  switch to the currently playing interface, It is shown as follows:

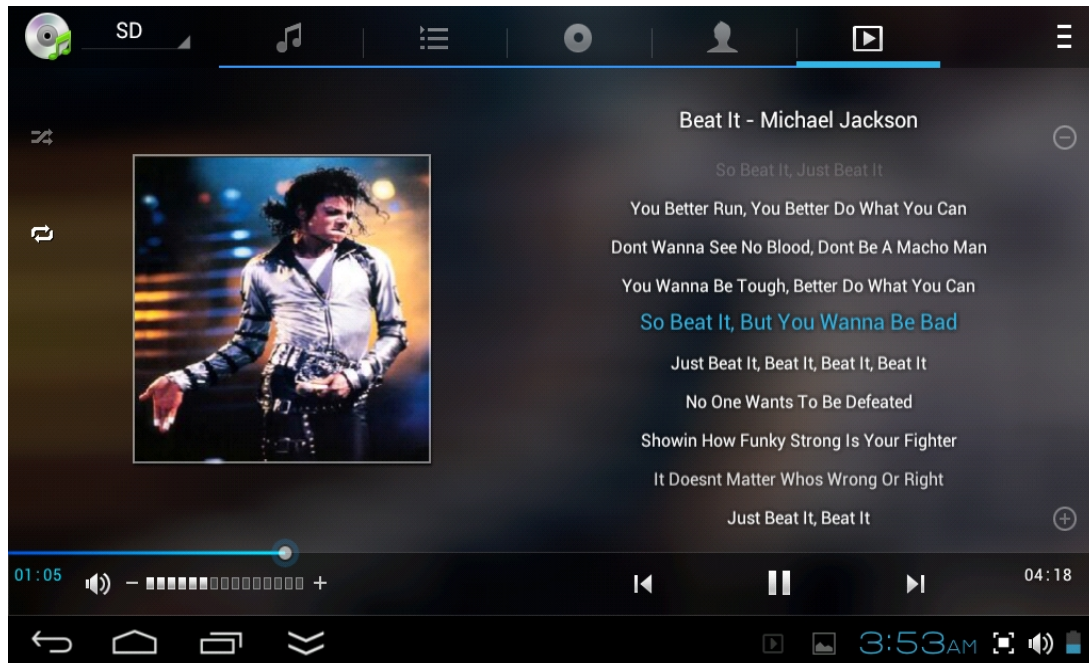

At this interface, you can do: view /download the lyrics, display album photo or spectrum, play / pause, switch to the previous / next, loop and random operation etc.

Create Music Widget

Through the Music Widget can be quickly play the music.

On the desktop tap  icon, In the pop-up list select **Widgets** → Select **Music**

Widget.

The Operation with Music and Playlist

Add playlist

1. Enter  Play list interface → click .
2. Input the playlist name.
3. Tap **Save**.

Rename or Delete playlist

Switch to **display mode**, Tap the playlist → tap  → Enter a new name in the dialog box, and click **Save**. If you want delete the playlist, click  →click **save**.

Add music

1. In the **all song**, **album**, and **artist** list, Tap the music and hold for switch to multi-select mode.
2. Select the music which you want to add to the list (if you don't want to add, tap it again to cancel).
3. Tap **Add to playlist**, and then select a playlist.

Delete music

Tap and hold on the music you want to delete → tap **Delete**.

Sort by title or date added

In the all song interface, on the upper right click the , in the pop-up list select **sort by title**, and then click the alphabetical of the right hand, the interface will quickly jump to the songs match the first letter (including the first letter of the pinyin) in the alphabetical list. If you select **Sort by date added**, all songs will sorted by add date.



23 MY VIDEO

☆ *Video file formats supported: MPEG1/2/4、H263、H264 VC1、RealVideo、MotionJPEG. The largest video format is supported 1080P(1920×1080) resolution.*

Play Video

1. Tap the  **My Video** application icon.
2. Select the video from ROM, SD card or USB.
3. Tap screen and click the related icon adjust the video, (including volume, pause/play, brightness, track, subtitle, and display scale).
4. Tap **Back button** or  to return to the **My Video** screen.

Create Video Widget

Through the Video Widget can be quickly play the video.

On the desktop tap  icon, In the pop-up list select **Widgets** → Select **Video**

Widget.

The Operation with Video

Zoom video screen

In the video player interface, drag two fingers on the screen with reverse / opposite direction can zoom in / zoom out the video screen.

Setting video display mode

Tap  icon, the video screen can be switched within full screen, actual size, best fit three modes.

Audio track and subtitle switching

In the video player interface, in the top right click  icon switch **audio track** and **subtitle**.

The Operation with Playlist

Classification of video list

In the root directory, on the top left click the **album (times)** classify the video.

Switch display mode in the classification folder

In the classification folder, click  and  icon switch to list display mode or album display mode.

☆ In the classification folder, users can click  classify the video by time or name.

Send or delete the video in the list

Tap and hold the video, → on the top right of the screen , click the **option** or **delete** button to send or delete the video.



24 MY PHOTO

☆ Photo file formats support: JPG, JPEG, BMP, and PNG.

1. Tap the  **My Photo** application icon.
2. Tap on the desired photo, to view individual photo.
3. On the top right screen click  to operate the corresponding photos.(including zoom in/zoom out, share, rotate, trim, photos set to, adjust the current display scale, show details)

The operation with picture list

Classification of photo list

In the root directory, on the top left click the **album (times, Locations, people, or tags)** classify the photo,

Delete the photo in the list

Tap and hold the video → on the top right of the screen , click the **delete** button to delete the photo.

Slide show and settings

Enter the slide's setting

1. Tap the  **My Photo** application icon.
2. In the root directory, on the top right click the  → **setting**.
3. In the settings interface, set the **Filter photo by file size, slideshow speed, and slideshow mode**.

Slide show

1. Tap the  **My Photo** application icon. Click the photo folder.
2. click  → **slide show**.

☆ In the classification folder, users can click  and classify the photo by time , color or name.

Doodle

☆ In **My Photo** you can do doodle.

1. Open the picture.
2. Click the  icon → Select **My Photo**.
3. In the doodle interface, user can choose the different doodle function, such as brush, shadow, FX, board, or crop. (**Note:** It will missing brush function if you choose the **Gallery**)
4. After finish the doodle, click the **save** icon.
5. Click the  icon return to picture browsing interface.

Create Photo Widget

Through the **Photo Plug-ins** can be quickly open the photos.

on the desktop tap , In the pop-up list select **Widgets** → Select **Photo Widget**.



25 Gallery

The operation with photo and video list

Classification of photos and videos list

In the root directory, on the top left click the **album** (**times, Locations, people, or tags**) classify the photos and videos.

View, play the photos and videos

Photo: In the classification folder, click on the photo thumbnails to open the photo, and on the top right of the folder interface tap  icon to playing slide.

Video: In the classification folder, click on the video preview, enter to the video preview interface, and click the play button in the video preview to play the video.

Delete the photos and videos in the list

On the top right of the screen, Tap  icon → Tap **select album** or **Select item**,

And then select the photo or video which you want to delete, tap  → **Delete**.

☆ **Gallery** only supports the display and manages photos and videos in the **default reading/writing storage**. To toggle the display of the storage area, go to **Settings** → **storage** → **default reading/writing storage** to make changes. The device default storage area is SD card.



26 SCREEN CAPTURE

You can capture a screen image by tapping  at any time.

Tap the  **Screen Capture** application icon to set options for a screen capture.

- Select a delay timer to capture the screen (seconds) .
- Select the default storage device.
- Show screen capture icon in status bar.

After the images are saved, they can be viewed through  **My Photo** application.



27 TASK MANAGER

Use PK Manager to manager applications and widgets.

Stopping Applications

Android does not automatically stop applications after they are loaded, so you can manually stop the applications as desired.

1. Tap the  **Task Manager** Application icon.
2. Tap **Running** to display all running applications.
3. Tap on an application you want to stop → tap **Force stop** → **OK**.

Uninstall Applications

1. Tap the  **Task Manager** Application icon.
2. Tap **All** to display all applications.
3. Tap on an application you want to uninstall → tap **Uninstall**.
4. Tap **OK** to confirm uninstall.

Install Applications

1. Tap the  **Task Manager** Application icon.
2. Tap **Install** to display all applications and folders.
3. Find and tap on an application you want to install → tap **Install**.

28 WI-FI

Tap **Settings** → **Wi-Fi**, enter into Wi-Fi settings.

1. Slide the Wi-Fi switch to turn on Wi-Fi.
2. All the AP in the vicinity will be listed, click to select the name you want to connect to AP;
3. If the AP is connected successful before, the AP information will be saved in the pop-up window, select "Connect" starts to connect, choose "forget" to remove AP information;
4. If the AP is not encrypted, in the pop-up window, select "Connect" Start Connection;
5. If the AP is encrypted, enter the password in the pop-up window, and click "Connect" Start Connection;
6. When internet connections are successful, the wireless connection icon in the bottom status bar appears.

29 PPPoE SETTINGS

Before using this feature, connect the USB network card via the USB host transfer cable access to device.

1. Tap **Settings** → **PPPoE settings** .
2. Input name and password then click connect to access the broadband network.

30 ETHERNET

Before using this feature, connect the USB network card via the USB host transfer cable access to device. When the USB network cable plugged into the USB network card, you will see

the bottom of status bar ETH symbol  appears

1. Tap **Settings** → **Ethernet**.
2. The device can automatically obtain IP address to connect to the network. You can also choose to manually set the IP address to get connected.



31 SETTINGS

Wireless & networks	Wi-Fi	Turn on /off Wi-Fi, Set up & manage wireless access points.	
	Ethernet	DHCP	Automatic assign IP address
		Use Static IP	Manual assign IP address
	PPPoE settings	Set up ADSL network	
	Data usage	View of data usage	
	More...	Airplane mode	Disable all wireless connections.
		VPN	Add Virtual Private Networks (VPNs).
		Mobile network	Set up mobile network
Device	Sound	Volumes	To adjust the Media volume.
		Default notification	Select desired ringtone sound.
		Vibrator	Turn on/off vibrator
		Touch sounds, screen lock sound	Turn on/off operate sounds.
	Display	Brightness	Adjust the screen brightness as desired.
		Wallpaper	Set up wallpaper
		Auto-rotate screen	Auto-rotate switch.
		Show full-screen gesture tip	Full-screen gesture prompts
		Screen timeout	Adjust the delay before the screen automatically turns off.
		Font size	Set the system font size
	Storage		View, uninstall, and format the internal memory, SD card and USB storage.
	Battery		View the usage of the battery.
	Apps		View and uninstall applications
Personal	Account & sync		Add sync account.
	Location services		

Google's location service

26

Let apps use data from source such as Wi-Fi and mobile network to

			determine your approximate location
		Location & Google search	Let Google use your location to improve search results and other service.
	Security	Screen lock	
		Owner info	
		Encrypt tablet	Require a numeric PIN or password to decrypt your tablet each time you power it on.
		Make passwords visible	
		Device administrators	View or deactivate device administrators
		Unknown sources	Allow installation of non-Market apps.
		Trusted credentials	Display trusted CA certificates.
		Install from SD card	Install certificates from SD card.
		Clear credentials	Remove all certificates.
	Language & input	Language	Setting system language.
			Spelling correction, personal dictionary, keyboard and input methods, text to speech (TTS) output, and pointer speed.
	Backup & Reset		
		Factory data reset	Erases all data on tablet.
System	Date & Time	Automatic date & time	Use network-provided time
		Set date	Set date
		Set time	Set time
		Select time zone	Select time zone
		Use 24-hour format	Choose 24-hour format or 12-hour format.
		Select date format	Select date format.

Accessibility

Large text, power button ends call, auto-rotate screen,

			speak passwords, touch & hold delay, and install web scripts
	Developer options		USB debugging, development device ID, stay awake, allow mock locations, HDCP checking, desktop backup password, strict mode enabled, pointer location, show touches, show screen updates, show CPU usage, Force GPU rendering, window animation scale, transition animation scale, don't keep activities, background process limit, and show all ANRs.
	About tablet		Status, legal information, model number, android version, kernel version and build number.

FREQUENTLY ASKED QUESTIONS

Basic Device Functionary

Q: Do I have to charge the battery before use?

A: You should charge the battery for at least 6 hours, but you can use the device while it's charging. Use the include power adapter to charge; this device does not charge via the USB cable.

Email

Q: Can I use any of my personal email addresses to send/receive email?

A: The device supports POP3 and SMTP accounts. Some free email accounts are not supported on mobile devices. Check with your email provider to see if you account is supported.

Media Cards

Q: Which media cards are compatible with my Device?

A: micro SD cards.

Music

Q: What type of music files can I play on my device?

A: MP2, MP3, WAV, AAC, WMA

Q: How do I add music files to my device?

A: Copy the music files from your computer onto a SD card or USB storage device, and then use the File Browser application to copy the files into the device.

Photos

Q: What type of photo files can I view on my device?

A: JPG, JPEG, BMP and PNG.

Q: How do I add photo files to my device?

A: Copy the photo files from your computer onto a SD card or USB storage device, and then use the File Browser application to copy the files into the device.

Video

Q: What type of video files can I play on my device?

A: Video file formats supported: MPEG1/2/4、H263、H264、VC1、Real Video、Motion JPEG.. The largest video format is supported 1080P(1920×1080) resolution.

Q: How do I add video files to my device?

A: Copy the video files from your computer onto a SD card or USB storage device, and then use the File Browser application to copy the files into the device.

Wi-Fi

Q: Do I need a Wi-Fi adapter to connect to the Internet?

A: No. The Wi-Fi adapter is built-in to the device.

Inconsistent with the physical specifications, please prevail in kind.

BATTERY MANAGEMENT

The battery is not fully charged out of the box, so it is recommended that you charge the battery for at least 6 hours before you start to use the device.

The rechargeable battery is designed and manufactured to be used and recharged frequently. As with all batteries, the capacity of the battery reduces each time it is charged/depleted. However, you can still try to prolong the battery's lifetime by following the suggestions below:

- Use your Tablet at least once a week.
- Charge the battery regularly and fully.
- Never leave the battery fully discharged for a long period of time.
- Always keep the device and the battery away from heat.

Charge battery

Plug the power adapter into an electrical wall outlet, and then connect to the device to fully charge the battery before use (A full charge takes about 6 hours in the off status).

☆ *You cannot charge the battery using the USB cable.*

When fully charged, the battery icon displays as .

A fully discharged battery takes approximately 6 hours to fully charge in the off status, but you can use the device while plugged in when desired.

IMPORTANT SAFETY PRECAUTIONS

Always follow these basic safety precautions when using your Tablet. This reduces the risk of fire, electric shock, and injury.

- Do not expose this product to rain or moisture.
- Keep the device out of direct sunlight and heat sources.
- Protect the power cord. Route power cords so that they are not likely to be walked on or pinched by items placed on or against them. Pay particular attention to the point where the cord attaches to the device.
- Only use the AC adapter included with the device. Using any other power adapter voids your warranty.
- Do not remove the cover. There are no user-serviceable parts inside.

Cleaning your device

Treat the screen gently. To clean fingerprints or dust from the screen, we recommend using a soft, non-abrasive cloth such as a camera lens cloth.

FCC STATEMENT

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
 - (1) This device may not cause harmful interference.
 - (2) This device must accept any interference received, including interference that may cause undesired operation.
2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are

designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

Radiation Exposure Statement:

This equipment complies with FCC radiation exposure requirement. The device can be used in portable exposure condition without RF striction