

90mm

240mm

ENGLISH User Manual**VIONTA E10
Power Bank****Specification****• Power Bank**

Total Cell Capacity: 10000mAh

Model Name: VIONTA E10

Battery Capacity: 10000mAh (38.5Wh)

Input Power:·USB-C: 5V $\Rightarrow$ 3A / 9V $\Rightarrow$ 2A / 12V $\Rightarrow$ 1.5A (18W PD Max)·USB-C Cable: 5V $\Rightarrow$ 3A / 9V $\Rightarrow$ 2A / 12V $\Rightarrow$ 1.5A (18W PD Max)**Output Power:**·USB-C: 5V $\Rightarrow$ 3A / 9V $\Rightarrow$ 2.22A / 12V $\Rightarrow$ 1.67A (20W PD Max)·USB-C Cable: 5V $\Rightarrow$ 3A / 9V $\Rightarrow$ 2.22A / 12V $\Rightarrow$ 1.67A (20W PD Max)

·Wireless: 5W / 7.5W / 10W / 15W

Operating Temperature: 0°C - 35°C

Size: 92 x 64.1 x 28.2mm

Weight: 221.7 g

1-Year Limited Warranty

Made in China

*The product can only be used to charge smartphones / earbuds. Please refer to the user manual for instructions and more product information.

*This product does not support simultaneous charging and discharging.

FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation. Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

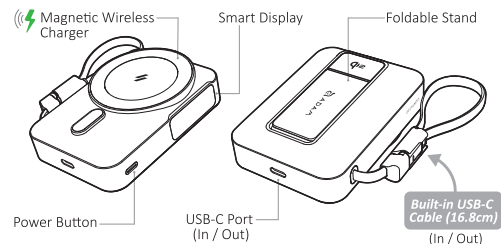 
This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

RF warning statement

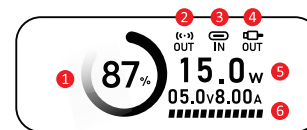 
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Product Introduction**Protective Function**

 
 
 
- | | |
|-----------------------------|----------------------------|
| Multiple circuit protection | Over-voltage protection |
| Over-current protection | Flame retardant protection |
| Short-circuit protection | Over-heat protection |

Attention

- | | |
|---|--|
| Do not expose to liquids | Keep away from children |
| Do not shake while charging | Avoid extreme temperatures |
| Unplug the device when fully charged | 1-Year Limited Warranty |
| Do not disassemble, puncture, drop, bend or modify | Please scan the QR code on the packaging for the user manual |
| For the fastest and safest charge, use an ADAM cable, your device's original cable or a certified cable (such as MFi) | |

Smart Display Introduction

- 1 Battery Percentage
- 2 Wireless Output Power
- 3 USB-C Cable/Port Input Charging
- 4 USB-C Cable/Port Output Charging
- 5 Input/Output Parameters
- 6 Power Intensity

Charging MethodsCharge 2 devices
simultaneouslyCharge 3 devices
simultaneouslyCharge 1 device with
magnetic attachmentCharge 1 device with
foldable stand**AIRPLANE MODE**

Enable Airplane Mode

1. Press the button once to power on the power bank.
2. Press and hold the button for 3 seconds — the display will then show the airplane mode icon. After the power bank shuts down, it enters Airplane Mode.
3. If the power bank cannot use wireless charging, it confirms that Airplane Mode is enabled.

Disable Airplane Mode

1. When Airplane Mode is enabled, press the button once to power on the power bank.
2. Press and hold the button for 3 seconds — the display will then show the airplane mode deactivation icon.
3. If the power bank snaps-to-charge, Airplane Mode is disabled.

Notice: When Airplane Mode is enabled, the wireless module will be temporarily disabled (USB-C charging remains available). Wireless charging will resume once Airplane Mode is turned off.