

Forward

Thank you for purchasing Plug-On XLR Transmitter **TX3-XLR**. This product offers wide frequency range, 96 channels, OLED display, +48V phantom power and silent function. By converting the microphone from wired to wireless, TX3-XLR provides stable, reliable and portable wireless audio solutions for video recording, journalistic shooting, audio recording, etc. Please read this manual carefully before using to make sure the correct operation and exert the optimum function.

Product Features

- UHF Frequency Range: 514MHz-596MHz
- There are 96 wireless channels which can be freely switched without interference
- High and stable sound quality like broadcast
- The maximum wireless distance up to 60m
- With OLED display to show the parameters setting
- With output volume control and silence function
- The power of transmitter is adjustable

 
(Note: as the max. support frequency is 514MHz-596MHz which includes the 96 wireless channel's frequency, there are parts of frequency may not be utilized.)

Warning


- ⚠ Do not disassemble. Should repairs become necessary, this product must be sent to an authorized maintenance center.
- ⚠ Always keep this product dry. Do not use in rain or in damp conditions.
- ⚠ Keep out of reach of children.
- ⚠ Do not use the flash unit in the presence of flammable gas. In certain circumstance, please pay attention to the relevant warnings.
- ⚠ Do not leave or store the product if the ambient temperature reads over 40°C.
- ⚠ Turn off the flash trigger immediately in the event of malfunction.
- ⚠ Observe precautions when handling batteries
 - Use only batteries listed in this manual. Do not use old and new batteries or batteries of different types at the same time.
 - Read and follow all warnings and instructions provided by the manufacturer.
 - Batteries cannot be short-circuited or disassembled.
 - Do not put batteries into a fire or apply direct heat to them.
 - Do not attempt to insert batteries upside down or backwards.
 - Batteries are prone to leakage when fully discharged. To avoid damage to the product, be sure to remove batteries when the product is not used for a long time or when batteries run out of charge.

- Should liquid from the batteries come into contact with skin or clothing, rinse immediately with fresh water.

Names of Parts

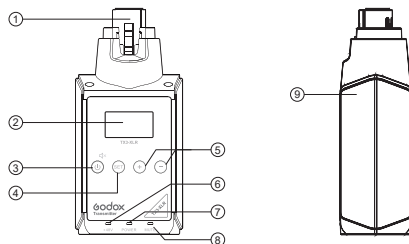


 1. XLR audio input jack
2. OLED Display
3. Power/Mute Button
4. Menu Button
5. Menu +/-
6. +48V Switch LED Indicator
 - Green light: ON
 - Red light: OFF
7. Power Indicator
 - Green light: full battery level.
 - Red light: Low battery level.
8. Audio Indicator
 - Green light: Sound directivity mode.
 - Red light: Silent mode.
9. Body
10. Battery Compartment
11. Battery Switch
12. XLR Locking Ring

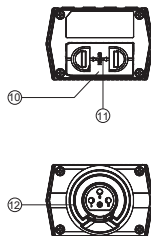


Optional Accessory

 Shotgun Microphone VDS-M1
Portable Receiver RX1

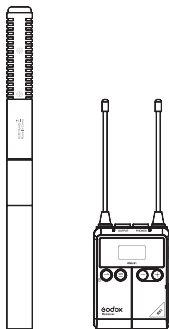


Operation Instruction

 This product adopts two AA batteries to supply power.



OLED Display:

 1. Transmitting Power Icon
2. Silence Icon
3. Input Volume Indicator
4. Battery Level Indicator
5. Wireless Group and Channel
6. Communication Frequency




Transmitter Setting



1. **Power:** Long press the button for two seconds to power it on/off.
Mute: Press the button to power on the silent mode, and press the button again to power off.

(Note: when muted, the audio signals will not be outputted, but the RF signal will still be transmitted)

 2. **GRP/CH/RF setting:** long press the menu button to enter setting interface. Then, short press the menu button to switch to the next setting.




Group GRP: choose GRP and press + or - button to select A or B group.

Channel CH: choose CH and press + or - button to select channels from 01 to 48.

RF power setting: choose RF Power to switch H or L power. H for high power, L for low power.

 Note: The OLED screen indicates the device is connected to Group A, Channel 20. Select RF power as low power mode.




3. **Display brightness setting:** short press + or - button until OLED light is displayed. Then, long press the menu button to choose the corresponding brightness level. Short press + or - button to choose the brightness level from 1 to 8.

Note: The OLED screen indicates the current brightness level is level 5.

4. **Backlight time:** short press + or - button until BackLight is displayed. Then, long press the menu button and the backlight time is blinking. Short press + or - button to choose backlight time from ON, OFF and Delay 10S/30S/60S.

 Note: The OLED display indicates the current backlight delay is 30 seconds.





5. **+48V power switch:** short press + or – button until +48V POWER is displayed. Then, long press the menu button to choose ON or OFF. Short press + or – button to switch.



 
6. **Software version:** When short pressing the + or – button, the Version displayed means the software version.



7. **Restore factory default:** short press +/- button until Restore Default is displayed. Then, long press the menu to set. After restore the settings, the system will set CRP/CH/RF : A-01-L by default.

Install/Detach the Microphone

Make the output port of the XLR microphone into the TX3-XLR transmitter port and press down until it is locked.

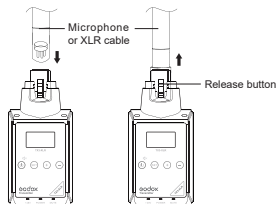

Note :

- Please do not pull out the microphone or XLR audio cable by force, otherwise, damage may be caused.
- Please turn off the transmitter when connecting or removing the microphone.

Technical Data

Model	TX3-XLR
Group	A/B
Channel	96(Group A 48; Group B 48)
RF Frequency Range	514MHz-596MHz
Oscillator Type	Crystal Controlled PLL Synthesizer
Audio Frequency Range	40Hz-18KHz
Sound Delay	12ms
Distortion	<0.5%
Antenna	1/4λ
Battery	Two AA batteries
Weight	158g(Battery is not contained)
Dimensions	107mmx51mmx34mm
Working Temperature Range	0°C~ 40°C
Storage Temperature	-10°C~ 40°C

Troubleshooting

1. Unable to receive audio signal. Make sure batteries are installed correctly and Power Switch is turned on. Check if the transmitter and the receiver are set to the same channel, if the microphone or earphone is well connected, or if the devices are set to the correct mode.
Check if the transmitter is set to silent mode or not.
2. Signal disturbance or shooting interference. Change a different
3. channel of the transmitter and receiver.
4. Operating audio distance limited or signal missing. Check if batteries are exhausted. If so, replace them.

Maintenance

Avoid sudden drops. The device may fail to work after strong shocks, impacts, or excess stress.

Keep dry. The product isn't waterproof. Malfunction, rust, and corrosion may occur and go beyond repair if soaked in water or exposed to high humidity.

Avoid sudden temperature changes. Condensation happens if sudden temperature changes such as the circumstance when taking the product out of a building with higher temperature to outside in winter. Please put the product in a handbag or plastic bag beforehand.

Keep away from strong magnetic field. The strong static or magnetic field produced by devices such as radio transmitters leads to malfunction.

Changes made to the specifications or designs may not be reflected in this manual.

FCC statement:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement.

The device can be used in portable exposure condition without restriction.

产品保修

尊敬的用户，本保修卡是申请保修服务的重要凭证，请您配合销售商填写并妥善保管，谢谢！

产品信息	型号	产品条码
用户信息	姓名	联系电话
	通信地址	
销售商信息	名称	
	联系电话	
	通信地址	
	销售日期	
备注		

注：此表应由销售商盖章确认。

产品信息

本文件适用于相关《产品保修信息》(见后面说明)所列产品，其他非属此范围的产品或部件(如促销品、赠品及其他出厂后附加的部件等)不在此保修承诺内。

保修期

产品及部件的相应保修期按相关的《产品保修信息》执行。保修期自产品首次购买日起算，购买日以购买产品时保修卡登记日期为准。

如何获得保修服务

要保修服务，您可直接与销售商或授权服务机构联系，也可拨打神牛产品售后服务电话，与我们联系，由我们的服务人员为您安排服务。申请保修时，您应提供有效的保修卡作为保修凭证，方可获得保修。如您不能提供有效的保修卡，则在我们可确认产品或部件属于保修范围的情况下，也可以为您提供保修，但这不作为我们的义务。

不适用保修的情况

如产品存在下列情况，本文件项下的保证和服务将不适用 ① 产品或部件超过相应保修期；② 错误或不适当使用、维护或保管导致的故障或损坏，如：不当搬运；非按产品合理预期用途使用；不当插拔外接设备；跌落或外力挤压；接触或暴露于不适当温度、溶剂、酸碱、水浸或潮湿环境；③ 由非神牛授权机构或人员安装、修理、更改、添加或拆卸造成的故障或损坏；④ 产品或部件原有识别信息被修改变更或删除；⑤ 无有效保修卡；⑥ 使用非合法授权、非标准或非公开发行的软件造成的故障或损坏；⑦ 因不可抗力或意外事件造成的故障或损坏；⑧ 其他非因产品本身质量问题导致的故障或损坏。遇上述情况，您应向相关责任方寻求解决，神牛对此不承担任何责任。因非在保修期或保修范围内的部件、附件或软件导致产品不能正常使用的，不是保修范围内的故障。产品使用过程中正常的脱色、磨损和消耗，不是保修范围内的故障。

产品保修和服务支持信息

产品的保修期和服务类型按以下《产品保修信息》执行：

产品类别	选项名称	保修期(月)	保修服务类型
部件	电路板	12	客户送修
	电池	3	客户送修
	充电器、电源线，同步线等带电性能的部件。	12	客户送修
其他	如闪光灯管、造型灯泡、外壳、保护罩、锁紧装置、包装等。	无	无保修

神牛产品售后服务电话 0755-29609320-8062

Warranty

Dear customers, as this warranty card is an important certificate to apply for our maintenance service, please fill in the following form in coordination with the seller and safekeep it. Thank you!

Product Information	Model	Product Code Number
Customer Information	Name	Contact Number
	Address	
Seller Information	Name	
	Contact Number	
	Address	
	Date of Sale	
Note		

Note: This form shall be sealed by the seller.

Applicable Products

The document applies to the products listed on the Product Maintenance Information (see below for further information). Other products or accessories (e.g. promotional items, giveaways and additional accessories attached, etc.) are not included in this warranty scope.

Warranty Period

The warranty period of products and accessories is implemented according to the relevant Product Maintenance Information. The warranty period is calculated from the day (purchase date) when the product is bought for the first time. And the purchase date is considered as the date registered on the warranty card when buying the product.

How to Get the Maintenance Service

If maintenance service is needed, you can directly contact the product distributor or authorized service institutions. You can also contact the Godox after-sale service call and we will offer you service. When applying for maintenance service, you should provide valid warranty card. If you cannot provide valid warranty card, we may offer you maintenance service once confirmed that the product or accessory is involved in the maintenance scope, but that shall not be considered as our obligation.

Inapplicable Cases

The guarantee and service offered by this document are not applicable in the following cases: ①. **The product or accessory has expired its warranty period;** ②. **Breakage or damage caused by inappropriate usage, maintenance or preservation, such as improper packing, improper usage, improper plugging in/out external equipment, falling off or squeezing by external force, contacting or exposing to the improper temperature, solvent, acid, base, flooding and damp environments, etc;** ③. **Breakage or damage caused by non-authorized institution or staff in the process of installation, maintenance, alternation, addition and detachment;** ④. **The original identifying information of product or accessory is modified, alternated, or removed;** ⑤. **No valid warranty card;** ⑥. **Breakage or damage caused by using illegally authorized, nonstandard or non-public released software;** ⑦. **Breakage or damage caused by force majeure or accident;** ⑧. **Breakage or damage that could not be attributed to the product itself.** Once met these situations above, you should seek solutions from the related responsible parties and Godox assumes no responsibility. The damage caused by parts, accessories and software that beyond the warranty period or scope is not included in our maintenance scope. The normal discoloration, abrasion and consumption are not the breakage within the maintenance scope.

Maintenance and Service Support Information

The warranty period and service types of products are implemented according to the following **Product Maintenance Information**:

Product Type	Name	Maintenance Period(month)	Warranty Service Type
Parts	Circuit Board	12	Customer sends the product to designated site
	Battery	3	Customer sends the product to designated site
	Electrical parts e.g. battery charger, power cord, sync cable, etc.	12	Customer sends the product to designated site
Other Items	Flash tube, modeling lamp, lamp body, lamp cover, locking device, package, etc.	No	Without warranty

Godox After-sale Service Call **0755-29609320-8062**