

Important Safety Instructions and Precautions

Godox LED lights, or products used with them, should only be operated by professionals. Carefully read and fully understand the instruction manual before use and strictly follow the safety instructions. Failure to do so may result in death, serious injury, damage to the product, or other property damage.



Danger

- For high-voltage (mains) powered products, use a socket with an earth protection device for power supply.
- Do not use damaged product. Stop using immediately if the product shell is cracked due to falling, squeezing, or strong impact, to avoid touching the internal electronic components and getting an electric shock.
- Please use only the accessories recommended by our factory to avoid fire, electric shock or personal injury. If an extension cord is required, use the original extension cord or one recommended by the manufacturer (an extension cord with a current rating greater than or equal to that of the equipment). Extension cords rated at less than that of the equipment may cause fire, electric shock, other serious personal injury hazards, or property damage.
- Use only intact ground connection cables or ground extension cables that have been expressly recognized by the manufacturer for use in the operation of powered products. Damaged or twisted connection cables must be replaced immediately! The product has a long input power cord, so please place the power cord in a safe position to avoid it coming into contact with overheated objects, being improperly placed and causing damage by pulling, or tripping over on-site personnel.
- Do not disassemble the product without permission. If the product malfunctions, it must be checked and repaired by authorized maintenance personnel. If the lamp bead is damaged or deformed by heat, stop using it, and contact the manufacturer, service agent or qualified maintenance personnel to replace the lamp bead in time to avoid accidents.
- Do not use and store this product in explosive atmospheres (near flammable volatile solvents such as alcohol, gasoline, or gases such as methane and ethane).
- When cleaning and repairing the product, turn off the power before unplugging the product's power cord from the power outlet. When not in use, do not pull the power cord to unplug the product from the power outlet. Unplug the product from the power outlet by grasping both ends of the plug with your hands.



Warning

- This equipment is not waterproof, please keep it dry and do not immerse it in water or other liquids. The equipment should be installed in a dry and ventilated place, and avoid using it in rainy, humid, dusty or overheated environments.
- Do not block or cover the heat dissipation port of the product.
- After use, the product should be completely cooled before packaging.



Attention

- All transport protective materials and packages on the product must be removed before use.
- When not in use, please turn off the product and stop the power supply promptly.
- Do not place equipment near flammable and volatile solvents such as alcohol and gasoline.
- The safety instructions are formulated according to the strict testing of the factory, and the design and specifications of the equipment are subject to change without prior notice. Customers can view the latest electronic instruction manuals on the official website of Godox and learn about the latest product information.

 
Foreword

Thank you for purchasing !

Adjustable diffusions AD21, AD32 and AD33 are designed for motorized precise adjustment of the luminousness. With built-in DMX, CRMX and Bluetooth control functions, they can realize innovative lighting solutions.



Names of Parts


Diffusion

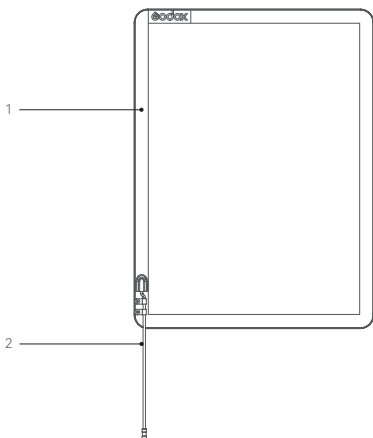

- 1. Velcro
- 2. Connecting Cable

  
 
Controller AD00-01

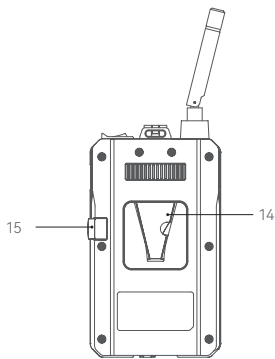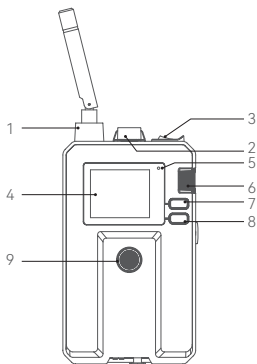

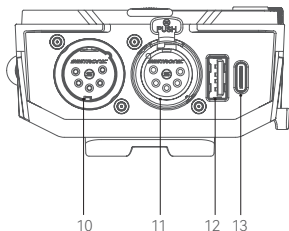

- | | |
|----------------------------------|-----------------------------------|
| 1. Antenna Interface | 8. MENU Button |
| 2. AC Output Port | 9. Adjust Pole |
| 3. Power Switch Button | 10. DMX IN Port |
| 4. Display | 11. DMX OUT Port |
| 5. Wireless DMX Status Indicator | 12. USB-A Port |
| 6. SET Button (rotate/press) | 13. USB-C Port |
| 7. MODE Button | 14. V-mount Battery Mounting Base |
| | 15. Battery Detaching Pusher |

  Controller AD00-02

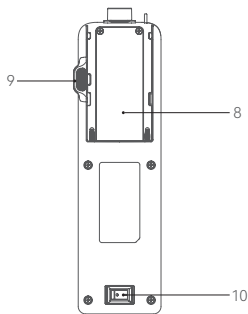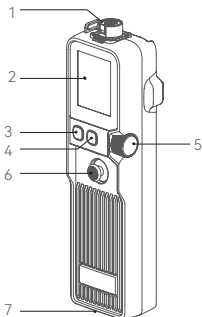

- | | |
|-----------------|----------------------------|
| 1.AC Input Port | 6.Adjust Pole |
| 2.Display | 7.USB-C Port |
| 3.MENU Button | 8.NPF Battery Slot |
| 4.MODE Button | 9.Battery Detaching Pusher |
| 5.SET Button | 10.Power Switch Button |

What's Inside AD21



Adjustable Diffusion
AD21-01 ×1



Bracket AD21-02 ×1



Controller AD00-01 ×1



USB-C Data Cable ×1



AC Signal Control
Cable ×1



D-TAP to USB-C
Adapter Cable ×1



Instruction
Manual ×1

What's Inside AD21 K1



Adjustable Diffusion
AD21-01 ×1



Bracket AD21-02 ×1



Controller AD00-02 ×1



AC Signal Control Cable ×1

 


Instruction Manual ×1

What's Inside AD21 K2



Adjustable Diffusion
AD21-01 ×1



Bracket
AD21-02 ×1



Controller
AD00-01 ×1



USB-C Data
Cable ×1



Storage Bag ×1



AC Signal Control
Cable ×1

 


D-TAP to USB-C
Adapter Cable ×1



Instruction
Manual ×1

What's Inside AD21 K3



Adjustable Diffusion AD21-01 ×1



Bracket AD21-02 ×1



Controller AD00-02 ×1



Storage Bag ×1



AC Signal Control Cable ×1

 


Instruction Manual ×1

What's Inside AD32



Adjustable Diffusion
AD32-01 ×1



Bracket AD32-02 ×1



Reel ×1



Controller AD00-01 ×1



USB-C Data Cable ×1



AC Signal Control
Cable ×1



D-TAP to USB-C
Adapter Cable ×1



Instruction
Manual ×1

What's Inside AD32 K1



Adjustable Diffusion
AD32-01 ×1



Bracket AD32-02 ×1



Reel ×1



Controller AD00-02 ×1



AC Signal Control Cable ×1



Instruction Manual ×1

What's Inside AD32 K2



 
Adjustable Diffusion
AD32-01 ×1



Bracket AD32-02 ×1



Reel ×1



Tube ×1



Controller AD00-01 ×1



USB-C Data Cable ×1



AC Signal Control Cable ×1



Storage Bag ×1



D-TAP to USB-C
Adapter Cable ×1



Instruction Manual ×1

What's Inside AD32 K3



Adjustable Diffusion
AD32-01 ×1



Bracket AD32-02 ×1



Reel ×1



Tube ×1



Storage Bag ×1



Controller
AD00-02 ×1

 


AC Signal Control
Cable ×1




Instruction
Manual ×1

What's Inside AD33

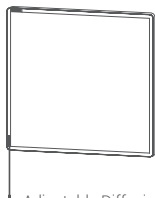

Adjustable Diffusion
AD33-01 ×1

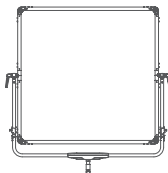 

Bracket AD33-02 ×1



Reel ×1



Controller
AD00-01 ×1



USB-C Data Cable ×1



AC Signal Control
Cable ×1

 


D-TAP to USB-C
Adapter Cable ×1




Instruction
Manual ×1

What's Inside AD33 K1

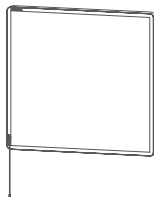

Adjustable Diffusion
AD33-01 ×1

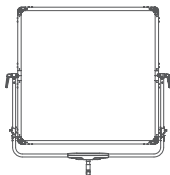 

Bracket AD33-02 ×1



Reel ×1



Controller AD00-02 ×1

 


AC Signal Control Cable ×1




Instruction Manual ×1

What's Inside AD33 K2

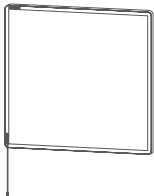

Adjustable Diffusion
AD33-01 ×1

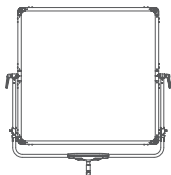 

Bracket AD33-02 ×1



Reel ×1



Tube ×1



Controller AD00-01 ×1



USB-C Data Cable ×1



AC Signal Control Cable ×1



Storage Bag ×1



D-TAP to USB-C
Adapter Cable ×1



Instruction Manual ×1