

SIE Speaker –In-The-Ear
RITE Receiver-In-The-Ear
Wireless MFI Hearing
Instrument
U56 Series

(LOGO)

Rev 07/18

1


PARTS OF YOUR HEARING AID

SIE Serial #ID: *56

*Indicates # of channels Example

1 = U32 3 = U64 5=U128 SQ556 – U128

2 = U48 4 = U96

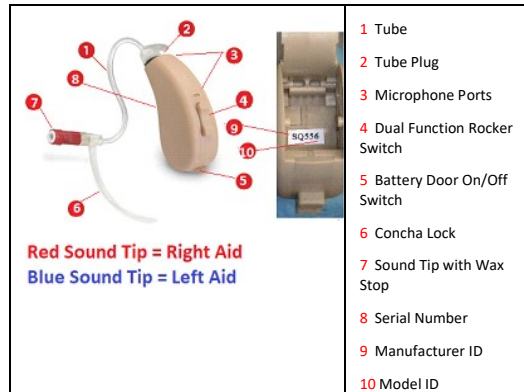

TUBING & BATTERIES

REMOVAL: Grasp the connector firmly. **Do not pull the tubing itself as it can become stretched and distorted.** Insert finger nails into the finger nail grooves. Pull straight out. DO NOT TWIST.



ATTACHMENT: Align the tube plug (tubing facing down) with the opening. Apply gentle pressure until the plug starts into the socket. Push firmly until the plug clicks into place.

A zinc-air type 13 battery is recommended but any 13 type or brand may be used. To insert, remove the adhesive label and wait thirty seconds for air activation. Any moisture on the battery surface should be wiped off. With the positive side up, insert into the battery door. To remove, open the battery door and lift the battery out of the battery door.

Low battery indicator. When your battery is low and in need of replacement you will hear the low battery voice prompt. The prompt will be repeated until the battery is changed.

BATTERY SAFETY INFORMATION

Hearing Aid Batteries Are Dangerous If Swallowed - Keep out of the reach of children or anyone who may accidentally swallow them. Never put batteries in pill containers where they may be mistaken for medication and swallowed. Use the batteries recommended by your hearing care professional. Batteries of low quality may leak and cause bodily harm. Never attempt to recharge your batteries. They may explode and cause serious injury. Do not expose your batteries to heat, such as an open flame, microwave, or oven. There is a risk that they will explode and cause serious injury. Please discard old batteries in a safe place.

Visit <http://www.poison.org/prevent/battery.asp> to learn more important information about battery safety

If a battery or hearing instrument is swallowed, see a doctor immediately and call the National Capital Poison Center 202-625-3333

INSERTING HEARING AIDS



Inserting your hearing instruments for the first time can be challenging. Until your hearing aid is fully inserted there can be feedback (whistle). We suggest that you practice without the battery until you have perfected the procedure. With practice, inserting your hearing aids will become as easy as putting on your glasses.

1. Grasp hearing aid between your thumb and forefinger.
2. Place it over your ear as shown.
3. Gently push the ear tip into the ear canal.
4. Tuck the concha lock into the bowl of your ear,

When positioned correctly your hearing aid is practically invisible.

Note: It is important to remove the instrument by grasping the instrument itself. Please DO NOT remove the instrument by pulling the tubing as it can become stretched and distorted and may void the warranty.

ON/OFF VOLUME CONTROL



OFF

After inserting the battery, close the door completely to turn the unit on. Turn the unit off by opening the battery door to the first stop (click). Opening the battery door each time you remove your hearing aids will prolong the life of the batteries.



Dual Function

Rocker Switch

Once the battery door is completely shut, you will hear the unit turn on. Each time you press the Dual Function Rocker Switch either higher or lower, you will hear a quick double tone.

- Press and release, do not hold down rocker switch to adjust volume.
- Once you've reached either the maximum or minimum limit, you will no longer hear the indicating tone.
- Adjust the volume to a comfortable listening level.

PROGRAM SELECTION



- The instrument features four listening programs. Programs 2, 3 and 4 are for use in special listening situations as needed.
- To change programs simply press and hold the Dual Function Rocker switch (either up or down) for 2 seconds. A voice prompt will announce the program change.
- Press and hold again to change to next program.
- Program one is automatically selected when the hearing aid is turned on. Program one is the program of choice for most listening situations.



Brush wax/debris
from
sound port daily



Tip Replacement

Recommend bringing
in to your hearing
specialist for tip
replacement

Wax buildup is the number one cause of instrument failure. It is important to keep your instruments as clean as possible.

Daily wipe your instruments, tubing, sound tip, ear tips and/or domes clean with a soft, dry cloth, carefully removing any traces of wax and debris. A brush is provided to further assist you in cleaning.

After being disconnected from the tubing, your ear tips and domes can be washed in lukewarm water with a mild detergent. Reconnect after drying thoroughly.

**PLEASE DO NOT WASH
TUBES**

WAXSTOP INSTRUCTIONS

Removal Side



New Wax Stop
Side

Wax stop is inserted in the sound tip to prevent ear was from damaging the hearing aid speaker.



Wax stop Removal: Firmly press the removal tip into Wax stop until it clicks into place. Pull Wax stop from sound tip.



Wax stop Insertion: Insert new Wax stop into sound tip, pull the tool straight out. The tool will release and the Wax stop will remain in place. Press Wax stop firmly into sound tip making certain that is fully inserted

Wax stops can be cleaned in hot water with a mild detergent, drying thoroughly and then reused.

Recommend bringing into your hearing specialist routinely for Wax Stop replacement

ACCESSORIES



Wax Stops



Storage Case



or




Cleaning Tool

Your hearing instruments are shipped with a variety of accessories, a sampling pictured above, including the following:


Carrying Case (Storage Case)
1 card of batteries
Battery holder
Wax Stop
Cleaning Tool

If you have any questions about the use of these accessories please contact your hearing care professional.


Standard Tube

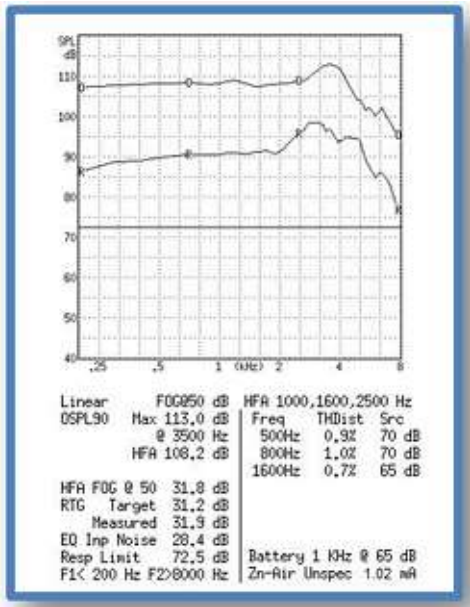


Power Tube

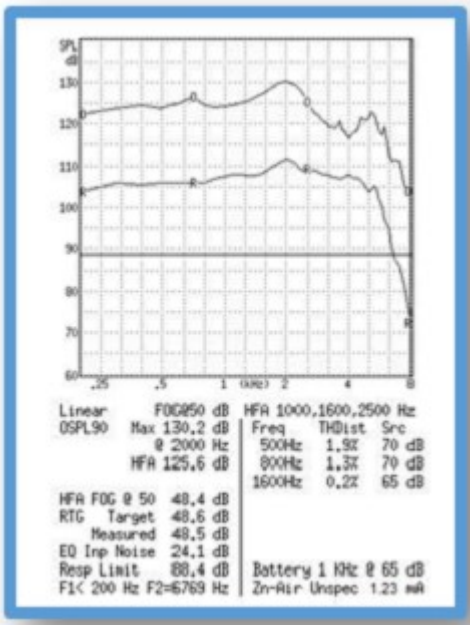

HiFit 110 Tube

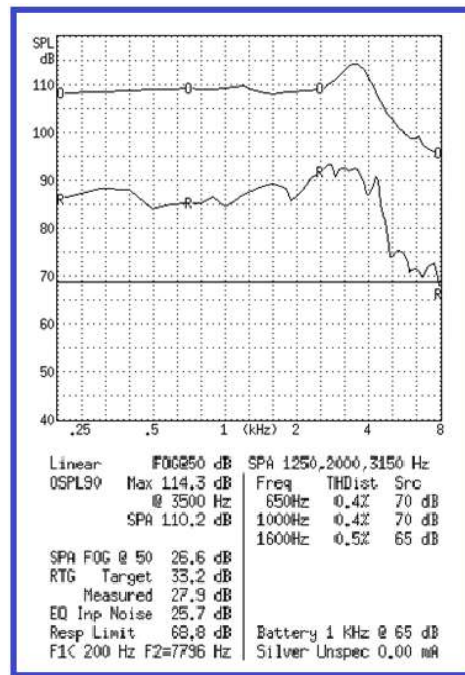

HiFit 125 Tube

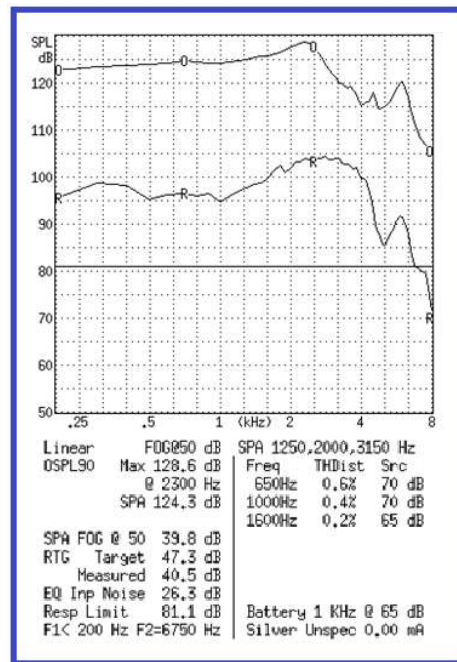

FCC INFO (pending)

Model: 1560/1562/1565/1566, 2560/2562/2565/2566, 3560/
3562/3565/3566, 4560/4562/4565/4566,
5560/5562/5565/5566

Model No. Last Digit = 0 Supplied with Standard RITE Tube

Model No. Last Digit = 2 Supplied with Power RITE Tube

Model No. Last Digit = 5 Supplied with HiFit 110 RITE Tube

Model No. Last Digit = 6 Supplied with HiFit 125 RITE Tube

FCC ID: 2AC2WSQ-U56

FCC Regulator Statements

This device complies with Part 15 of the FCC Rules,
Operation is subject to the following two conditions: (1) this
device may not cause harmful interference, and (2) this device
must accept any interference received, including interference
that may cause undesired operation

NOTE: THE GRANTEE IS NOT RESPONSIBLE FOR ANY
CHANGES OR MODIFICATIONS NOT EXPRESSLY
APPROVED BY THE PARTY RESPONSIBLE FOR
COMPLIANCE SUCH MODIFICATIONS COULD VOID
THE USER'S AUTHORITY TO OPERATE THE
EQUIPMENT



Sound Quest, LLC
806 Beaver Street
Bristol, PA 19007
267-543-0058

EC

REP

EMERGO EUROPE
Prinsessegracht 20
2514 AP The Hague
The Netherlands

Label C Rev E

Distributed by: HLT
14301 FAA Blvd, Ste 105
Ft. Worth, TX 76155 USA




Transport & Storage



70° C

-25



0 to 90%,
700hPa to 1060 hPa

IPX2

Label E Rev NEW