

QUICK START GUIDE

快速使用指南

CSO

PROFESSIONAL WIRELESS GAMING MOUSE | 专业无线电竞鼠标

血翼—全球首家专业无线游戏外设品牌，拥有国内资深IT外观设计师，并聘请瑞士高级工程师精湛技术指导，做不断前行的勇者，坚持将自己的奇思妙想付诸设计，永不妥协，随顺灵感深邃的创意，赋予了血翼电竞鼠标的独特魅力。

血翼的商标以骷髅头为原型，其创意灵感源自冥界使者，在人与冥界间恣意驰骋，将一切邪恶势力收入冥向冥界审判，呼啸而去，风卷残云、魂飞魄散，天地为之失色，乾坤为之颠倒，人人闻风丧胆。

包装内容:

- CSO无线鼠标
- 迷你接收器
- 两节AA碱性电池
- 快速操作指南
- 合格证/质保卡

Package contents:

- CSO Wireless mouse
- Nano Receiver
- 2 AA alkaline battery
- Quick start guide
- Warranty card

使用前安装说明 Quick start guide

1. 将电源开关打开至ON状态。Switch to the On state.

2. 打开电池盖。Open the battery case.

3. 插入电池(正负极正确)。Insert the battery (pay attention the positive and negative position).

4. 取出接收器。Remove the receiver.

5. 插入电脑USB接口。Insert the computer USB interface.

按键介绍 Function introduction

标准按键模式: The standard game mode - 左键单击功能: The left key - 右键单击功能: The right key - 中键单击: Roller - 侧键单击: X2 Button - 侧键单击: Page up - 侧键单击: Page down - 侧键单击: Rediation	电竞按键模式: The esports game mode - 左键单击功能: The left key - 右键单击功能: The right key - 侧键单击: Roller - 侧键单击: X2 Button - 侧键单击: Page up - 侧键单击: Page down - 侧键单击: Rediation
---	--

游戏模式操作特点 The game mode operating instructions

使用游戏模式功能时，请打开开关250Hz/500Hz的位置。电源开关已打开至ON或X2单击模式。The use of game mode should ensure that the switch is in the 250 or 500 position, the power switch is opened to On or X2 click light mode.

游戏火力加速键
游戏火力加速键在电竞模式下，游戏火力加速键，可快速提升游戏帧率，提升游戏体验。
X2 Button
Press the X2 button in game mode 2 times through the fire, waiting for speed.

电竞火力加速键
电竞火力加速键在电竞模式下，游戏火力加速键，可快速提升游戏帧率，提升游戏体验。
X2 Button
Press the X2 button in game mode 2 times through the fire, waiting for speed.

电竞火力加速键
电竞火力加速键在电竞模式下，游戏火力加速键，可快速提升游戏帧率，提升游戏体验。
X2 Button
Press the X2 button in game mode 2 times through the fire, waiting for speed.

视频控制模式操作特点 Video control mode operating instructions

使用视频控制模式功能时，请打开开关250Hz/500Hz的位置。电源开关已打开至ON或X2单击模式。The use of video control mode should ensure that the switch is in the 250 or 500 position, the power switch is opened to On or X2 click light mode.

视频控制模式播放/暂停控制
在游戏模式下，按下播放/暂停键，可快速播放/暂停游戏。The use of video control mode should ensure that the switch is in the 250 or 500 position, the power switch is opened to On or X2 click light mode.

电竞火力加速键
电竞火力加速键在电竞模式下，游戏火力加速键，可快速提升游戏帧率，提升游戏体验。
X2 Button
Press the X2 button in game mode 2 times through the fire, waiting for speed.

电竞火力加速键
电竞火力加速键在电竞模式下，游戏火力加速键，可快速提升游戏帧率，提升游戏体验。
X2 Button
Press the X2 button in game mode 2 times through the fire, waiting for speed.

常见问题解答 Trouble shooting

问题一：鼠标没有反应？
1. 请检查鼠标是否已正确安装并连接正确。
2. 请检查鼠标是否已正确安装并连接正确。
3. 请检查鼠标是否已正确安装并连接正确。
4. 请检查鼠标是否已正确安装并连接正确。

Question one: no any function
1. Please check if the mouse is correctly connected according to the mark for the positive and negative inside the battery compartment.
2. Please check if the mouse is correctly connected according to the mark for the positive and negative inside the battery compartment.
3. Please check if the mouse is correctly connected according to the mark for the positive and negative inside the battery compartment.
4. Please check if the mouse is correctly connected according to the mark for the positive and negative inside the battery compartment.

数据参数 Data parameter

基础参数: - 无线数据接口: 1Mbps - 频率: 2402MHz~2480MHz - 频道: 16个 - 引擎: 光学 - 距离: 20m - 工作电压: 3V - 待机电流: 15mA - 接收功率: 500mW以上 - 产品尺寸: 130x45x40mm - 产品重量: 128g	Basic: - Data transmission: 1Mbps - Frequency: 2402MHz~2480MHz - Channel: 16 - Engine: Optical - Distance: 20m - Voltage: 3V - Current: 15mA - Key life: Above 5 millions - Size: 130x45x40mm - Weight: 128g
阶梯工作电压: - 工作电压: 15mA - 待机电流: 1.3mA - 快速充电: 550mA - 光敏状态: 10-25mA	Step current: - Working current = 15mA - Standby current = 1.3mA - Dormancy current = 50uA - No receiver state = 10-25uA
追踪性能: - 分辨率: 800~1600~2400~4000DPI - 回报率: 250Hz~500Hz - 最大加速度: 20G	Tracking performance: - Resolution: 800~1600~2400~4000DPI - Rate of return: 250Hz~500Hz - Max. accel. action: 20G
系统支持: - IBM或兼容计算机 - Windows 2000/ ME/ XP/Vista - Mac OS X/Vi10.4/以上 - 一个可使用的USB接口	System requirement: - IBM or compatible computer - Windows 2000/ ME/ XP/Vista - Mac OS X/More than Vi10.4 - Workable USB port

质保条款 Warranty

本设备提供自购买之日起1年的有限产品保修服务。具体详情请参阅质保卡相关内容。
The device provides a one-year limited warranty service from the date of purchase. Please refer to the content of the warranty card for details.

请不要打开保修服务。请不要在保修期内使用非原厂配件。请妥善保管设备。
Please do not open or repair the equipment. Please do not use the device in the repair environment. Please keep the device safe.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

110x150mm 骑马订 封面材质200克书写纸过局部UV 内页128双铜

PMS 7466C

UV

质保条款 Warranty

本设备提供自购买之日起1年的有限产品保修服务。具体详情请参阅质保卡相关内容。
The device provides a one-year limited warranty service from the date of purchase. Please refer to the content of the warranty card for details.

请不要打开保修服务。请不要在保修期内使用非原厂配件。请妥善保管设备。
Please do not open or repair the equipment. Please do not use the device in the repair environment. Please keep the device safe.