



List of articles

EDGE Bluetooth speaker; 1 pcs

Cable; charging cable 1 pcs, audio cable 1 pcs

Instruction manual; 1 pcs

Warranty card and certificate of conformity; 1 pcs



Specification

Dimension; 66*66*66mm

Wireless distance; approximately 10m in the open place

Specification of loudspeaker; 50 mm loudspeaker

Rated power; 3 W

Play time; approximately 5 h (medium volume)

Charging time; approximately 3 h


Power supply mode; built-in lithium battery

Times of power supply; ≥ 500 times



Product diagram

For design of product keys, keys at the bottom can be triggered by pressing the top of product

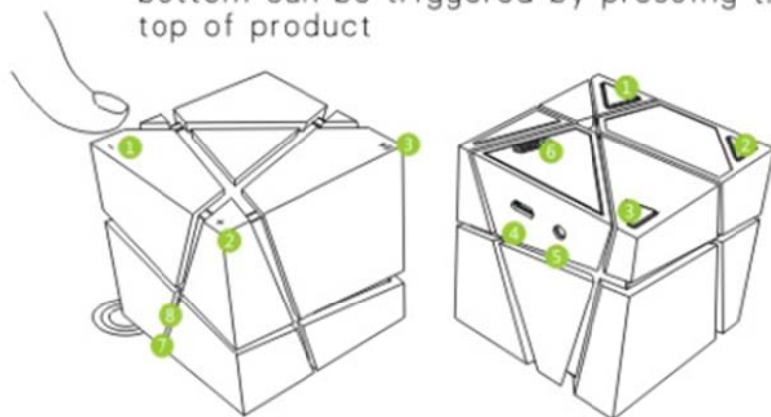

- ① — Volume down
- ② + Volume up
- ③ ||| Play/pause
- ④ ⚡ MICRO USB charging interface
- ⑤ AUX 3.5 mm audio interface
- ⑥ Power switch
- ⑦ Microphone hole
- ⑧ Charge indicator light



Operation details

1. Turning on the speaker

Turn the power switch at the bottom to ON position, and speaker lamp will be illuminated, "sword" warning tone will be given off at the same time.

2. Code matching

Turn the Bluetooth switch of device on and click the option to connect the device after searching "EDGE@LOFREE" device, the speaker will give off warning tone and LED lamp will be always on after connection.

Automatic connection

Turn on and off Bluetooth speaker in turn again after Bluetooth speaker is matched, and speaker will be matched automatically with the original device. After matching, Bluetooth connection will be off when wireless distance is out of the scope; speaker will be connected automatically again, when wireless distance is within the effective scope. LED lamp will be always on after connection.

3. Manual code matching

You can keep "Play" key pressing to match code manually when Bluetooth speaker fails to match code or is required to make code again; warning tone will be given off and LED lamp will flash slowly at this moment. Warning tone will be given off and LED lamp will be always on after successful code making. (You can keep "Play" key pressing at any time except connected status)

4. Playing music

Music in Bluetooth devices such as mobile phone or computer can be played directly after connecting Bluetooth speaker. Press symbol

" + / - " , and the volume can be adjusted . When the volume is the highest , warning tone will be given off .

5 . Answering the phone

When the music is playing in the form of connection between speaker and mobile , phone speaker will suspend the music and play warning tone for incoming call on telephone access and LED lamp will flash rapidly and discontinuously ; you can press " Play " key to answer the phone at this moment . LED lamp will be always on after answering the phone ; you can press the key again to hang up and also can keep the key pressing to hang up directly . The music will go on playing after hanging up .

6 . Line in audio inputting

Playing is realized by connecting 3.5 mm standard audio interface and devices such as mobile phone . When you input Line in audio , Line in audio takes precedence over Bluetooth one and LED lamp is always on . (When you input Line in , the functions for keys of Bluetooth speaker are invalid and you cannot adjust the device until functions such as volume and play / pause are accessed .)

7 . Charging

There will be warning tone of low battery when power is running out . You need to charge up the product through Micro USB port at this time . Red indicator lamp will be illuminated during charging and will be off after charging .



Remarks

1 . Reminder for inputting verification code

Please input " 0000 " when there is a reminder for inputting verification code .

2. Matching fails

When matching fails, you can attempt to keep "Play" key pressing to match manually; when listening warning tone of manual matching, you can search Bluetooth speaker for matching.

3. Speaker charging

You can connect Micro USB cable into USB port of computer or USB 5 V adapter to charge up the speaker; red LED lamp of speaker will be always on during charging. It takes approximately 3 hours to finish the charging and USB cable can be pulled up after charging.

4. Noise of speaker

Speaker will give off noise when speaker fails to lie flatly or there is vibration under the speaker; therefore, please choose appropriate position. The sound may distort when volume is too high or power is too low, and you need adjust the volume appropriately or charge up the speaker timely.

5. Line in function

Priority will be given to Line in, for example, when both Bluetooth and Line in are connected, you cannot hear warning tone for incoming call and alarm, which will bring inconvenience to you. Therefore, you had better disconnect Bluetooth function when inputting Bluetooth function.

FCC Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.