

MaxStone

SmartPhone your camera




User Manual


Brand name:MAXMAX

Model name:MSA21

FCC ID:2AC5PMSA21

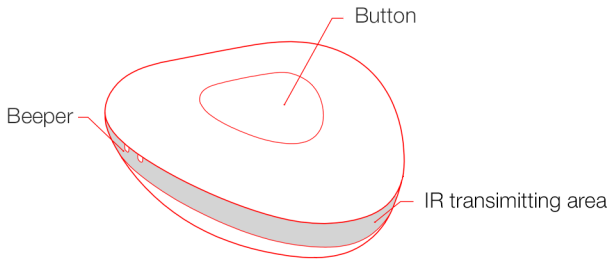

structure of MaxStone

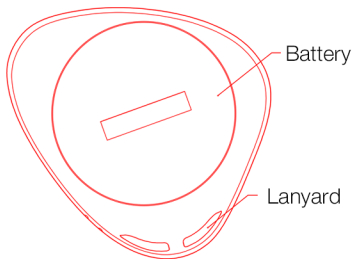

|| Battery ||

CR2032 battery x1

IOS App


Search **“MaxStone”** in AppStore

For iPhone 5s / iPhone 5c / iPhone 5 / iPhone 4s / iPad Air
New iPad / iPad 4 / iPad mini / New Touch

Android App

Search **“MaxStone”** in Google Play


For Android 4.2 (only SAMSUNG) / Android 4.3 / Android 4.4

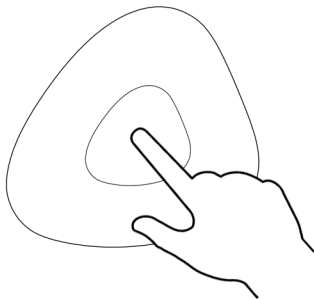

Power on

Press for seconds till a beep

NOTE: MaxStone can not be powered off,
even when chenging a new battery.

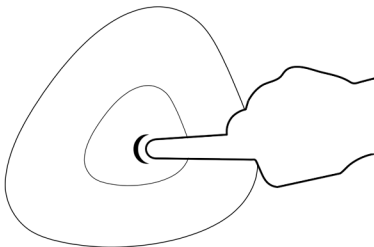

.....Match to phone.....

For your first use, please follow the guidance by the MaxStone App.
When hearing a hurry beep by MaxStone, press the contral button to complete.




|| Step 1 ||

Tie MaxStone to your camera, next to IR receiver




Step 2

Set your camera to remote control mode

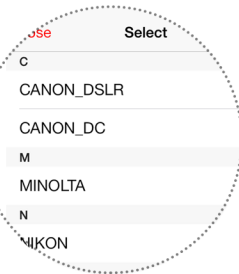

⋮ Step 3 ⋮

Launch MaxStone APP, select
your camera brand in APP,
and let's start!

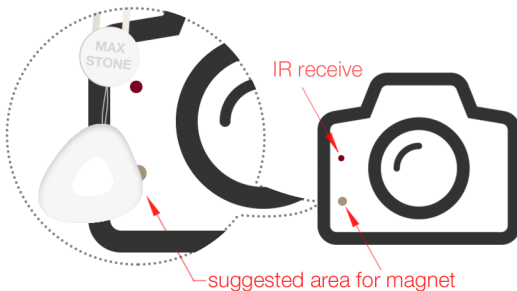

Use the magnet accessories

For a more convenient user experience, use the magnet in the accessories to stick your MaxStone (first stuck with the magnet by a double-sided adhesive) onto your camera. Any area near to the IR receiver of your camera is recommended.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.