

IQ sound[®]



IQ-1510WK

USER MANUAL


IQ sound[®]



IQ-1510WK

Please read this manual before using the speaker

Control panel description

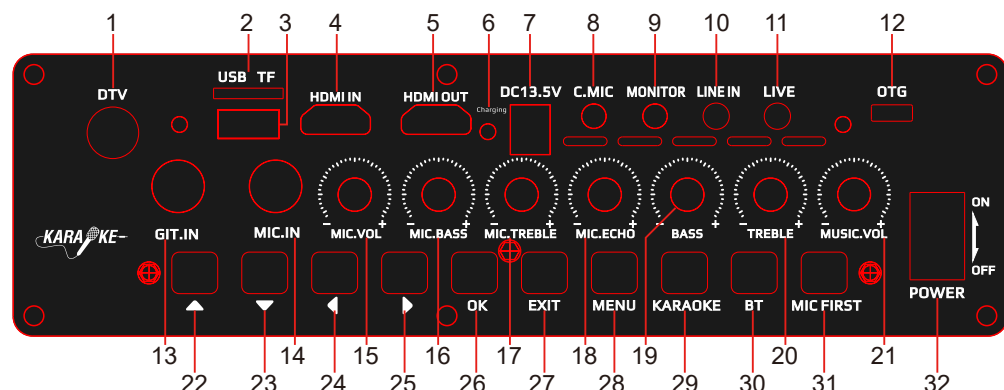

1. DVT: DIGITAL TELEVISION.
2. TF: TF CARD INPUT.
3. USB : USB INPUT.
4. HDMI INPUT.
5. HDMI OUTPUT : HDMI OUTPUT ALLOWS TO CONNECT THE DEVICE TO THE TV.
6. CHARGING INDICATOR LIGHT .
7. DC 13.5V CHARGING PORT.
8. CONDENSER MICROPHONE INPUT.
9. MONITOR : SET MUTE SPEAKER ENABLE/DISABLE, HEADPHONE/EXTRA SPEAKER WILL KEEP WORKING.
10. LINE IN.
11. LIVE INPUT.
12. OTG : USB TYPE C LIVE AUDIO PORT.
13. GUITAR INPUT.
14. MIC INPUT: WIRED MICROPHONE INPUT.
15. MICROPHONE VOLUME: TURN LEFT MICRPHONE VOLUME DECREASE, TURN RIGHT MICRPHONE VOLUME INCREASE.
16. MIC BASS: TURN LEFT MICRPHONE BASS DECREASE, TURN RIGHT MICRPHONE BASS INCREASE.
17. MIC TREBLE: TURN LEFT MICRPHONE TREBLE DECREASE, TURN RIGHT MICRPHONE TREBLE INCREASE.
18. MIC ECHO: TURN LEFT MICRPHONE ECHO EFFECT DECREASE, TURN RIGHT MICRPHONE ECHO EFFECT INCREASE.
19. BASS: TURN LEFT BASS DECREASE, TURN RIGHT BASS INCREASE.
20. TREBLE: TURN LEFT TREBLE DECREASE, TURN RIGHT TREBLE INCREASE.
21. MUSIC VOLUME: TURN LEFT VOLUME DECREASE, TURN RIGHT VOLUME INCREASE.
22. UP KEY.

23. DOWN KEY.
24. LEFT KEY.
25. RIGHT KEY.
26. OK: KEY TO CONFIRM THE SELECTION.
27. EXIT KEY.
28. MENU: EFFECTS MODE SELECTION.
29. KARAOKE: SHORT PRESS TO TURN ON/OFF THE KARAOKE.
30. BT MODE.
31. MIC FIRST: SHORT PRESS TO TURN ON/OFF MICROPHONE PRIORITY.
32. POWER ON/OFF.

Remote control Function

1. POWER : Standby button.
2. MUTE KEY.
- 3-6. Channel Editing.
7. Media Files .
8. MIC PRIORITY.
9. Settings.
10. APP KEY.
11. Play/Pause
12. BT.
13. TV.
14. Sound Effects
15. PREV: Previous song/ channel.
16. Rewind .
17. Fast Forward
18. NEXT: Next song/channel.
19. Home.
20. Source .
21. Up Key.
22. Down Key.
23. Left Key.
24. Right Key.
25. Menu Key.
26. Back Key.
27. Volume +.
28. Volume - .
29. Digital Television Electronic Program Guide .
30. Program Information .
31. Channel + .
32. Channel - .
33. Digital Zone .
34. Separator .
35. Previous Program .
36. OK: Key to confirm the selection.



BT CONNECTION

Press BT and then the phone to connect.
The name of the connected BT is IQ-1510WK.

What's included...

1xKaraoke Machine
2xWireless Microphones
1xRemote Control
1xPower Adapter
1xUser Manual

WI-FI CONFIGURATION

Touch the WIFI icon on the home screen, or press the UP-DOWN-LEFT-RIGHT keys on the remote control, until you reach the desired icon, then press the OK key.
After selecting WIFI, scroll down the list of functions to Wi-Fi and press OK (or select the function by touching the screen). Select the desired network and enter the password required, if any, for connection.

BT® CONNECTION (IQ-1510WK)

Touch the MODE icon from the Home screen, or press the MODE button to start the BT connection. Open your device settings in the BT section and select the " IQ-1510WK " device.
Select the setting that allows to connect the 2 devices.
You can now listen to music files on your device through the IQ-1510WK device.
Press the PREV/NEXT buttons to choose tracks.
Press the PL/PA key to pause or restart a paused track.
Press the EXIT key to exit BT mode.

DEVICE SETTINGS

To access, use the UP-DOWN-LEFT-RIGHT buttons on the remote control or directly touch the SETTINGS icon on the screen.
Press the exit key or the arrow icon in the bottom right corner to exit a function.
You can adjust some functions of the device in the settings section by following the directions on the screen.


DATE and TIME SETTING:

Connecting the machine to wi-fi, date and time will automatically update. If this not happens, due to connection problems, you can follow these steps:

- 1 - From the home page, touch "SETTINGS" icon and select DATE & TIME;
- 2 - Tap "Select time zone" and look for the time zone of your country. If you can't find it, select a city that has the same time zone of your Country.
- 3 - Before going back to the home page, tap "automatic date & time" .

LANGUAGE SETTING:

select "Languages and Input," then "Languages." Continue with "more language," and choose the desired language. The language will automatically change.
To back up your data and files, or go to factory data reset, go to Reset options.
Youtube, Google Play ,Google Chrome are pre-installed apps and cannot be uninstalled.
To uninstall other apps, push the icon and follow the instructions.

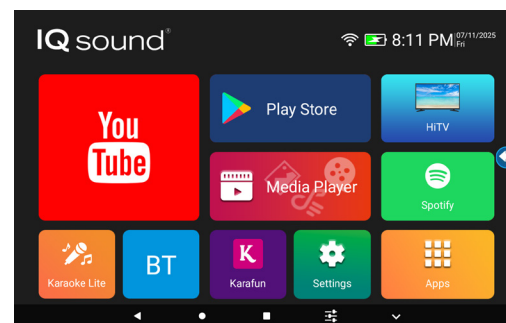

HOME PAGE

IQ-1510WK settings icon is displayed on the Homepage. Use the UP/DOWN/RIGHT/ LEFT buttons on the remote control to choose the desired function on the HOME PAGE, then press OK, or directly touch the icon on the screen and follow the instructions. No Internet connection is needed for BT ,AUX, USB Flash Drive and TF Card to work.
A WI-FI/Internet connection is required to run YouTube, Google Play and any other apps in the "My Apps" section.

TECHNICAL FEATURES:

SCREEN DIMENSION	15"
SPEAKER POWER	40W RMS
SPEAKER	10" WOOFER

Low battery reminder:

The red light flashes slowly when the AAA battery power of the product is lower than 2v. It means that the battery need to be replaced at this time.

MICROPHONE

- Press the switch on the microphone, the microphone to turn on or off.
- The microphones will connect the IQ-1510WK device automatically.

Troubleshooting Guide

1.Machine is not turning on.

The battery is depleted. Be sure to charge the machine after each use.

2.Touch screen is not turning on.

Turn off the power and then turn it back on.

3.USB or TF mode is not working.

Ensure that the touch screen is set to the right mode by going to the Media Player app and pressing the icon for your selected input. Alternatively, try unplugging either the USB or TF from the machine and turning it off. Turn the machine back on, plug the USB or TF back in, enter the Media Player app on the touch screen, and press the icon for your selected input.

4.Machine powers on and then shuts down.

Please charge the machine.

5.No sound is playing from the speaker.

Ensure that the volume on the machine, remote, and your device (if applicable) are all turned to an audible level. Also check to see whether you are on MUTE by pressing MONITOR on the control panel.

6.Button or knob on the machine/remote control is not working properly.

Power off the machine and turn it back on.

WARRANTY

Supersonic Inc. ("Supersonic") warrants this product to the original purchaser ONLY, to be free from defects in materials and workmanship under normal use, for ninety (90) DAYS from the date of original purchase. Proof of purchase (receipt) required. Please visit <https://www.supersonicinc.com/pages/warranty> for additional information.

FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- - Reorient or relocate the receiving antenna.
- - Increase the separation between the equipment and receiver.
- - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- - Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement.
The device can be used in portable exposure condition without restriction.

产品名称	中文/Chinese:音箱
Product Name	英文/English: Speaker