

Connecting to meMINI
To connect your smartphone to your meMINI camera, open the meMINI smartphone application and follow the on screen prompts.
Wireless password - Direct Connection
If you choose to connect your smartphone to your camera using Wi-Fi, the password for meMINI is: 12345678
Quick connect
To connect directly to your camera from your smartphone, press the power button once while the power is on to turn on the cameras Wi-Fi, then connect your phone's Wi-Fi to the camera.

Connect

The Basics

Tutorial videos
Goto www.memini.com/getstarted to see all our tutorial videos. If what you need isn't there email us with your question to help@memini.com.

Camera Software Updates
Your meMINI Smartphone application will automatically download updates when they become available. You will be prompted in the meMINI Smartphone application to install these updates. These updates contain vital software for your camera that can include bug fixes and upgrades, with new features and functions. Make sure you download all available updates to ensure the best experience possible with your camera.

www.memini.com

Location
The LED lights that are on top of your meMINI camera provide you with helpful information to the current status of your camera.

Red/Green - Battery Status	100% - 10% battery
Solid Green	Slow Red Flash
10% - 5% of battery	Rapid Red Flash
Out of battery	White - Record Status
Recall mode	Slow Flash
Video captured	Rapid flash
Blue - Wi-Fi and Bluetooth (BLE) Status	Slow Flash
BLE/Wi-Fi On	Solid
Connected to Network	Rapid Flash
Uploading to cloud	White

Blue
Red & Green



Camera Status


The Basics

Turning your meMINI on and off
Press the power button once and wait for the LED's to flash briefly, leaving the Battery Status light on. The White LED will begin to flash after 5 seconds.
Recording a video moment
The meMINI camera by default will begin monitoring your environment when you turn it on. To save a video of something that just happened, press the Recall button once.
Viewing your moment
Plug the meMINI camera into charge to initiate the camera to upload to the cloud, or you can use the meMINI app to view the videos on your camera.



Magnatach is our innovative system that uses strong magnets to attach the camera to your clothing
Test First!
Make sure you check the strength of the Magnatach when you wear the camera with a new item of clothing. When wearing the camera with thick clothing or while being active, use one of the supplied safety lanyards.
Thinner is better
The strength of Magnatach is reduced if you wear thick clothing.

Outside clothing
Inside clothing

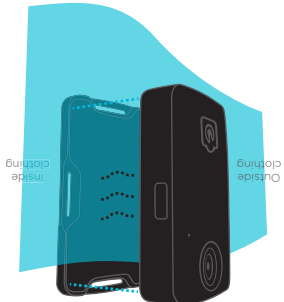

Wearing meMINI

Getting started

- Step 1
Download the "meMINI Camera" application from the Google Play Store or Apple Store.
- Step 2
Open the meMINI Smartphone App and follow the instructions to set up your camera.
- Step 3
You are now ready to capture video. Never again miss the moments in life that matter!

Capture Connect Enjoy



General
The battery charges to 80% in approximately one hour and 100% in approximately two hours when using a USB-compatible Wall or Auto Charger.



Battery Care

WARNING!



STRONG MAGNET

Do NOT wear meMINI If you have a pacemaker

Guide



meMINI™

Congratulations on your purchase of a meMINI Camera. This quick start guide will ensure you know the basics of your camera to ensure you never miss capturing the moments that matter.

It is essential that you take the time to set up your meMINI camera using the Android and iOS applications before proceeding any further.

Available on the iPhone
App Store

ANDROID APP ON
Google play

Join us at:

facebook.com/memini

twitter.com/joinmemini

googleplus.com/memini

Compliance

Consumers within the European Union/ European Economic Area

The Memini Three month Limited Warranty referred to above do not apply to consumers within the European Union/European Economic Area. Instead, Consumers within the European Union/European Economic Area are covered by national consumer protection laws or regulations. Thus, the rights of Consumers within the European Union/ European Economic Area with regard to purchase of Memini 's Product will governed by applicable national legislation governing the sale of consumer goods.

Declaration of Conformity

Hereby, meMINI, declares that this product is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. To view the full declaration of conformity, goto: www.memini.com/compliance.

Warranty

Limitation of Liability

IN NO EVENT SHALL Memini BE LIABLE FOR ANY INCIDENTAL, INDIRECT, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES ARISING FROM OR RELATING TO THIS LIMITED WARRANTY OR THE USE OF OR INABILITY TO USE ANY PRODUCT, EVEN IF Memini KNEW OR SHOULD HAVE KNOWN OF THE POSSIBILITY OF SUCH DAMAGES. Memini 'S AGGREGATE CUMULATIVE LIABILITY ARISING FROM OR RELATING TO THIS LIMITED WARRANTY AND THE USE OF, OR INABILITY TO USE, ANY PRODUCT, WHETHER IN CONTRACT OR TORT OR OTHERWISE, SHALL IN NO EVENT EXCEED THE PRICE PAID BY CUSTOMER FOR SUCH PRODUCT.

SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF IMPLIED WARRANTIES OR THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE. THE DISCLAIMERS, EXCLUSIONS, AND LIMITATIONS OF LIABILITY UNDER THIS LIMITED WARRANTY SHALL NOT APPLY TO THE EXTENT PROHIBITED BY APPLICABLE LAW.

Warranty

Limitation of Warranty

This warranty does not apply to: (a) damage resulting from abuse, misuse, accident, or negligence (b) normal wear and tear, (c) defects caused by alterations, modifications, repair and servicing not made or authorised by Memini , (d) damage caused by handling, operating, storing, and using the Product outside the permitted or intended uses described in the Documentation, including but not limited to use in wet conditions, and (e) defects that are not reproducible by Memini.

Instructions to Obtain Warranty Service. In order to receive any remedy under this Limited Warranty, Customer must follow the Return Policy.

Limited Warranty

Memini "() warrants to the end user purchaser ("Customer") that the Memini Camera (including any part thereof) and accessories (each, a "Product") will be free in all material respects from manufacturing defects, under normal and intended use as described in the applicable Product documentation furnished by Memini ("Documentation"), for a period of 3 Months from Customer's original date of purchase of the applicable Product from Memini or Memini's authorised reseller ("Warranty Period"). If any Product fails to conform to the foregoing warranty and Memini receives a valid written claim within the Warranty Period, Memini will, at Memini's option and expense, (a) use commercially reasonable efforts to repair or replace the defective Product or part with a new or refurbished Product or part, or (b) accept the return of the defective Product and refund to Customer the full purchase price of the defective Product. The foregoing warranty is Memini 's sole obligation and Customer's sole and exclusive remedy for any defects in the Products. Repair or replacement of a defective Product or part does not extend the original Warranty Period for such Product.

Battery Care

Disposal

Most rechargeable lithium-ion batteries are classified as non-hazardous waste and are safe for disposal in the normal municipal waste stream. Many localities have laws in place requiring battery recycling. Check your local laws to make sure that you can dispose of rechargeable batteries in your regular trash. Lithium-ion batteries, however, do contain recyclable materials and are accepted for recycling call 1-800-BATTERY in North America to find a convenient recycling location. Never dispose of a battery in a fire because it may explode.

WARNING: Do not drop, disassemble, open, crush, bend, deform, puncture, shred, microwave, incinerate or paint the camera. Do not use the camera or the battery if it has been damaged—for example, if cracked, punctured or harmed by water. Disassembling or puncturing the battery can cause an explosion or fire.

Compliance

Compliance

Compliance

Compliance

Battery Care

FCC Compliance

This device complies with Part 15 of that Of the FCC rules. Operation is subject to the following 2 conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate Radio frequency energy and may cause harmful interference to radio communications if not installed and used in accordance with the instructions. However, there is no guarantee that interference will not occur in a particular installation.

FCC Compliance

If this equipment does cause harmful interference by one of the following measures: on, the user is encouraged to try to correct the be determined by turning equipment off and ence to radio or television reception, which can Category I radio communications devices comply with Industry Canada Standard RSS-210.

Industry Canada Compliance

Category I radio communications devices comply with Industry Canada Standard RSS-210. Category II radio communication Devices comply with Industry Canada Standard RSS-310. This device complies with Industry Canada licensed-exempt RSS standards. Operation is subject to the following two conditions: (1) this device may not cause interference, and to this device must accept any interference, including interference that may cause undesired operation of the device.

Reorient or relocate the receiving antennas Increase the separation between the equipment and the receiver. Connect the equipment into an outlet that is on a different circuit from the device Consult the dealer or an experienced radio/TV technician for help.

This product does not contain any use any user serviceable parts. Repairs should only be made by an authorized meMINI service centre. Unauthorized appears or modifications could result in permanent damage to the equipment, and void your warranty and your authority to operate this device under part 15 regulations

RF Exposure Information (SAR)

This device meets the government's requirements for exposure to radio waves. This device is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government.

The exposure standard employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6 W/kg. Tests for SAR are conducted using standard operating positions accepted by the FCC with the EUT transmitting at the specified power level in different channels.

The FCC has granted an Equipment Authorization for this device with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this device is on file with the FCC and can be found under the Display Grant section of www.fcc.gov/eoia/efccid after searching on FCC ID: 2AC5UJME001

The highest SAR value for the device as reported to the FCC is 0.44W/kg when placed next to the body.

To ensure that RF exposure levels remain at or below the tested levels, use a belt-clip, holster, or similar accessory that maintains a minimum separation distance of 5mm between your body and the device.

Damage to the camera or battery caused by contact with liquid is not covered under the warranty. Do not store your Camera with metal objects, such as coins, keys or necklaces.

microwave oven or hair dryer.

Before using it again. Do not dry the camera or battery with an external heat source such as a turn it off. Allow the camera to dry thoroughly your camera is already on.

Avoid dramatic changes in temperature or humidity when using the camera, as condensation may form on or within the camera. If your camera becomes wet do not turn on your camera. If your camera is already on, turn it off. Allow the camera to dry thoroughly before using it again. Do not dry the camera or battery with an external heat source such as a microwave oven or hair dryer.