



QUICK START GUIDE

WELCOME

FCC ID: 2AC6MLUCASUNO

Congratulations on your new phone purchase!

This guide will help you to quickly come up to speed on the important features of your phone. Keep in mind your phone has....

A Fast Processor

Featuring the 1.5GHz Quad Core Mediatek 6589T processor that delivers great performance for speedy application and web page loading, fast multitasking, and smooth video playback.

Intelligent Camera

Capture the moment in challenging environments with an intelligent 8 MP AF rear camera with BSI sensor. A host of camera features including different colour effects, exposure settings and much more to provide a great imagery experience.

Great Entertainment

 
Enjoy smooth video playback without stutters, watch movies in HD 720p at 30FPS.

Note: Screen images and icons are simulated for the purpose of this guide. Actual displays may vary. Instructions in this guide may change depending on the software version on your device.

YOUR PHONE FRONT-VIEW



YOUR PHONE BACK-VIEW

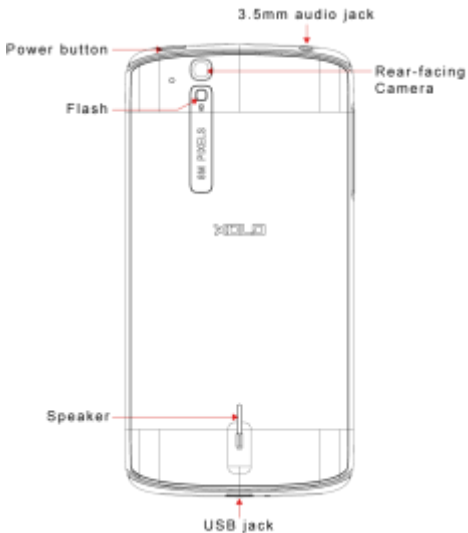


CHARGE THE BATTERY

Before using your phone for the first time, charge the phone for four hours.

To charge the battery:

1. Attach one end of the USB cord to the phone's micro-USB port and the other end to the plug.
2. Plug the charger into the wall.

 
For the best battery life, let your battery drain down to at least 20% before recharging, and do not leave your phone plugged in after it is fully charged.

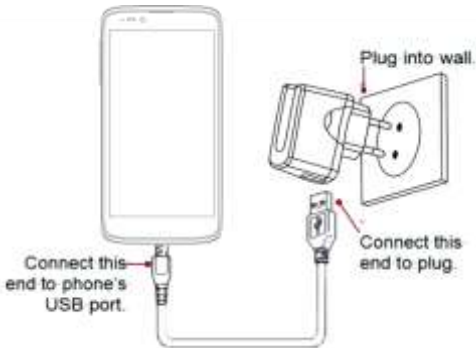

INSERT SIM AND MicroSD CARD

Please follow as shown on the label on the phone. Make sure that the clipped corner of the SIM card is facing the correct direction and the metallic contacts are facing the correct direction. Slide the SIM card into the card slot until it stops.

 On the left side is the microSD card slot. The direction in which the microSD card has to be inserted into the slot is shown by an arrow there.

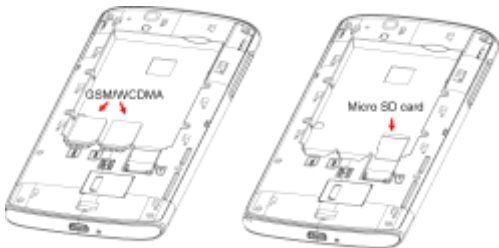


TURN THE PHONE ON & OFF



DIM, LOCK & WAKE THE PHONE

When the power is on and you want to dim the screen, press the power button.

 When the screen is dimmed and you want to wake the phone, press the power button and drag the lock to the right

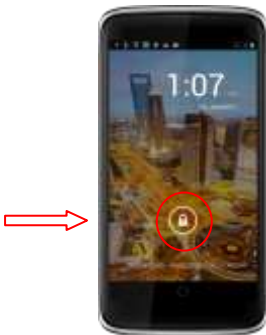

*For additional protection, easily set a security lock.
Press  → **System settings** → **Security** → **Screenlock**.*

HOME SCREEN

Phone status bars and notifications

Touch and hold an empty spot to change the wallpaper

Slide left or right to see more panels



Touch to find the contacts

Touch to write the message

Touch to open the app tray

Touch to browse the web

Touch to open the phone



Tip: To move any icon, touch and hold the icon, then drag it to a new location.

APPS

Touch to open the App tray



Touch an app to open it

STATUS BAR

The Status bar shows your phone's status and notifications.
(Notifications are described on the next page.)



Notification Icon

Status icon

Icon	Description
	Mobile network strength
	WLAN connection
	Battery strength/charge
	Airplane mode.

 
NOTIFICATION PANEL

The Notification panel is your center for new events—like new e-mail, voicemail, updates, and more.

Touch to close notifications

Drag down to display notifications


Touch a notification to respond

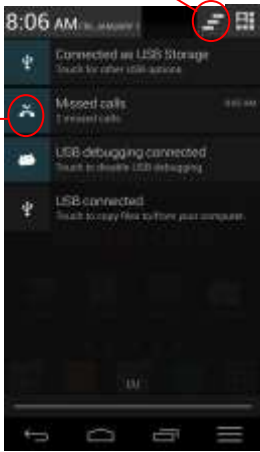

MAKE & ANSWER A CALL

1. From the Homescreen, touch .
2. Dial a number using the dial pad.
3. Touch    to make a call.

 Tip: You can use the call log, contacts tabs to quickly make a call.

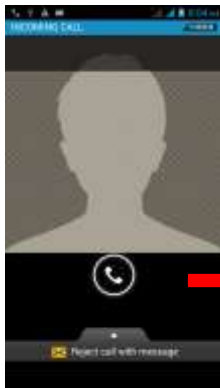

Answer a call: Drag to the right to answer a call.

SEND A TEXT

1. From the Home screen, touch. 
2. Touch. 
3. Touch the To field, then enter a recipient.
4. Touch the space field, then enter a message.
5. Touch  to send the message.

SET A RINGTONE

1. From the Home screen, press  then touch System settings→Sound→Phone→ringtone.
2. Touch a ringtone to hear it, then touch OK to select it.

TAKE A PICTURE

1. Touch the camera icon to enter camera interface.
2. In the Camera app, tap the screen to focus on a specific area.
3. Press the camera button to take a picture.

TIP: Also launch the camera by pressing the camera icon on the home screen. Capture the photo using the on screen camera button.



SHOOT A VIDEO

1. Touch the camera icon to enter camera interface.
2. In the Camera app, select **Video** .
3. Press the camera button to begin filming, and press again to stop filming.

SHARE A PHOTO

1. From the Home screen, touch  , then touch .
2. Touch an album to open it, then touch the picture you want to share.
3. Touch  .
4. Touch an application for sending the photo (such as Gmail to mail the photo, or Messages to send the photo via messaging).

CONNECT TO Wi-Fi

1. Press  → System settings → Wi-Fi.
2. To turn on Wi-Fi.
3. Touch a network to connect to it.

Note: Hotspot mode is supported.

Bluetooth

Turn on or off Bluetooth.

Bluetooth settings: click to automatically search for and display the Bluetooth devices list, touch the Menu button, the Bluetooth name rename detection timeout setting, display the received file

Note:

- A. display device name, search the device name is too long, it will automatically truncated to the appropriate length.
- B. select pairing the device will pop up a dialog box, the user needs to enter the Bluetooth PIN match code. The two devices must use the

same password. Headset or earpiece kit may use a fixed password, you can refer to the Bluetooth headset instructions. (Device can perform a lookup operation has been paired do not have to be matched.)

The information contained herein is subject to change without notice. All statements, information and recommendations contained herein do not constitute a warranty of any kind, either expressed or implied. Please review this product guide thoroughly, with particular attention paid to any safety sections, to be sure that you use your phone safely.

FCC RF EXPOSURE INFORMATION:

WARNING!! Read this information before using your phone

In August 1986 the Federal Communications Commission (FCC) of the United States with its action in Report and Order FCC 96-326 adopted an updated safety standard for human exposure to radio frequency (RF) electromagnetic energy emitted by FCC regulated transmitters. Those guidelines are consistent with the safety standard previously set by both U.S. and international standards bodies. The design of this phone complies with the FCC guidelines and these international standards. Use only the supplied or an approved antenna. Unauthorized antennas, modifications, or attachments could impair call quality, damage the phone, or result in violation of FCC regulations. Do not use the phone with a damaged antenna. If a damaged antenna comes into contact with the skin, a minor burn may result. Please contact your local dealer for replacement antenna.

BODY-WORN OPERATION:

This device was tested for typical body-worn operations with the back of the phone kept 10mm from the body. To comply with FCC RF exposure requirements, a minimum separation distance of 10mm must be maintained between the user's body and the back of the phone, including the antenna. Third-party belt-clips, holsters and similar accessories containing metallic components shall not be used. Body-worn accessories that cannot maintain 10mm separation distance between the user's body and the back of the phone, and have not been tested for typical body-worn operations may not comply with FCC RF exposure limits and should be avoided. For more information about RF exposure, please visit the FCC website at www.fcc.gov

Your wireless handheld portable telephone is a low power radio transmitter and receiver. When it is ON, it receives and also sends out radio frequency (RF) signals. In August, 1996, the Federal Communications Commission (FCC) adopted RF exposure guidelines with safety levels for hand-held wireless phones. Those guidelines are consistent with the safety standards previously set by both U.S. and international standards bodies:

<ANSI C95.1> (1992) / <NCRP Report 86> (1986) / <ICIMIRP> (1996)

Those standards were based on comprehensive and periodic evaluations of the relevant scientific literature. For example, over 120 scientists, engineers, and physicians from universities, government health agencies, and industry reviewed the available body of research to develop the ANSI Standard (C95.1). Nevertheless, we recommend that you use a hands-free kit with your phone (such as an earpiece or headset) to avoid potential exposure to RF energy. The design of your phone complies with the FCC guidelines (and those standards).

Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the phone and may violate FCC regulations.

NORMAL POSITION:

Hold the phone as you would any other telephone with the antenna pointed up and over your shoulder.

RF Exposure Information:

This product is in compliance with FCC RF Exposure requirements and refer to FCC website search for FCC ID: 2AC6MLUCASUNO to gain further information include SAR Values.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and

(2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Do not use the device with the environment which below minimum -10°C or over maximum 50°C, the device may not work.

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Ad Hoc function is supported but not able to operate on non-US frequencies.