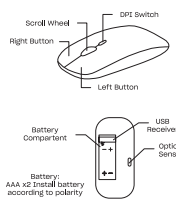 
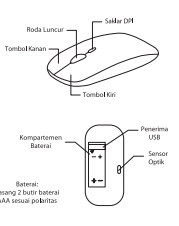 
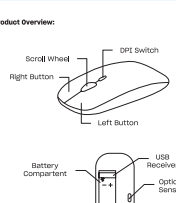 
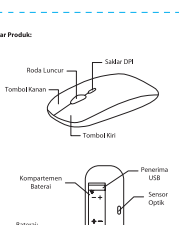 
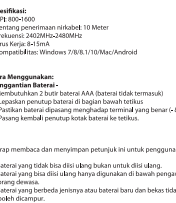 


Wireless Mouse Instruction Manual  Typo	Product Overview:  Specifications: - DPI: 800-6000 - Wireless receiving range: 10 Meters - Frequency: 2402MHz-2409MHz - Working Current: <30mA - Compatibility: Windows, Mac, iOS/Android - Hardware Compatibility: PC having USB port How To Use: Battery Rechargement - - Requires 2 x AAA batteries (batteries not included) - Remove the battery pack cover at the base of the mouse - Ensure that the batteries are fitted facing the correct terminals (+ & -) - Replace the battery pack cover onto the mouse. Please read and keep these instructions for future use. - Non-rechargeable batteries are not to be recharged. - Rechargeable batteries are only to be used under adult supervision. - Different types of batteries or new and used batteries are not to be mixed - Do not mix alkaline, standard (carbon-zinc), or re-chargable batteries. - Batteries are to be inserted with correct polarity - Exhausted batteries are to be removed from the product - The supply terminals are not to be short circuited Penetrasi USB - Lepaskan penerima USB, yang terletak di kompartemen baterai di sebelah bawah tetikus. - Pasang penerima USB ke porta USB pada perangkai Anda. - Saat terhubung, sensor optik di bagian bawah tetikus akan menyala. - Saat tetikus tidak digunakan, lampu sensor optik akan tetap mati hingga tetikus digunakan kembali. PERINGATAN - JAUHKAN BATERAI DARI JANGKAUAN ANAK-ANAK Mendan baterai dapat menyebabkan luka parah apabila tertelan dalam 2 jam atau kemudian, karena bisa bakar kimia dan menimbulkan potensi asfiksia. Jauhkan baterai kancing keluaran kon dan perangkai dari pandangan dan jangkauan anak-anak. Periksa perangkat dan pastikan kompartemen baterai aman. Bung baterai kancing bekas dengan segera dan aman. Baterai yang tak terpasuk bisa masih berbahaya. Adakan kepada yang lain tentang risiko yang berhubungan dengan baterai kancing dan cara menaruh anak-anak tetap aman. Jika meragukan anak Anda telah menelan atau memasukkan baterai kancing ke dalam mulut, segera cari bantuan medis. Apabila Anda berada di Australia, hubungi Pusat Informasi Racun 24 jam di 13 11 26 untuk mendapatkan saran ahli secara cepat Typo	USB Receiver - Remove the USB receiver, located in the battery compartment underneath the mouse. - Plug the USB receiver into the USB port on your device. - When connected, the optical sensor at the bottom of the mouse will light up. - When the mouse is not in use, the optical sensor light will remain off until the mouse is moved again. WARNING - KEEP BATTERIES OUT OF REACH OF CHILDREN Swallowing batteries may lead to serious injury in as little as 2hrs or death, due to chemical burns & potential perforation of the oesophagus. Keep your child button batteries and devices out of sight and reach of children. Examine devices and make sure the battery compartment is secure. Dispose of used button batteries immediately and safely. Hat batteries can still be dangerous. Tell others about the risk associated with button batteries and how to keep their children safe. If you suspect your child has swallowed or inserted a button battery immediately seek medical advice. If in Australia, please call the 24-hour Poisons Information Centre on 13 11 26 for fast, expert advice. Typo	Tetikus Nirkabel Buku Panduan  Typo
Bahan Produk:  Typo	Product Overview:  Specifications: - DPI: 800-6000 - Wireless receiving range: 10 Meters - Frequency: 2402MHz-2409MHz - Working Current: <30mA - Compatibility: Windows 7/8/8.1/10/Mac/Android Cara Menggunakan: Penggantian Baterai: - Membuka 2 buah baterai AAA (baterai tidak termasuk) - Lepaskan penutup baterai di bagian bawah tetikus - Pastikan baterai dipasang menghadap terminal yang benar (+ & -) - Pasang kembali penutup kotak baterai ke tetikus Harap membaca dan menyimpan petunjuk ini untuk penggunaan nanti. - Baterai yang tidak bisa diisi ulang bukan untuk diisi ulang. - Baterai yang bisa diisi ulang hanya digunakan di bawah pengawasan orang dewasa. - Baterai yang berbeda jenisnya atau baterai baru dan bekas tidak boleh dicampur. - Jangan mencampur yang berlabel alkali, standar (karbon-zinc), atau baterai yang bisa diisi ulang. - Baterai harus dimasukkan dengan kutub yang benar. - Baterai yang telah aus harus dikeluarkan dari produk. - Jangan sampai terjadi hubungan arus pendek pada terminal output. Penetrasi USB - Lepaskan penerima USB, yang terletak di kompartemen baterai di sebelah bawah tetikus. - Pasang penerima USB ke porta USB pada perangkai Anda. - Saat terhubung, sensor optik di bagian bawah tetikus akan menyala. - Saat tetikus tidak digunakan, lampu sensor optik akan tetap mati hingga tetikus digunakan kembali. PERINGATAN - JAUHKAN BATERAI DARI JANGKAUAN ANAK-ANAK Mendan baterai dapat menyebabkan luka parah apabila tertelan dalam 2 jam atau kemudian, karena bisa bakar kimia dan menimbulkan potensi asfiksia. Jauhkan baterai kancing keluaran kon dan perangkai dari pandangan dan jangkauan anak-anak. Periksa perangkat dan pastikan kompartemen baterai aman. Bung baterai kancing bekas dengan segera dan aman. Baterai yang tak terpasuk bisa masih berbahaya. Adakan kepada yang lain tentang risiko yang berhubungan dengan baterai kancing dan cara menaruh anak-anak tetap aman. Jika meragukan anak Anda telah menelan atau memasukkan baterai kancing ke dalam mulut, segera cari bantuan medis. Apabila Anda berada di Australia, hubungi Pusat Informasi Racun 24 jam di 13 11 26 untuk mendapatkan saran ahli secara cepat Typo	USB Receiver - Remove the USB receiver, located in the battery compartment underneath the mouse. - Plug the USB receiver into the USB port on your device. - When connected, the optical sensor at the bottom of the mouse will light up. - When the mouse is not in use, the optical sensor light will remain off until the mouse is moved again. WARNING - KEEP BATTERIES OUT OF REACH OF CHILDREN Swallowing batteries may lead to serious injury in as little as 2hrs or death, due to chemical burns & potential perforation of the oesophagus. Keep your child button batteries and devices out of sight and reach of children. Examine devices and make sure the battery compartment is secure. Dispose of used button batteries immediately and safely. Hat batteries can still be dangerous. Tell others about the risk associated with button batteries and how to keep their children safe. If you suspect your child has swallowed or inserted a button battery immediately seek medical advice. If in Australia, please call the 24-hour Poisons Information Centre on 13 11 26 for fast, expert advice. Typo	Tetikus Nirkabel Buku Panduan  Typo
Bahan Produk:  Typo	Product Overview:  Specifications: - DPI: 800-6000 - Wireless receiving range: 10 Meters - Frequency: 2402MHz-2409MHz - Working Current: <30mA - Compatibility: Windows 7/8/8.1/10/Mac/Android Cara Menggunakan: Penggantian Baterai: - Membuka 2 buah baterai AAA (baterai tidak termasuk) - Lepaskan penutup baterai di bagian bawah tetikus - Pastikan baterai dipasang menghadap terminal yang benar (+ & -) - Pasang kembali penutup kotak baterai ke tetikus Harap membaca dan menyimpan petunjuk ini untuk penggunaan nanti. - Baterai yang tidak bisa diisi ulang bukan untuk diisi ulang. - Baterai yang bisa diisi ulang hanya digunakan di bawah pengawasan orang dewasa. - Baterai yang berbeda jenisnya atau baterai baru dan bekas tidak boleh dicampur. - Jangan mencampur yang berlabel alkali, standar (karbon-zinc), atau baterai yang bisa diisi ulang. - Baterai harus dimasukkan dengan kutub yang benar. - Baterai yang telah aus harus dikeluarkan dari produk. - Jangan sampai terjadi hubungan arus pendek pada terminal output. Penetrasi USB - Lepaskan penerima USB, yang terletak di kompartemen baterai di sebelah bawah tetikus. - Pasang penerima USB ke porta USB pada perangkai Anda. - Saat terhubung, sensor optik di bagian bawah tetikus akan menyala. - Saat tetikus tidak digunakan, lampu sensor optik akan tetap mati hingga tetikus digunakan kembali. PERINGATAN - JAUHKAN BATERAI DARI JANGKAUAN ANAK-ANAK Mendan baterai dapat menyebabkan luka parah apabila tertelan dalam 2 jam atau kemudian, karena bisa bakar kimia dan menimbulkan potensi asfiksia. Jauhkan baterai kancing keluaran kon dan perangkai dari pandangan dan jangkauan anak-anak. Periksa perangkat dan pastikan kompartemen baterai aman. Bung baterai kancing bekas dengan segera dan aman. Baterai yang tak terpasuk bisa masih berbahaya. Adakan kepada yang lain tentang risiko yang berhubungan dengan baterai kancing dan cara menaruh anak-anak tetap aman. Jika meragukan anak Anda telah menelan atau memasukkan baterai kancing ke dalam mulut, segera cari bantuan medis. Apabila Anda berada di Australia, hubungi Pusat Informasi Racun 24 jam di 13 11 26 untuk mendapatkan saran ahli secara cepat Typo	USB Receiver - Remove the USB receiver, located in the battery compartment underneath the mouse. - Plug the USB receiver into the USB port on your device. - When connected, the optical sensor at the bottom of the mouse will light up. - When the mouse is not in use, the optical sensor light will remain off until the mouse is moved again. WARNING - KEEP BATTERIES OUT OF REACH OF CHILDREN Swallowing batteries may lead to serious injury in as little as 2hrs or death, due to chemical burns & potential perforation of the oesophagus. Keep your child button batteries and devices out of sight and reach of children. Examine devices and make sure the battery compartment is secure. Dispose of used button batteries immediately and safely. Hat batteries can still be dangerous. Tell others about the risk associated with button batteries and how to keep their children safe. If you suspect your child has swallowed or inserted a button battery immediately seek medical advice. If in Australia, please call the 24-hour Poisons Information Centre on 13 11 26 for fast, expert advice. Typo	Tetikus Nirkabel Buku Panduan  Typo
Typo	Typo	Typo	Typo

Federal Communications Commission (FCC) Statement. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and

(2) this device must accept any interference received,

including interference that may cause undesired operation. Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide Reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: Changes or modifications made to this device not expressly approved by **Cotton On USA Inc** may void the FCC authorization to operate this device. Note: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

RF exposure statement:

This device complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. The device is installed and operated without restriction.