



INSTRUCTION MANUAL 说明书

Bluetooth WIFI Recorder Instructions

蓝牙 WiFi 记录仪



R3

Contents

1. Product Functions Introduction	1
2. List of Packing Parts	1
3. Product Assembly and Disassembly Steps	2
4. Function Keys Introduction	3
5. Bluetooth Functions Operating Introduction	4
5.1. Basic Functions Operation	4
5.2. Bluetooth Pairing with Different Devices	5
5.3. Phone Calls, Music and Radio Operation	5
5.4. Intercom Operation between Two R3 devices	6
5.5. Music Sharing	7
5.6. Pairing and Intercom Operation Among Six R3 devices	7
6. Operation of Camera Functions	9
7. TF Memory Card Formatting	10
8. WIFI Functions Introduction	10
9. Introduction of Video Application Usage	10
10. Product Specifications and Parameters	12
11. Charging and Maintenance	13
12. Trouble Shooting	13
13. After-sales Service	14



Please charge before using for the first time!
In order to ensure that the performance of the product is not damaged,
please do not charge the Freedconn product with another charging cable,
please use a 5V/1A charger and Freedconn charging cable.

Welcome

Thank you for choosing FreedConn Helmet Bluetooth® Intercom system. By doing so you now have the assurance and peace of mind that comes with purchasing a product made by one of the leading manufacturers. All products brought to you are manufactured to the highest standard of performance and safety and, as part of our philosophy of customer service and satisfaction, are backed by our comprehensive 2 Year Warranty. We hope you will enjoy using your purchase for many years to come.

Safety Warning: Keep in mind that using FreedConn can limit the audibility of ambient sounds. Listening to music at maximum volume in addition to temporarily adapting to make it impossible to hear soft sounds can lead to permanent hearing damage.

Warm Tips: In order to get the best sound quality experience, please make sure Speakers are within 2mm of ears.

1. Product Functions Introduction

- Video recording function
- Photo capturing function
- WiFi function
- Radio function
- Activate voice assistant
- Connect two mobile phones
- Voice prompts
- Bluetooth intercom
- Music sharing
- Supports connection with most other Bluetooth intercom brands
- Supports connection with most smart phones, MP3 players and GPS navigation system
- Supports TF cards with a maximum capacity of 256GB

English

2. List of Packing Parts



1 Bluetooth main unit *1



2 Microphone & speaker *1



3 Clip*2



4 Screwdriver*1



5 Speaker Velcro*4



6 Microphone Velcro*2



 
 
 
 
7 Charging Cable*1



8 Product manual *1

3. Product Assembly and Disassembly Steps


3.1 Assembly steps

- 1  Insert the memory card into the slot at the bottom of the host.
- 2  Loosen the clamp by turning the screw counterclockwise.
- 3  Open the inner lining on the left side of the helmet, insert the clamp into the appropriate position between the left EPS and the shell, and tighten the screw. Note: If the screw is too tight, the clamp may be broken.)
- 4  Align the R3 host with the card slot and install it on the base.
- 5  Stick the earphone Velcro on the surface of EPS at the position of the ear.
- 6  Attach the speaker to the Velcro tape.
- 7  Remove the triangle scrap from the microphone.
- 8  Stick the microphone on EPS inside the helmet or the shell just at the mouth position.
- 9  Insert the earphone plug into the jack on the R3.
- 10  The horizontal rotation angle of the lens can be fine-tuned by 30 degrees.
- 11  360 degrees adjustable rotation of the body.

3.1 Disassembly Steps

- 1  Push the machine upward from the bottom
- 2  Loosen the screw and remove the clip

4. Function Keys Introduction

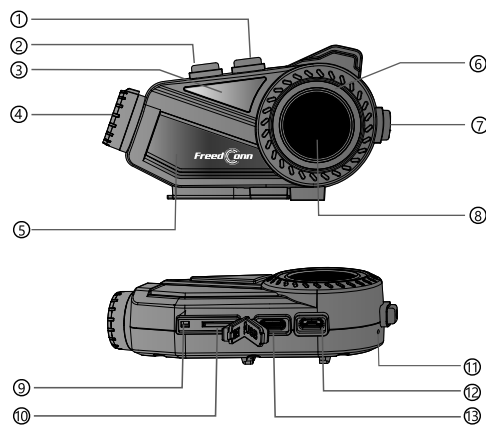

- | | |
|--|-----------------------------|
| 1. Volume up/ the next song | 8. Multi-function button |
| 2. Volume down/ the last song | 9. Reset button |
| 3. WiFi button | 10. TF card slot |
| 4. Lens | 11. Microphone |
| 5. Recorder ON/OFF, Video/Photo button | 12. Headphone port |
| 6. LED indicator light | 13. Charging port /USB port |
| 7. Bluetooth ON/OFF, Intercom button | |

5. Bluetooth Functions Operating Introduction

5.1. Basic Functions Operation

Function	Key	Operation	Prompts	LED indicator light
Power on		Hold down the on/off button of Bluetooth for about 3 seconds and release it when you hear the prompt.	"Welcome to use FreedConn product"	Bluetooth indicator light flashing in blue.
Power off		Hold down the on/off button of Bluetooth for about 3 seconds and release it when you hear the prompt.	"Power off"	The red LED indicator light is on and then goes off.
Bluetooth language switching		In the standby or music pause state, tap the multi-function button and the intercom button at the same time.	"Welcome to use FreedConn product" in Chinese or English.	The blue LED indicator light is on and then flash twice.
Note: You need to shut down to save the current language after switching the language.(Please do not press the Reset button to shut down).				
Delete historical pairing information		In the power-on state, press the on/off button for 8 seconds.	Power off..."Clear pairing"	The red LED light will remain on for a while and go off, then flash twice quickly.
Turn down the volume		Press the volume down button and hold on	You will hear a "toot" prompt when it reaches the minimum volume.	NA
Turn up the volume		Press the volume up button and hold on	You will hear a "beep" prompt when it reaches the maximum volume.	NA
Automatically turn off	If the device does not connect to the phone and without any operations within 15 minutes, it will turn off automatically.			

5.2. Bluetooth Pairing with Different Devices

Tip: Make sure the distance between R3 and the Bluetooth device waiting for pairing is within 1 meter visible range.

Function	Key	Operation	Prompts	LED indicator light
Pairing with mobile phones, GPS, etc.		Step1: (1) Under the condition that all pairing history is cleared, in power off state, press the key for 3 seconds to turn on the device, and it will start the pairing state automatically. (2) Under the condition that the pairing history is not cleared, in the power off state, press the power on key and hold it for 8 seconds to enter the pairing state.	"Welcome to use FreedConn product" "Pairing"	The red light and blue light flash alternately
		Step 2: Choose "R3" in the phone Bluetooth list	"Connected"	The blue light flashes regularly.
Pairing with intercom devices from other brands		Step 1: In standby stage, long press the Multi-function button for 8 seconds	"Pairing" "Disconnected"	The red light and blue light flash alternately
		Step 2: Lightly press the intercom button.	"intercom connected"	The blue light flashes regularly
Tips:1. When the third-party headset enters the pairing state, please follow the instructions to make the product enter the pairing state. 2. After connecting to a third-party headset, the connection with the phone will probably be off. 3. When connecting to a third-party headset, the party that initiates the active pairing has the main control. The party that passively accepts the connection has no control. It can not hang up or actively connect to the other party.				

English

5.3. Phone Calls, Music and Radio Operation

Tip: make sure that R3 has been connected to the mobile phone

Function	Key	Operation	Prompts
Answering phone calls		Press once when a call comes in	"Call answer"
Declining phone calls		Press for 2 seconds and then release	"Call rejected"
Ending phone calls		Press once during a call	

Voice call		Hold down the multi-function button for 2 seconds.	"Voice dial"
on/off Auto-answer Function		When music playing is paused, press the intercom button and the volume up bottom to disable automatic call answering.	"Close auto answer" "Open auto answer"
Automatic answering	When the phone rings, if there is no operation, the call will be answered automatically after 15 seconds.		
Music playing and pause		Step 1: Turn on the music player in your phone Step 2: Click the knob key to play music and click once again to pause the music.	"Play music" "Pause music"
Radio ON and OFF		In standby stage, double click the knob key to turn on the radio mode and double click to turn it off.	"Turn on the radio" "Turn off the radio"
Switching between music and radio		In music mode, double click the multi-function key to turn on radio and double click again to turn back to music mode.	"Turn on radio" "Play music"
Next song /Next FM radio channel		Short press once	"Next song" "Next channel"
Last song /last FM radio channel		Short press once	"Previous song" "Previous channel"
Tip: When the music pauses or there is no response, it may due to too much audio playing Applications are running in the background of the mobile phone. Please turn the other APP off, turn the music player on again and it will turn normal			

5.4. Intercom Operation between Two R3 devices



Function	Key	Operation	Prompts	LED indicator light
Bluetooth intercom pairing between 2 R3 devices		Step 1: In the Off state, hold down the On/Off button for 8 seconds until you hear the prompt tone and release your hand. Now, it is pairable.	"Pairing"	The red light and blue light flash alternately
		Step2: Press intercom ON/OFF key to search for the other device to pair.	"Search network"	The red light and blue light flash alternately
		Step3: Pairing succeeds (Bluetooth intercom between 2 people can be started now)	"Intercom connected"	The blue light flashes regularly
Note: If the pairing fails, please clear the historical pairing information and repeat the above operation.				
Disconnect the intercom Resume the intercom		When the two devices are in the Bluetooth intercom mode, press the intercom button to disconnect the intercom, and press again to go back to the intercom mode.	"Intercom disconnected" "Intercom connected"	

Note: 1. If there is an incoming call during intercom, the device will disconnect the intercom automatically, and resume the intercom state after hanging up the phone call.
2. If a partner user sends an invitation for intercom to you while you are in a phone call, you will not be able to accept the invitation, but there will be a "beep" prompt.

5.5. Music Sharing



- (1) Make sure that both devices only keep the pairing information of each other (You can clear up all the pairing history of both devices and pair them once again)
- (2) Follow the methods of pairing with mobile phone in point 2 of Five above to complete the pairing between the Bluetooth and mobile phone.
- (3) After completing the above procedures, when A needs to share music with B, and if both A and B are playing music, B has to pause the music. Then double click the intercom key of either A or B, and both devices can listen to the music from A. During music sharing, press the multi-function key of A to pause the music, press the multi-function key of B to exit music sharing, or press the intercom key of either A or B to exist the sharing.
(Note: If the sharing is not successful, please clear the pairing history first and then repeat the steps above.)

5.6. Intercom Connection among 6 devices and Using Methods



Note: The first user and the last user (as below A and F) can not pair with each other

Function	Key	Operation	Prompts
Step 1: Clear the pairing history of A,B,C,D,E, F		Press and hold the ON/Off key of A,B,C,D,E,F for 3 seconds, keep pressing for another 5 seconds when you hear the prompt "power off", until you see the red light flashes twice quickly.	"Power off" ..."Clear pairing"
Step 2: Pair two neighbor devices, in the order of A →B→C→D→E→F		Refer to the pairing methods of two users to pair A and B, and then turn off B. (Note: When you are turning off the device, release your hand once you hear the prompt "Power off", otherwise B will be disconnected with A.)	"Intercom connected" "Power off"
		Pair B with C, and turn off C when the pairing is finished	
		Pair C with D, and turn off D when the pairing is finished	"Intercom connected"
		Pair D with E, and turn off E when the pairing is finished	
Pair E with F. (At this time, all the devices are power on.)	"Intercom connected"		
Step 3: Create group chats		Press D once to connect with E; Press C once to connect with D; Press B once to connect with C; Press A once to connect with B.(At this time, all the devices are connected successfully and are ready for group conversations.)	"Intercom connected"
Exit group chat		When you are in a group chat, you can click the WIFI key (intercom key) to exit the chat, then the group will be split into two with you as the breaking point.	"Intercom disconnected"
Resume intercom with the front or back user		1. If you are in the first or last position of the group, click the WIFI key (intercom key) once to resume the intercom;	"Intercom connected"
	2. If you are in other positions of the group, double click the WIFI key (intercom key) to resume intercom with the upstream user (i.e.: double click the intercom key of E to connect with D), click the WIFI key (intercom key) once to resume intercom with the downstream user (i.e.: Click the intercom key of E once to connect with F).	"Intercom connected"	
Incoming call during group intercom		When there is an incoming call during intercom among multiple users, you will be forced to disconnect the intercom, and then the intercom units before and after you will be split into two intercom groups. (The intercom units before you as one group and the intercom units after you as another group. When you refuse or hang up the call (within valid connection range), you will return to the previous intercom state.	

6. Operation of Camera Functions

Function	Key	Operation	Prompts	LED indicator light
Insert TF card		The printed side of TF card facing down and inserted it into the R3 TF card slot		
Turn on DV		Long press the video switch key for 5 seconds	"DV on"	The green light flashes
Start Recording		Press the video switch while the device is on to start recording	"Start recording"	The green light remains on
Stop Recording		Press the video switch while the device is on	"Stop recording"	The green light is off
Turn off DV		Long press the video switch key for 3 seconds	"DV off"	The green light flashes
Capture Photo		Double click the switch in the recording state	"Click"	The green light flashes
Switch DV language	 + 	Press the WiFi button and the video switch button at the same time and then release them.		The green light flashes
Restore factory settings		Long press the WiFi key for 8 seconds whilez the recorder is in standby state	"Ding,Ding,Ding"	
Switching Btw. microphones		When the recorder is in standby state, click the WiFi button.	"Turned on External microphone" "Turned off External microphone"	

Tips:

1. If the memory card is not inserted, you will hear the prompt "Please insert the memory card".

2. If the video cannot be recorded after inserting the card, please format the TF card in the APP (Refer to "No. 7" for the methods).

3. When the memory card capacity is insufficient, the newly recorded video will automatically replace the first video stored in the memory card. In case the video cannot be recycled when the card is full, delete 3-5 videos, then the video can be recycled automatically. When the card is full, the video may be suspended automatically, and the video will be automatically started after the recycled videos are deleted.

7. TF Memory Card Formatting

(1) Format the memory card via the APP in the mobile phone preferentially following the below operation methods:

- Step 1: Press the video switch key " "to start the video taking function of R3.
 Step 2: Press the WiFi key for 3 seconds to turn on the WiFi
 Step 3: Choose "FreedConn" in the WiFi list of the mobile phone
 Step 4: Turn on the APP and click " " to enter video taking state after R3 connecting to WiFi successfully.
 Step 5: Click the icon at the upper right corner " " → Format the device"/ (click sound represents "formatting").
 (Note: In case of any abnormal operations, you can use a computer to format it instead)
 (2) Support maximum 256G memory card

8. WIFI Functions Introduction

Function	Key	Operation	Prompts	LED indicator light
Turn on WiFi		On camera/DVR ON status, press the WiFi button for 3 seconds	"WiFi turn on"	Green LED light fast flashing
Turn off WiFi		On camera/DVR ON status, press the WiFi button for 3 seconds	"WiFi turn off"	
Connect the WiFi of the recorder		Choose the WiFi named as "FreedConn" in the mobile phone, then enter the initial password "12345678" to connect.		

Tips:

- Please make sure the camera DVR is on status before turning on the WIFI.
- The built-in WIFI function of R3 Pro is only used for the users to download videos in the APP or preview the videos online temporarily.
- Due to limited body size and over-intensive processors, using the WIFI and the Bluetooth at the same time will cause signal interference. Please turn off the WIFI when you don't need to preview or download any videos.
- During the connection, if the mobile phone indicates "The current WLAN cannot access to the internet, continue to use this WLAN or not?", you must choose "yes".
- If the message "Network access denied" is displayed when you connect to the WIFI again, please turn off the recorder WIFI and restart it, refresh the WIFI list of your mobile phone and reconnect.

9. Introduction of Video Application Usage

Tips:

- The video recording function of R3 does not need to rely on the APP to use.
- The APP is only used for online preview or to download the videos recorded by R3 to the mobile phone. The functions of the APP itself do not represent the functions of R3, the specific situation shall prevail;
- The following recommended APP is a public version produced by a third-party company and it is not FreedConn's product. The third party reserves the right of interpretation. Issues about after-sales of the APP or about compatibility between the APP and mobile phone are not covered by FreedConn's after-sales guaranteed area.
- The recommended APP is compatible with most mobile phones. If you cannot use the relevant functions normally after downloading the APP, please watch and process the recorded videos on the computer according to the 3 methods described in below.

(1). Use a mobile phone to scan the below QR code to download "Roadcam" or "KaKa" APP to the mobile phone (Below introduction is for RoadCam):



RoadCam




KaKa

(2). Roadcam "APP interface introduction and operation

Pic.1:



Pic.2:

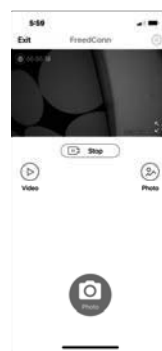

English

Function	Icon	Operating Instructions
Video		Click the camera icon as shown in the middle of pic. 1 to enter video recording mode.
Photo taking		Click the camera icon as shown in the middle of pic.2 to take photos.
Check videos, pictures	 Video Photo	Click the device's videos and photos to preview, play and download them.

Note: The play option is only in the preview mode, so videos and photos will be vague and soundless. You need to download if you want to watch high-definition ones.
The downloaded videos and pictures can also be reviewed or deleted in the "photo album" as shown at the bottom of pic. 1. You can also use a USB cable to connect the USB port of the recorder at one end, and connect a computer at the other end. (You can also pull out the memory card and put it in a card reader which then connect to the computer). Find the USB flash drive in "my computer" and open the videos or picture files inside to play in HD (The disk can only be read when the recorder is turned on).

(3). APP setting interface introduction



WiFi name: You can customize the WiFi name
WiFi connecting password: The password can be changed via this item, and the new password will take effect after the recorder is restarted. (Notes: The WiFi password must include 8 digits, if the new password is fewer than 8 digits or the password is forgotten, then you won't be able to connect to the WiFi. Then you need to long press the WiFi key of the recorder to restore factory setting, so it is not recommended to change the password unless necessary. When you change the password of the recorder without changing the WiFi name, please ignore the original network and reconnect with the new password, otherwise the mobile phone will still use the old password to connect to this WiFi.
Recording: Click to choose to turn on or turn off the audio while taking videos. If you think the video environment is too noisy, then you can turn off the audio of the video.
Video time watermark: Click to turn on or turn off the time watermark of the videos.
Recycled recording time: Click to choose the recording time of a single video from the options "off, 1 minute, 2 minutes, 3 minutes, 5 minutes and 10 minutes. Choosing the "off" option means the default recording time of a single video is 5 minutes.
Video quality: Click to change the definition of video recording.
Exposure compensation: Click to change the exposure rate of the lens.
Format the device: Click to format the TF card.
Restore factory Settings: Click to restore the factory settings of the APP.


10. Product specifications and Parameters

Frequency: 2.4 GHz	Phone Call Duration: 33 hours
Weight: 95gram	Video Taking Time: 7-8 hours
Dimension: 108 x58 x31mm	Charging Time: About 3 hours
Power Adaptor: DC 5V/1A	Standby Time: Standby for 15 minutes without Bluetooth connection or operation, then it will automatically turn off.
Lens: 400W pixels wide Angle	Music Playing Time: About 42 hours
Battery Capacity: 2000 mAh	

(When the recorder's power low, there will be a prompt to indicate "Battery low, please charge, DV power off"; When the recorder is off due to low battery, you can still listen to music for 40 minutes by Bluetooth, which will report low battery every 15 minutes, and when the battery is too low, the

Bluetooth will shut down automatically. During charging, the red light will remain on, and it will be off when the battery is full.)

 11. About Charging and Maintenance



1. Before using the Bluetooth device, fully charge it.
 2. To extend the life of the built-in polymer battery, please charge the device at least once a month.
 3. If the red light goes off while charging, the voltage may be too low. It is best to charge it for 3 hours and then recheck if the Bluetooth receiver has been successfully charged.
 4. Please don't put the product in an environment with too high (or too low) temperature. The best storage environment temperature is -4 to 60 degrees, otherwise the life of the product will be shortened.
 5. Stay away from fire.
 6. Keep away from sharp objects, which may cause scratches or damage to the product.
 7. Don't attempt to disassemble the headset.
 8. Please put the headset in a dry environment when it is not used for a long time, and make sure to charge it once a month to guarantee its performance.
- Charging reminder: (1) It can only be charged normally through the original charging cable of the product with the charger plug and not through computer or other ways. (2) Non-original charging cable will lead to abnormal production functions, so please avoid using it to charge the device.

English

12. Trouble Shooting

1. Bluetooth is off

In the case that the recorder can be turned on but the Bluetooth can not, it is normally because the Bluetooth failed to reset during shutdown. Now press the reset key on the device for over 3 seconds, then it can reset successfully. Plugging in the charger to reset is also applicable.

2. The recorder can not be turned on

If the recorder can not be turned on when it is with sufficient battery capacity, it is usually because the recorder is not reset successfully when it was shut down. At this time, you only need to press the reset key on the device for about 1 second, then it is reset successfully. You can also plug in the charger to reset it. (Charging while the

recorder is on will not make it reset.)

3. There is a lag of music playing while checking videos in the application.
While you are checking videos in the application, the video code stream is too large, so it will interfere with The Bluetooth. You need to turn off the Bluetooth temporarily. You can turn on the Bluetooth after exiting the APP.

4. There is a "crackling" noise when the phone is playing videos
Turn off the 4G traffic and WIFI before playing the videos downloaded via the APP for the first time, then the "crackling" noise will not appear again.

5. When the music playing operation does not respond properly
Solutions: ① Try to use the built-in player in the mobile phone.

② Try to exit or turn off the other running audio players.

6. When listening to audios from Wechat or Tik Tok, the APP is mute or has other abnormal situations.

Please turn off the audio player running on the backstage and re-enter to listen.

7. When the WiFi is on, the mobile phone can not find the Freedconn network? Or the Freedconn WiFi can be found but can not be connected?

Your mobile phone may not be compatible with the WiFi software version, and you need to upgrade the WiFi software of R3. To solve this problem, please contact the manufacturer for upgrading by emailing the after-sales service or through the WeChat public account.

8. The TF card still can not be used normally after trying many ways to format it?

Suggest that you choose a high speed card Class 10 or above, an authorized edition memory card with 64G capacity. High-quality TF cards have longer service life than low-quality ones.

If the video screen is blurred and the frame rate decreases, replace the card with a new one.

The higher the quality of TF cards, the longer they will last. And vice versa.

9. The lens is covered with fog or water droplets?

It is caused by the temperature difference between internal and external of the body, and they will volatilize naturally after placing aside for a period of time.

13. After-sales Service

If you encounter other problems during the use of the product, you can scan the following QR code to enter the technical support page of the official website to find the corresponding solution.



After-sales technical support

目次

一、製品機能の紹介	16
二、梱包リスト	16
三、製品の取付と取り外し手順	17
四、ボタンの紹介	18
五、Bluetooth機能の紹介	19
1. 基本機能の操作	19
2. 他社のバイクインカムとのペアリング	20
3. 通話、音楽、ラジオ機能の紹介	20
4. 2つのR3の間でのインターコム	21
5. 音楽共有	22
6. 6つのR3のインターコムの接続方法と使用方法	22
六、R3のインターコム機能を接続する手順	24
七、R3撮影機能の紹介	25
八、TFメモリーカードのフォーマット	25
九、WiFi機能の紹介	25
十、アプリ内での動画再生	25
十一、技術データ	27
十二、充電とメンテナンス	28
十三、よくある問題	28
十四、アフターサービス	29



初めて使用する際、フル充電してから、お使いください
製品の性能にダメージを与えないように、他社の充電ケーブルを使
用しないで、Freedconn専用の5V / 1Aの充電器で充電してください。

弊社の商品をご購入頂き、誠にありがとうございます

この度は弊社のFreedConnヘルメット式Bluetoothースとインターコム機能付きの 製品をご購入頂き、誠にありがとうございます。

FreedConnは、各種通信関連製品を融合し、「自由とファッション」という新しいコンセプトを生み出しました。高品質の通信製品と革新的な技術で、新世代の消費者をターゲットにしたファッションナブルなヘルメットヘッドセットブランドとして、自由とファッションナブルなライフスタイルを追求する都会の若いユーザーに新しいツーリング通信体験を提供いたします。

“ボーンフリー”のブランド精神を出発点に、各製品は20以上の厳しい検査工程を経て、お客様のために究極のコストパフォーマンスのアウトドアツーリング用通信デバイスを開発しました。

健康、幸せ、自由という自然なツーリングの中、ツーリングの楽しさ、製品の調和、及びファッションナブルなルックスの間のバランスをよくとれた、「負担のない自由さ」を求めています。

FreedConnは「自由でファッションナブルなツーリング」のブランドコンセプトと解釈される「サイクリング」「自由」「ファッション」の代名詞となっています。

FreedConnの製品をご購入して頂くことで、最もパーソナルな保証と、最も手間のからないアフターサービスを提供します。弊社がお届けするすべての製品は、性能と安全性の最高基準に基づいて製造されており、弊社のカスタマーサービスと顧客満足の理念の一環として、2年間の包括的な保証を提供します。

ご購入いただいた弊社の製品が未永くお使いいただけることを願っています。

安全上のアドバイス: FreedConnのヘルメット用ヘッドセットを装着して走行すると、周囲の音が耳に入りにくくなります。

最大音量で長時間音楽を聴くと一時的に小さな音が聞こえなくなり、更に聴覚に永久的な損傷を与える可能性があります。

ヒント: 最高の音質体験を得るために、取り付けの時に、ヘッドホンと耳の間の距離が2mm以内に保たれるようにすることをお勧めします。

一. 製品機能の紹介

- ・ 撮影機能
 - ・ スナップ撮影機能
 - ・ WiFi機能
 - ・ ラジオ機能
 - ・ 音声アシスタントを有効にする
 - ・ スマホ2台との接続
 - ・ 案内音
 - ・ Bluetoothース機能付きのインターコム
- ・ 音楽共有
 - ・ 他社の殆どのBluetoothース機能付きのヘッドセットと接続可能
 - ・ 殆どのスマホ、MP3プレイヤーと GPS ナビゲーションシステムと接続可能
 - ・ 最大256G のメモリーカードに対応可能

二. 梱包リスト

				
① 本体 X 1	② マイク&スピーカー X 1	③ クリップ X 2	④ ドライバー X 1	
				
⑤ ヘッドセット用マジックテープ X 4	⑥ マイク用マジックテープ X 2	⑦ ケーブル X 1	⑧ 取扱説明書 X 1	

三. 製品の取付と取り外し手順

3.1 取付手順


- ① メモリーカードを本体底部にあるスロットに差し込んでください。
- ② 時計回りにドライバーを回し、クリップを締めてください。
- ③ ヘルメットの左側の裏生地を開き、クリップを発泡スチロールとケースの間にある適切な場所に付け、ネジを締めてください。(注:ネジを締めすぎることで、クリップが割れる可能性があります)
- ④ R1の本体をスロットに位置合わせてつけてください。
- ⑤ ヘルメットの両側の裏生地を開き、ヘッドセットを貼り付ける用マジックテープを耳の位置に合わせて、発泡スチロールの表面に貼り付けてください。
- ⑥ スピーカーをマジックテープに貼り付けてください。
- ⑦ マイクにある三角形の紙を剥がしてください。
- ⑧ ヘルメットの両側の発泡スチロールあるいは口の位置に合わせて、マイクをケースに貼り付けてください。
- ⑨ R3のプラグをジャックに差し込んでください。
- ⑩ レンズの水平回転角度は30度まで微調整可能。
- ⑪ 本体の回転角度は360度調整可能。

日本語

3.2 取り外し手順

- ボトムプッシュマシン → 取り外し

四、ボタンの紹介

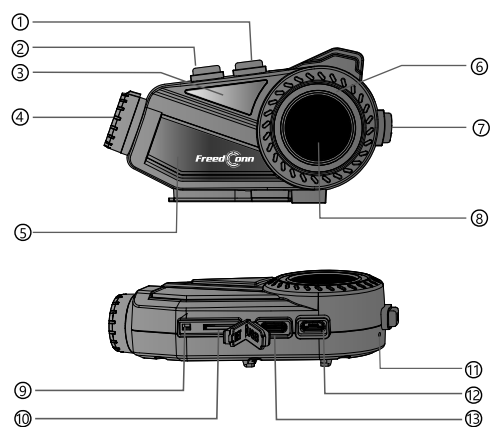

- | | |
|----------------------------------|-------------------|
| 1. ボリュームアップ/次の曲 | 8. 多機能ボタン |
| 2. ボリュームダウン/前の曲 | 9. リセットボタン |
| 3. WiFiボタン | 10. TFカードスロット |
| 4. レンズ | 11. マイク |
| 5. レコーダー機能のオン・オフと録画と
スナップボタン | 12. イヤホンジャック |
| 6. LEDライト | 13. 充電ジャックとUSBポート |
| 7. ブルートゥース機能のオン・オフとイ
ンターコムボタン | |

五、ブルートゥース機能の紹介

1. ブルートゥース機能の操作

機能	ボタン	操作	案内音	LED表示
電源オン		ブルートゥースのオン・オフボタンを約3秒押して、案内音が聞こえたら手を離します。	「フリードコム製品へようこそ」	青色のブルートゥース表示LEDが点滅
電源オフ		ブルートゥースのオン・オフボタンを約3秒押して、案内音が聞こえたら手を離します。	「システム終了します」	赤色のブルートゥース表示LEDが点滅と消す
ブルートゥースの言語切替		待機または音楽が一時停止状態で、同時に多機能ボタンとインターコムボタンを軽く押します。	「フリードコム製品へようこそ」	青色のLEDが点灯、2回速く点滅する
		注: 言語切替後、電源オフし、切替えた言語を保存してください。直接リセットボタンを操作しないでください。		
ペアリング履歴を削除する		電源オンした状態で、電源オン・オフボタンを8秒押します。	「システム終了します」...「ペアリング履歴を削除する」	赤色のLEDが常時点灯、2回速く点滅する
音声ボリュームをダウンする		ボリュームダウンボタンを長押しします。	音声ボリュームが最大になった際、「ピーピー」の案内音が出る。	なし
音声ボリュームをアップする		ボリュームアップボタンを長押しします。	音声ボリュームが最小になった際、「ピーピー」の案内音が出る。	なし
自動的に電源オフ		電源オンしてから15分以内にスマホと接続していない、または何の操作もしていない場合、本製品が自動的に電源オフになる。		

操作

2. 他のデバイスとのペアリング

注：R3 とペアリングしようとするデバイスを1メートルの見える範囲に置いてください。

機能	ボタン	操作	案内音	LED表示
スマホ、GPS などとペア リング		ステップ1：(1) ペアリング履歴を クリアした状態であれば、電源オ フした状態で、電源オン・オフボ タンを3秒長押し、本製品が自動 的にペアリング状態になる。 (2) ペアリング履歴をクリアして いない状態であれば、電源オフ した状態で、電源オン・オフボタ ンを8秒長押し、ペアリング状態 になる。	「フリードコム製品 へようこそ」 「ペアリング」	赤色と青色の LEDが交互に点 滅する。
		ステップ2：スマホのブルートウ ースのリストから「R3」を選択 してください。	「接続完了しまし た」	青色のLEDが規 則的に点滅する。
他社のバイク インカムとペ アリング		ステップ1：待機した状態で、多機 能ボタンを8秒長押しします。	「ペアリング」	赤色と青色の LEDが交互に点 滅する。
		ステップ2：インターコムボタンを 軽く押します。	「インターコムと接続 しました」	青色のLEDが規 則的に点滅する。

注：1. 他社のバイクインカムをペアリングモードに設定するには、その取扱説明書に基づいて設定し、本製
品とペアリングしてください。
他社のヘッドセットとペアリングすると、スマホとの接続が切れる可能性がある。
3. 他社のヘッドセットに接続する場合、アクティブペアリングを開始した側が主になってコントロールし
ます。接続を受け入れた側は、電話を切ったり、相手に積極的に接続したりすることができないため、コ
ントロールできません。

3. 通話、音楽、FMラジオ機能の紹介

注：R3 がスマホと接続した状態で行うこと。

機能	ボタン	操作	案内音
着信応答		着信が来た際、1回押してください。	「電話に応答し ます」
着信拒否		着信が来た際、2秒長押ししてから、手を離してください。	「電話を拒否し ます」
通話終了		通話中の状態で、1回押してください。	「通話を終了し ます」

スマホの音声アシスタントを呼び出す		多機能ボタンを2秒押します。	「音声アシスタントを起動します」
着信を自動的に応答する機能をオン・オフ		音楽一時停止した状態で、同時インターコムボタンとボリュームアップボタンを押して、着信を自動的に応答する機能をオフします。	「自動応答を解除します」、「自動応答を開始します」
着信を自動的に応答する	ベルがなってから15秒以内に、操作をしない場合、自動的に着信を応答。		
音楽再生、一時停止		ステップ1、スマホから音楽プレーヤーを開いてください。 ステップ2、ボタンを1回クリックする場合、音楽を再生し、再度クリックする場合、音楽が一時停止になる。	「音楽再生」 「一時停止」
ラジオ機能のオン・オフ		待機した状態で、ボタンをダブルクリックする場合、ラジオモードを開き、再度ダブルクリックする場合、ラジオモードを閉じる。	「ラジオ機能のオン」 「ラジオ機能のオフ」
音楽とラジオモードの切替		多機能ボタンをダブルクリックする場合、音楽モードからラジオモードに切替、再度ダブルクリックする場合、音楽モードに戻る。	「ラジオ機能のオン」 「音楽再生」
〈音楽〉次の曲、〈ラジオ〉次のチャンネル		1 回短く押す	「次の曲」 「次のチャンネル」
〈音楽〉前の曲、〈ラジオ〉前のチャンネル		1 回短く押す	「前の曲」 「前のチャンネル」
注：音楽の再生が一時停止したり、応答がなかったりする場合、スマホのバックグラウンドで再生しているオーディオのアプリが多すぎるので、それらの再生を閉じてから、もう一度操作してください。			

日本語

4. R3 2つの間でインターコムする操作

