 




Cinema Delivered To Your TV

WHAT IS IN THE BOX?

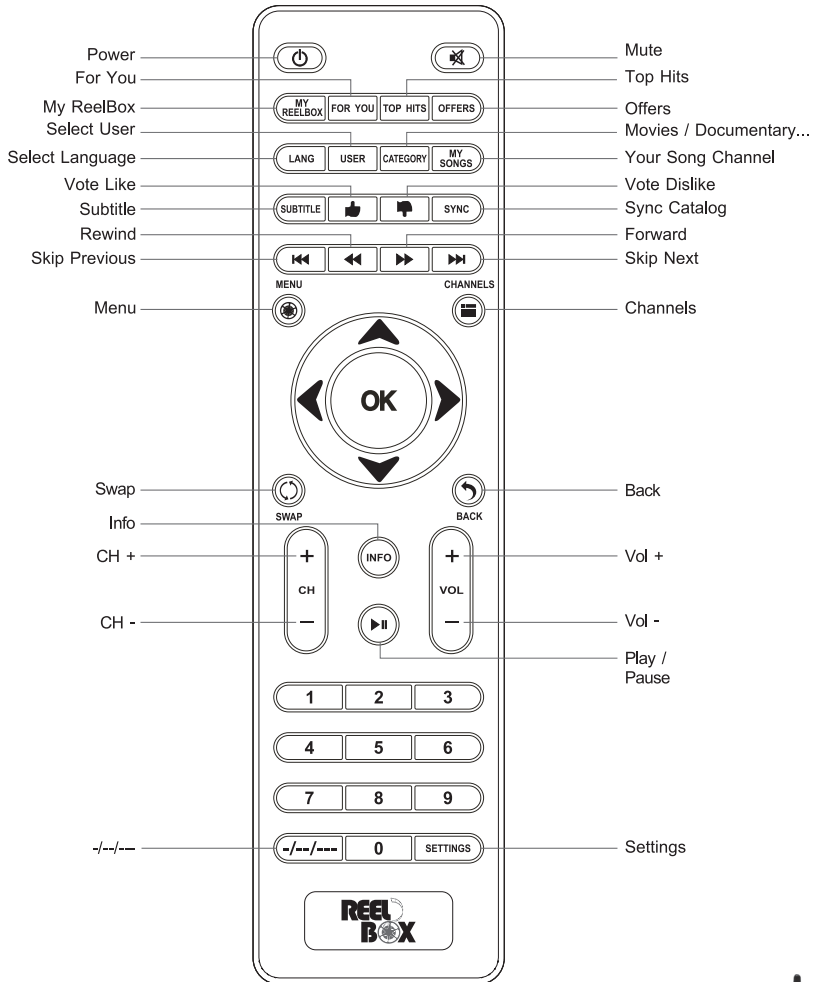

Remote



USB Cable



Power Adapter



HDMI Extension Cable

 


2 AAA Batteries
for ReelBox Remote

 


ReelBox Movie Streaming
Dongle (MSD)

a) Setup A
(ReelBox Dongle powered by
Power Adaptor)

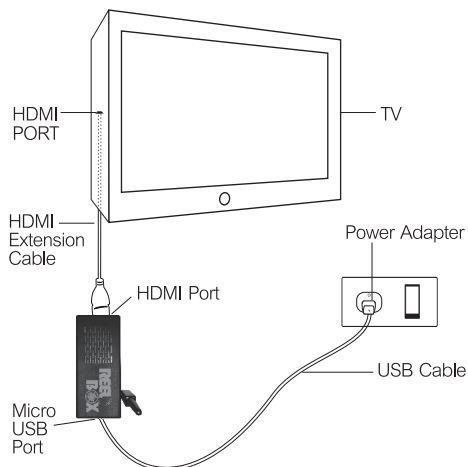

b) Setup B
(ReelBox Dongle powered by
USB port of TV)

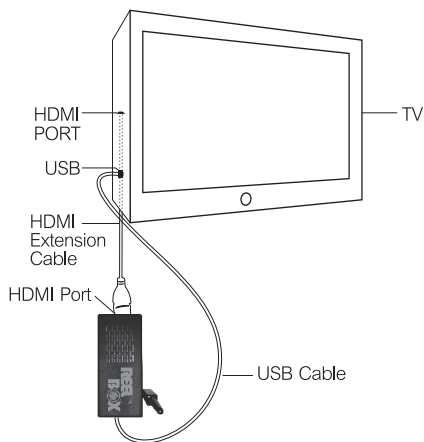

1. Set the TV source to HDMI input in which you are planning to insert the MSD.
2. Insert the batteries into the ReelBox Remote.
3. Ensure batteries are correctly aligned to the + and - marks.
4. Connect the Micro USB end of the USB Cable to MSD.
5. Connect the other end of the USB Cable to the Power Adaptor (Setup A) or to the USB port on TV (Setup B).
6. Connect one end of the HDMI Extension Cable to HDMI port of the MSD.
7. Connect the other end of the HDMI Extension Cable to HDMI port of TV.
8. Connect Power Adaptor to the wall socket and turn the power ON.
9. The indicator light to the MSD should glow up and thereon follow the instructions on your TV screen using ReelBox Remote.

WARRANTY

This product's warranty provided by our company covers a period of 1 year from the date of purchase. All faulty parts and / or functions, resulting despite user's normal use, will be repaired and / or replaced, if any of the malfunctions are caused by user carelessness, inadequate maintenance, or natural disaster, we will not provide repair and / or replacement services for a fee regardless of warranty period.

FOR QUERIES CONTACT
support@reelbox.tv
1 877 792 5935

FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation