

THE BLACK SERIES™

by **shift**³® AGES 6+

CONTENTS

2 Remote Controllers, 2 Boats, 1 Inflatable Course.

GOAL

Be the first player to complete the course with your remote control speed boat.

BEFORE YOU BEGIN

Each controller requires 3 "AA" Batteries (not included.) Please install them according to the directions below.

BATTERY INSTALLATION / SETUP

- Each RC controller requires 3 "AA" 1.5V batteries (not included). When changing batteries, adult supervision is required. Use alkaline batteries for the best performance.

- Carefully remove items from the package.

- Locate the battery door on the back of the remote control. Using a Phillips screwdriver, remove the screw.

- Remove the panel to access the battery compartment. Insert 3 "AA" batteries while observing the correct polarity (Fig.1)

- Replace the battery compartment door.

HOW TO SET UP THE COURSE

- Place the race track pool on a smooth level surface outdoors.


- Inflate the pool by blowing into the valves. Never over inflate.

- Once fully inflated, push the valves back into the body of the pool.

- Fill with water to a depth of 2 inches. Do not overfill.



 FIG. 1

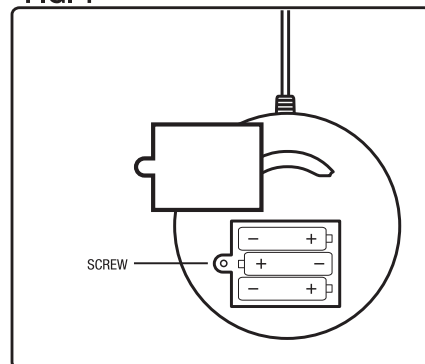

⚠ DANGER

- Children younger than five years are at a high risk of drowning.
- Drowning occurs silently and quickly and can occur in as little as 2 in. of water.
- Always supervise play closely.

SAFETY WARNINGS - PLEASE READ CAREFULLY

- Deflate product before storage.
- Do not allow children to stand, sit or lay in the inflatable course.
- Never use this product as a flotation device.
- Use only with adult supervision.
- Do not leave children unattended.
- Toy is not intended for children under 6 years old.
- Inspect the product before every use. If the product appears worn, splintered, cracked, or broken in any manner, discontinue use and discard immediately.
- Use inflatable pool only as directed with included boats. Do not use with other items as they may puncture or damage the inflatable pool.

The artwork and design of this package are protected by US copyright law and may prior written permission. It is not permitted to alter, remove or reproduce any trademarks or copyright notice from this package.

KEEP THIS PACKAGE FOR REFERENCE AS IT CONTAINS IMPORTANT INFORMATION.

WARNING: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

THE BLACK SERIES™

by **shift**³® AGES 6+

HOW TO CHARGE THE BOATS:

- Switch on each of the remoteschargers.

- Charging cords are located in side compartments of remotes. Connect boats to charging cords. Charge lights will be green. (Fig. 2)

- The green indicator lights will turn off when they are fully charged.

NOTE: Always detach the boat from the charger prior to use.

HOW TO STEER THE BOATS:

- Move BOTH joysticks FORWARD to drive your Speed Boat Racer FORWARD

- Press the LEFT joystick forward to steer your Speed Boat Racer to the RIGHT and FORWARD

- Press the RIGHT joystick forward to steer your Speed Boat Racer to the LEFT and FORWARD

- Press BOTH joysticks DOWN to steer your Speed Boat Racer BACKWARD

- Press the LEFT joystick DOWN to steer your Speed Boat Racer to the RIGHT and BACKWARD

- Press the RIGHT joystick down to steer your Speed Boat Racer to the LEFT and BACKWARD

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio TV technician for help.

WARNING: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

FC This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FIG. 2


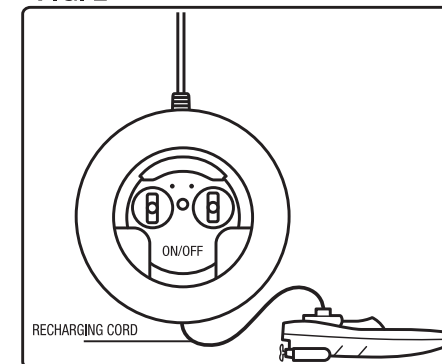 


FIG. 3

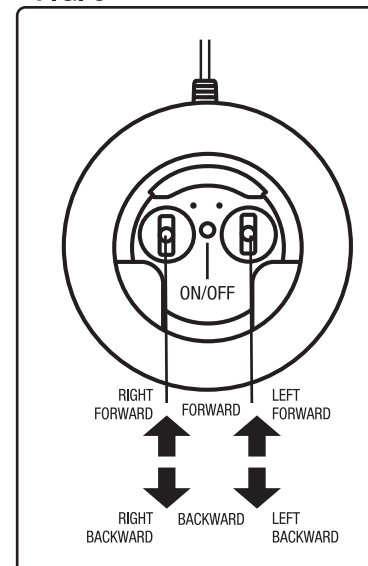 

TIPS & TRICKS

- Fully charged boats may run out of power after a few head-to-head races but they can be easily and quickly recharged using the remote control. Watch for the green indicator light and then get back in the action!

- Race boats immediately after charging. They lose their power as they sit idle.

- Always keep controller within 3 feet of boat for best performance.

BATTERY WARNING:

- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Insert batteries using the correct polarity. Do not short-circuit the supply terminal.
- Remove batteries when not in use. Recycle or dispose of exhausted batteries according to federal, state, and local laws. Do not dispose of batteries in a fire - they may leak or explode.
- Only use manufacture specified battery(ies), charger(s) and/or adapter, if applicable, specified by the manufacturer.
- Always use, replace, and recharge (if applicable) batteries under adult supervision.

KEEP THIS PACKAGE FOR REFERENCE AS IT CONTAINS IMPORTANT INFORMATION.

©2014 MerchSource, LLC. Shift3, The Black Series, and The Black Series by Shift3 are trademarks and/or registered trademarks of MerchSource, LLC.

All rights reserved.

Distributed by MerchSource, LLC, Irvine, CA 92618.

Patent Pending.

⚠ WARNING:
CHOKING HAZARD- Small Parts.
Not for Children under 3 years.

Printed in China