

## WIRELESS SPEAKER WITH LED LIGHT

### USER MANUAL

(Read before proceeding)



- Switch on or off unit by switch the “power” button on the back of the unit to be “ON” or “OFF” position.
- The item should come with enough power be powered on. If you are having trouble on pairing or powering-on it, please make sure it is fully charged.
- Use the USB charge cable connecting to the item from its micro charging socket to your computer or charger. The charging input power is 5V 500mah.
- The red light will turn off when power charging completes.
- Long press the “M” button to change the light mode or turn on/ off the light.

#### **Music Playing:**

##### Bluetooth Mode:

- Once power on, the item turns default into Bluetooth mode, while there is no other connection.
- The item will automatically connect to the last Bluetooth device first. If not found, it will search a new one.
- On the Bluetooth device, switch on Bluetooth setting and search for “BT SPEAKER”. For the first-time connection, select “BT SPEAKER” to start connection. If necessary, enter the pass code 0000 or 1234.
- To disconnect the item from current Bluetooth device, switch off Bluetooth from current Bluetooth device.
- Once connected, you can listen to music from the unit wirelessly (< 33 ft.). The music streaming may be interrupted by obstacles between the device and the item, such as walls, metallic casing that covers the device, or other devices nearby that operate in the same frequency.
- Press “>||” button one time to play or pause the music; short press “-” or “+” button to skip songs; press and hold “-” or “+” button to adjust volume.

##### TWS Mode:

- Turn on 2pcs units and ensure they are in Bluetooth mode.
- Double click the “>||” button on one of the unit, waiting for their connection with each other.
- Once the 2pcs units connected, follow the above step the connect it with your Bluetooth enable devices.
- To disconnect with each other, hold and press the “>||” button.

##### Aux-in Input Mode:

- Once power on, connect the item with audio device by 3.5mm aux-in cable(not included), the unit will turn into Aux input mode and play music automatically; press “>||” button one time to enter silent mode.
- Press and hold “-” or “+” button to adjust volume.

##### TF card/USB drive Mode:

- Once a TF card/USB drive is inserted, the unit will turn into music play mode and plays music automatically. Press “>||” button one time to play or pause the music.
- Short press “-” or “+” button to skip songs; press and hold “-” or “+” button to adjust volume.

##### FM radio mode

- Once power on, press “M” button to change to “FM” mode.
- Insert USB charging cable as antenna.

- Short press the “>||” button to search and lock all possible FM channels automatically. When searching finishes, there will have no channel changing.
- The LED light will be off in FM mode.
- Press “-” or “+” button one time to select a channel.
- Press and hold “-” or “+” button to adjust volume.

#### Karaoke Function

- Once power on, insert a 6.5mm microphone(not included) to enjoy the music.

#### Specification

- Speaker Power: 1X5W
- Battery Capacity:3.7V 1200mAh
- FCC ID: 2ACCE-22526

## **FCC Warning Statement**

Changes or modifications not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: --Reorient or relocate the receiving antenna.

--Increase the separation between the equipment and receiver.

--Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

--Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.