

Instruction Manual (MODEL #: 296B)

Buttons functions

- Power button: press and hold for 5 seconds to turn on/off the speaker.
- M button: short press to change audio mode, double click to change LED light mode, press and hold for 2 seconds to turn on/off the LED light.
- I<< / >>I button: in Bluetooth, TF card, USB music mode, short press to play the previous/next song, long press to adjust volume; In FM mode, click to change to the previous/next radio station;
- >II button: in Bluetooth, TF card, USB music mode, short press to play / pause the music. In AUX mode, short press to mute music. Double click to enter TWS connection mode. Press and hold for 5 seconds to disconnect with current Bluetooth device, press and hold for 5 seconds again to reconnect.

Bluetooth function

- Once powered on, the speaker defaults to Bluetooth mode.
- Turn on Bluetooth on your phone and search for the pairing name "296B", then click on the pairing name found on your phone to complete the Bluetooth connection between the phone and the speaker.

TWS Function

- Turn on 2pcs speakers and ensure they are no connection to any Bluetooth device.
- Double click >II button on any of the speaker to enter TWS connection mode. There is a prompt to indicate TWS mode enter successfully.
- Once connected, there will be a prompt to indicate TWS connection successfully.
- Follow the above Bluetooth function setting process, to connect the TWS connected speakers to your cellphone.

FM Function

- After powering on, plug in USB charging cable as antenna, short press M button to switch to FM mode. After entering FM mode, you can automatically search for radio station by pressing and holding the >II button for 2seconds. During the radio search process, the speaker will automatically save the radio stations found.
- After the search is completed, the speaker will automatically enter the first radio station. Then you can adjust the radio program by press the I<< / >>I buttons of the speaker.
- In FM mode, click the >II button to mute FM.

TF card / USB flash drive / AUX in function

- After powered on, when the speaker is plugged into the TF card, USB flash drive or audio cable with 3.5 connector, the speaker will default to play the songs from the insert.
- In TF card or USB flash drive mode, play/pause, next song/last song are all supported.
- In AUX in mode, play/pause support mute/resume the music, next song/last song is not supported.

FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.