

Keys definition and operation

- Power/volume knob: Turn to power on/off the unit and adjust music volume.
- Treble knob: turn to adjust the volume of treble.
- Bass knob: turn to adjust the volume of bass.
- Play/Pause button: Click to play/pause the music playing on Bluetooth/ TF/ USB mode, to mute music at AUX mode. Press and hold for 2 seconds to turn on/off TWS function on Bluetooth mode, to start searching FM channels on FM mode; Double click to disconnect the current Bluetooth connection.
- >>| button: click to switch next song, press and hold to fast forward.
- |<< button: click to switch last song, press and hold to fast backward.
- M/LED button: click to switch mode, press and hold to turn on/off LED lights.

Power and Charging

- The item should come with enough power be powered on. If you are having trouble pairing or powering-on it, please make sure it is fully charged.
- Use the USB charge cable connected to the item from its Micro USB port to your computer or charger. The charging input power is 5V 1A.
- The red light will turn off when charging completes.
- The unit will turn off automatically in 5 mins if there is no Bluetooth connection and other connection.

Bluetooth Mode:

- Once powered on, the item turns into Bluetooth Mode by default while there is no other connection.
- The item will automatically connect to the last Bluetooth device first. If nothing found, it will search for a new one.
- On the Bluetooth device, switch on Bluetooth setting and search for "IQ-3565BT". For the first-time connection, select "IQ-3565BT" to start connection. If necessary, enter the pass code 0000 or 1234.
- To disconnect from current Bluetooth device, switch off Bluetooth from current Bluetooth device, or double click the play/pause button.
- Once connected, you can listen to music from the unit wirelessly (< 33 ft.). The music streaming may be interrupted by obstacles between the device and the item such as walls, metallic casing that covers the device or other devices nearby that operate in the same frequency.

Stereo Pairing Function/ TWS (requires a 2nd unit):

- Turn on the 2 different units and ensure they are in Bluetooth mode.
- Press and hold PLAY/PAUSE button on one of the units for 2 seconds and wait for them to connect with each other.
- Once both units are paired with each other, follow the "Bluetooth Mode" steps the connect them to your device.
- To disconnect the two units actively, press and hold the PLAY/PAUSE button on any of the units.

AUX-IN / TF/ USB Mode:

- Once powered on, connect the item to the audio device through the 3.5mm aux-in cable(not included), the unit will turn into Aux mode automatically.
- Once a TF card/USB drive is inserted, the unit will turn into TF card/USB driver play mode and plays music automatically.

FM radio mode

- Once powered on, click the "M" button to change to "FM Radio" mode. Insert the provided USB charging cable. This acts as an antenna.
- Press and hold the play/pause button to start searching and lock all possible FM channels automatically. When searching finishes, there will be no channel changing. Click the "-" or "+" button one time to switch channel.

Karaoke radio mode

- Once power on, insert 6.3mm jack wired microphone to enjoy Karaoke.

Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This device generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this device does cause harmful interference to radio or television reception, which can be determined by turning the device off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the device and receiver.
- Connect the device into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

RF warning for portable device:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.