

Wireless Sensor

Model Name: Wireless Sensor

Brand Name: ServersCheck

FCC ID: 2ACGKWIRELESSSENSOR

Wireless Sensor Diagram

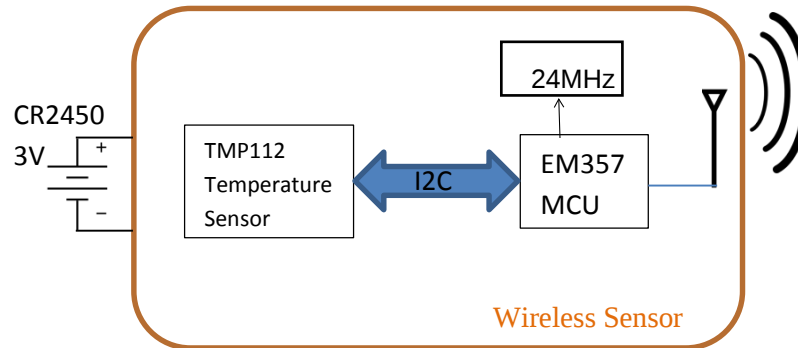

Wireless Sensor Basic Instruction Manual

1. First of all, set up Wireless Sensor as "Wireless Sensor_User Manual".
2. Connecting the Wireless Sensors.
 - a) Goto "Wireless Information".
 - b) Click "Enable" in topic "Permit New Wireless Devices" as shown in Figure 1.

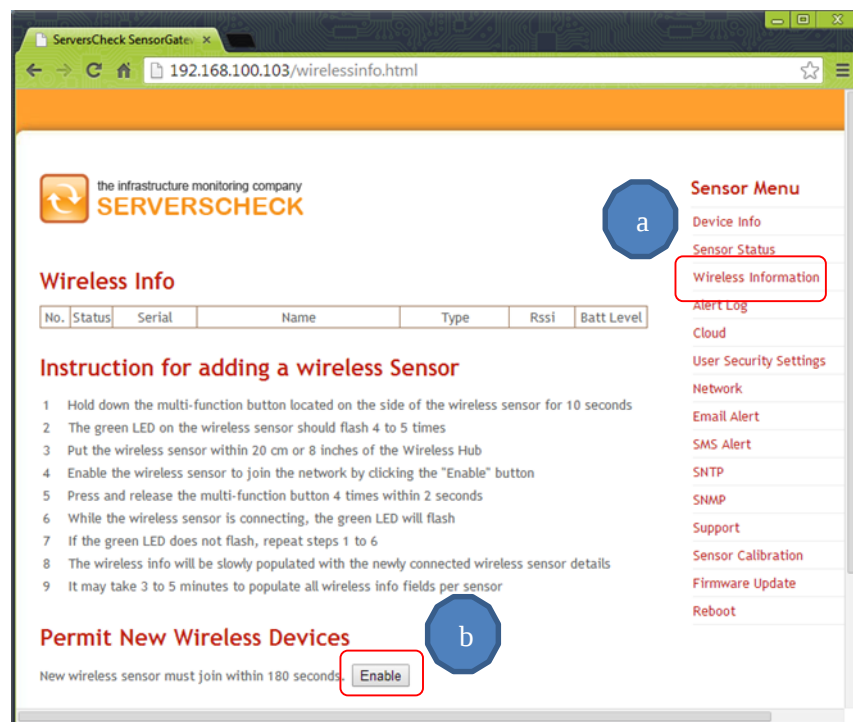


Figure 1 Permitting New Wireless Devices

- c) Take out plastic plate from both Wireless Sensors as shown in Figure 2.

- d) Quick push 4 times (interval of each push should be withing 1 second) to connect SensorGateway.

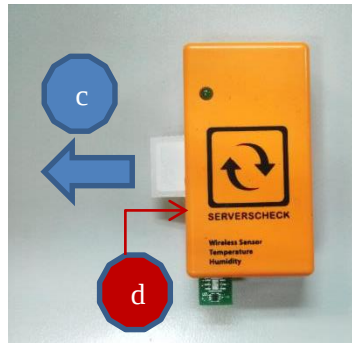


Figure 2 Take it out and pushing button

- e) See on SensorGateway's web server, it will show the new wireless sensors as shown in Figure 3

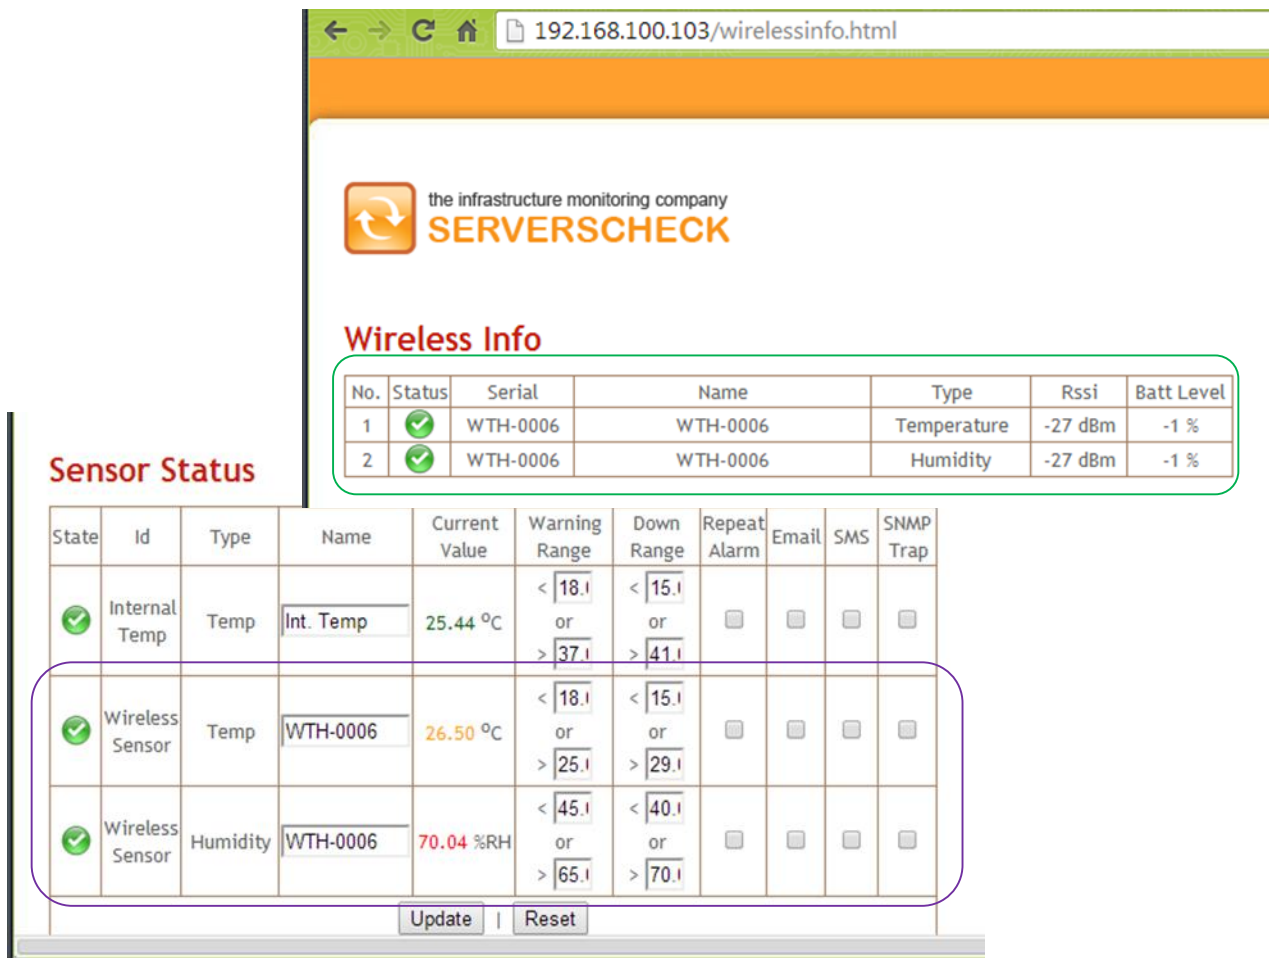


Figure 3 Showing new sensors

3. Let Wireless Sensor report measured value every 45 seconds.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and**
- (2) this device must accept any interference received, including interference that may cause undesired operation.**

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.☞☞