 


MID-R7801QC

User Manual



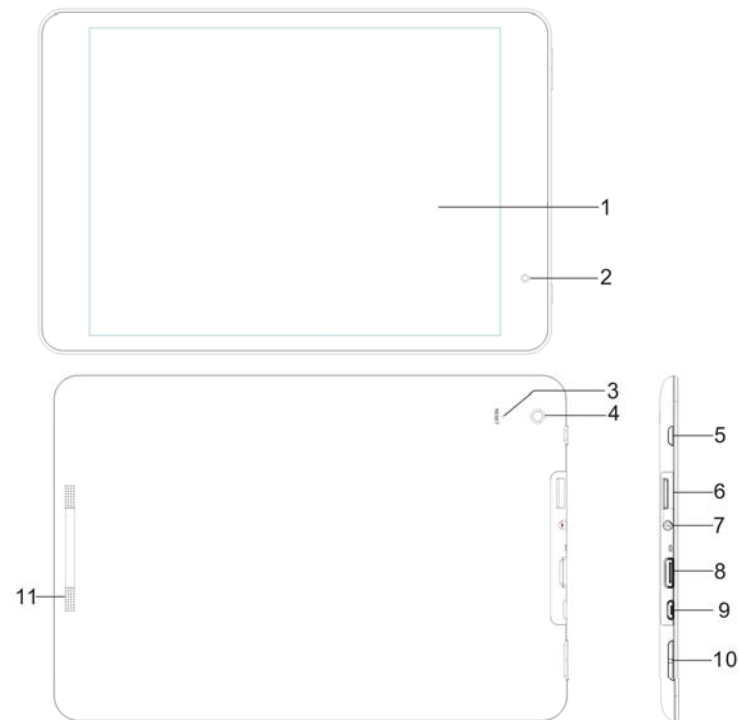

1. Touch screen
2. Front camera
3. Reset button
4. Rear camera
5. Power button
6. Micro sd card slot
7. Earphone jack: 3.5mm standard earphone jack.
8. HDMI jack
9. Micro USB / OTG, charging
10. Volume button
11. Speakers

【TIPS】:

1. When the battery is low, it will power off automatically.
2. When you restart, device will scan and repair the disk . The screen will display the progress bar for a short time
3. Definition of "Press":
 Short Press: Press the button less than 2 seconds.
 Long Press: Press the button more than 3 seconds.

**This manual contains important safety precautions and information of correct use.
Please be sure to read this manual carefully before use so as to avoid any accidents.**

Do not place the product in hot, wet or dusty environment, especially in summer, do not leave the product inside a car with all windows closed.

Avoid dropping, impacting or shaking the product violently, otherwise it may cause damages or malfunctions. Select a proper volume to avoid ear problem when using earphones.

Do not cross the road or drive vehicles, using headphones to avoid traffic accidents.

Be sure to use the provided chargers and accessories in the package.

Be sure to charge the product when the following situations take place,

- The battery icon shows lower or empty.
- System automatically shut down and it turns off soon after restart,
- Operation keys do not respond properly.
- The device shows  on the top right corner.

 
1. Power On/Off

Long press power button to turn on/off the device. It may take a minute to boot the device.

Short press power button to turn on/off the screen.(Standby mode. Refer to 3.below)

2. Desktop


After turning on the device, desktop displays with shortcut icons and arrow panel at the right side

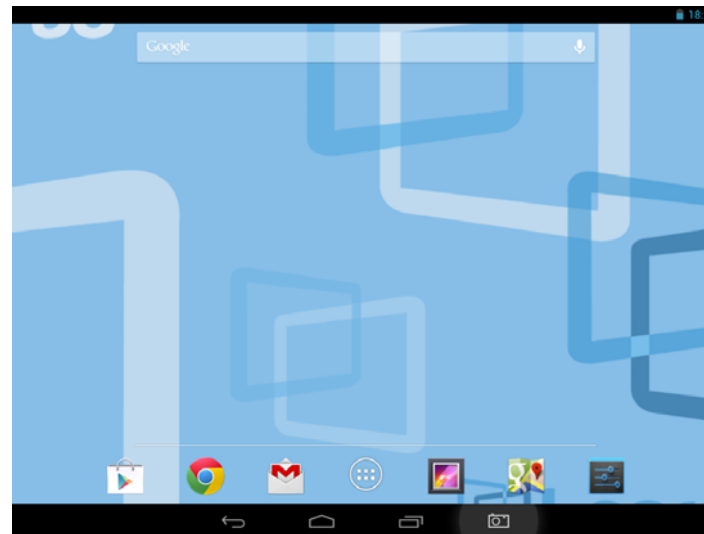

3. Standby mode (Screen off mode) / Unlock the screen


Short press the power button to turn on/off the screen (standby mode on/off)

 After standby mode, slide the lock icon in order to unlock the screen.

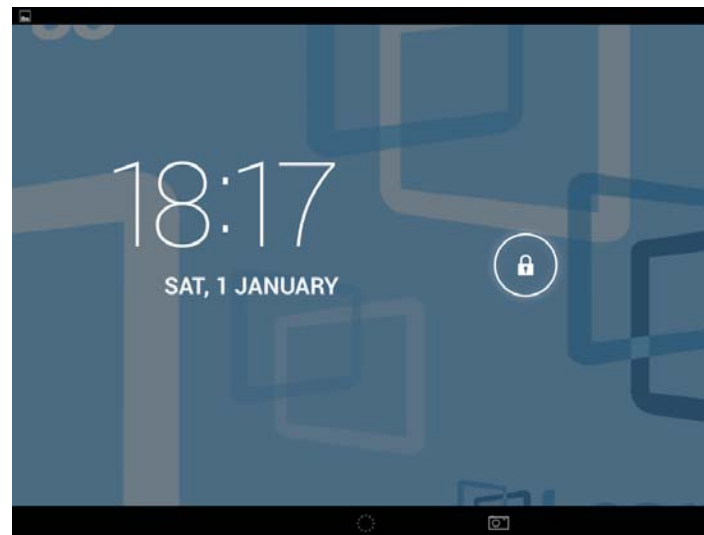

4. System settings

 On the desktop, press menu button and select system settings.

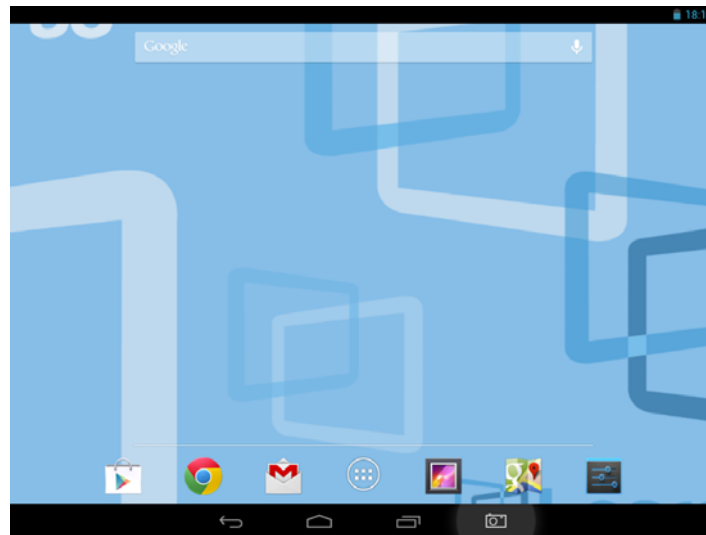


Press System Settings

1. Wireless & networks




Wi-Fi – Press Wi-Fi to turn on/off: Set up each setting as you like. Wi-Fi settings - Press Wi-Fi settings, then the device will automatically search the available Wi-Fi signals. Select the network you want to connect with.

 2. Data usage

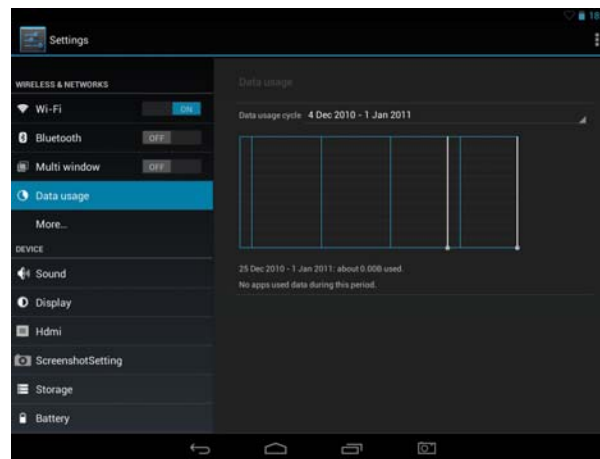


Slide mobile data switch to select open or close the flow usage.

 3. More...

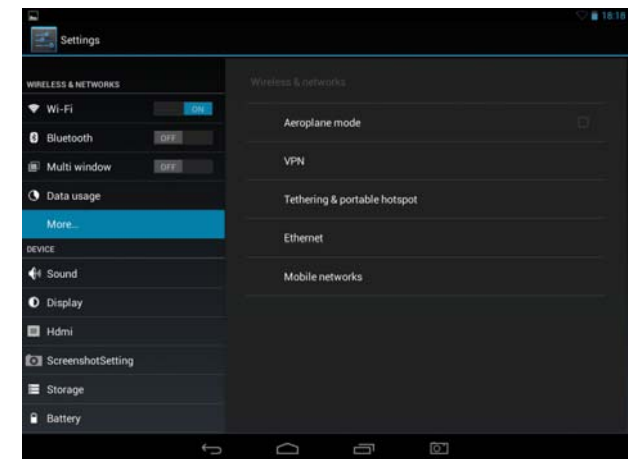

For more information on mobile data and Bluetooth options, Flight mode, Bluetooth sharing, 3G support information

 4. Sound

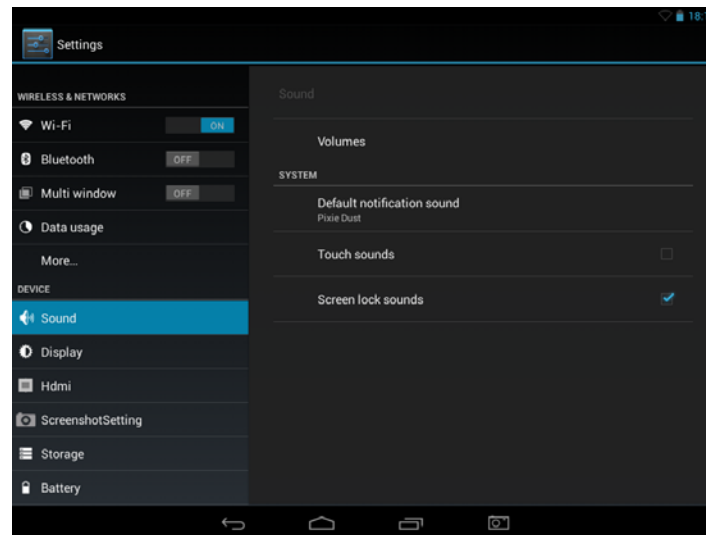

5. Display



Set up each setting as you like.

 
6. Storage



Check device memory and Micro SD card status.
Unmount SD card – Unmount the SD card for safe removal.


7. Battery

Check battery usage status.

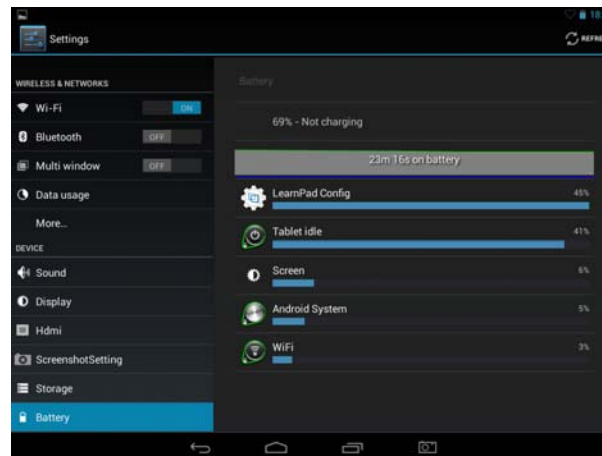

8. Apps

 Manage downloaded or running applications.

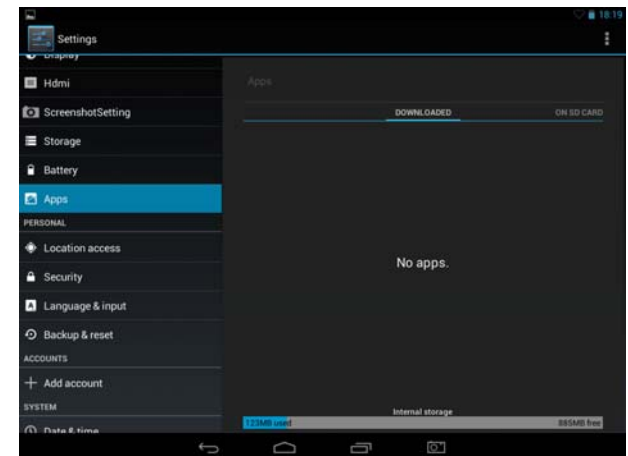

Downloaded
All installed application are listing.



Running services
view and control currently running services.

9. Account & sync

Create your account. After connecting Wi-Fi network, the e-mailing system synchronizes your account with the device. Emails are automatically downloaded into the device.

 
10. Location services

Google's location service - Let apps use data from sources such as Wi-Fi and mobile networks to determine your approximate location

11. Security

Screen lock – Protect your device from unauthorized use by creating a personal screen unlock pattern. Make passwords visible – Show password as you type.

Unknown sources - If you want to allow installation of non-Market Applications, Press Unknown sources and presses OK.

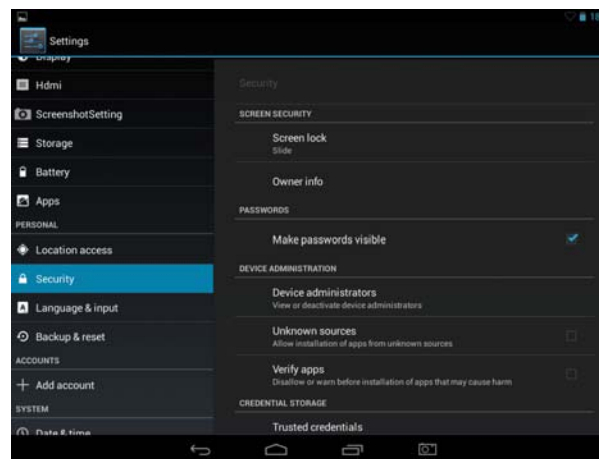


Install from SD card – Install encrypted certify castes from SD card.

12. Language & input

Language – Choose your preferable language.

Keyboard & input method – Change keyboard & keyboard settings.

 On Language & input settings, if you need other languages besides English on keyboard, press the relevant keyboard and enter the chosen Keyboard settings, select Keyboards, press the language you need.

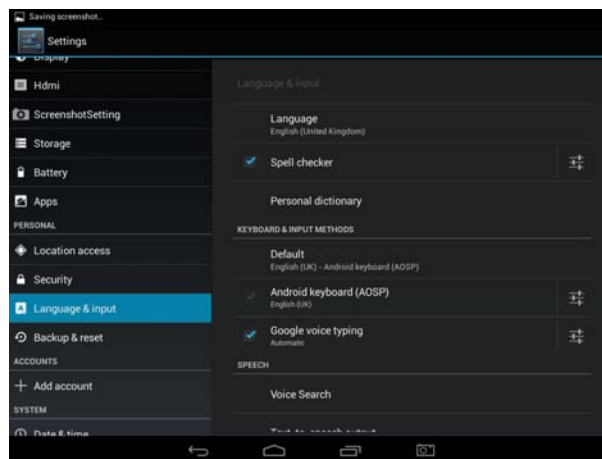

13. Backup & Reset

14. Date & time

Set date & time and format

15. Accessibility

 
Set date & time and format

16. Developer options

Set options for application development


17. About Tablet


See status, legal information, ETC

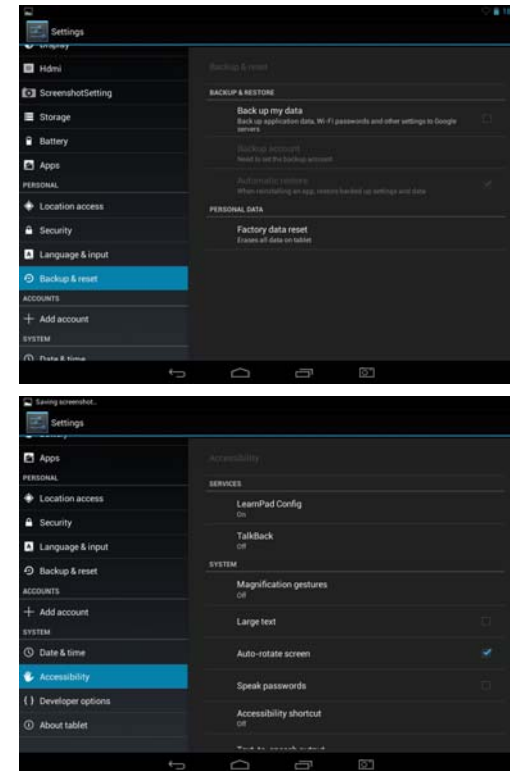


How to connect/disconnect the device with/from the computer

  On main desktop, connect the device with the PC,
Touch right side of the status bar on the bottom of desktop

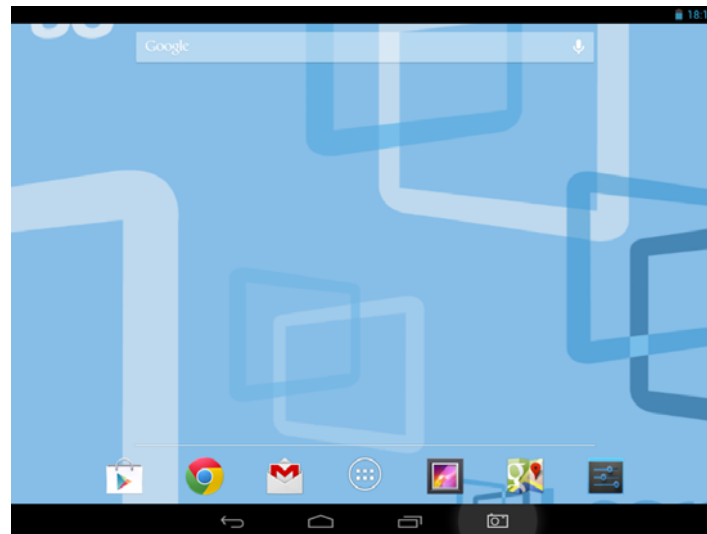

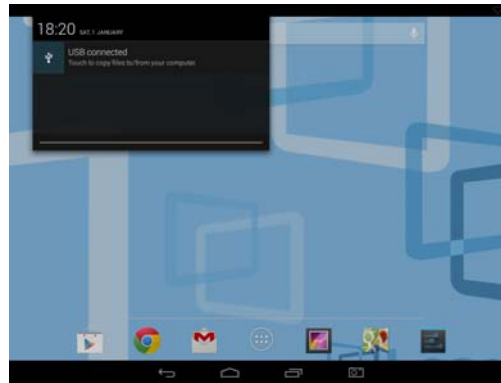

 Press “USB connected”, select “Turn on USB storage”.
The device is recognized at Explorer of the computer.
Now you can use it as an external storage.

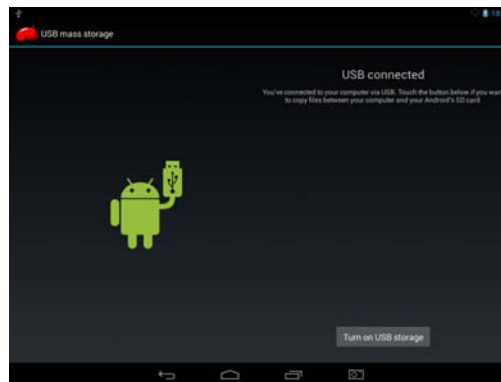

After finishing your work,
Press “Turn on USB storage ”to unmount it.

How to install Applications (.apk file) into the device

Method 1.

1. Connect the device with internet. See above [1.Wireless & networks] in order to connect internet.
2. Run “Get jar” and search the applications you want to install.
3. Follow the instruction on the screen for installation.

Method 2.

1. With your computer, search application file (.apk) that you want to install into the device.
2. Download the file (.apk) into your computer.
3. Connect the device with your computer.
See above [How to connect/disconnect the device with/from the computer.]
4. Copy and paste .apk file into the device and disconnect it from your computer.
5. Run “File browser” and .apk file that was copied into the device.
6. Press the file to install and follow the instruction on the screen.


Note

You may only download adult applications if you are at least 18 years of age, or at least the age of majority in the jurisdiction where you reside or from which you download adult applications. If you do not meet these requirements, then you do not have permission to download adult applications.

In case of any problems including legal issues from the breach by end-user's own decision, the manufacturer shall not be responsible.

How to make desktop icons


Press the upper right side icon of desktop, the pop-up displays.

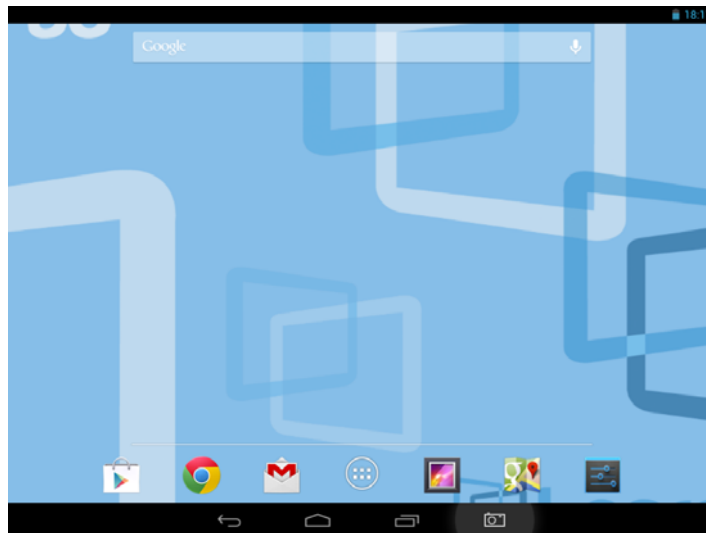 



Shortcuts

 Long press your desired APK icon and put it on the desktop.

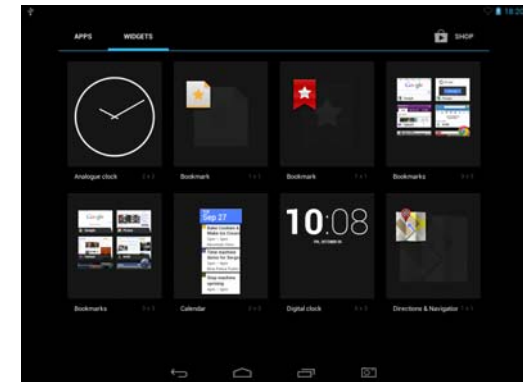

Widgets

Press Widgets and press your desired icon to put it on the desktop.

Wallpaper

Long press the desktop, press Wallpapers and select one of categories of wallpaper. Select one you desire and press set wallpaper.

FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Product Specification

OS	Android 4.2.2
CPU	RK3188 Cortex-A9 Quad-Core 1.6GHz
System RAM	1GB DDRIII
Memory	16GB NAND Flash
LCD	7.85" 1024*768 LED-Backlight panel
Battery	4100 mAh
Touch Panel	Multi-point Capacitive touch screen
WIFI	802.11 a/b/g/n
Ethernet LAN	Yes (USB dongle) (Note: 3G USB-DONGLE is not in the package of the product)
Multiuser	Yes
Gravity	3D gravity sensor
Camera	Front 2.0 MBpixels rear 5.0 MBpixels
Music format	MP3,WMA,MP2,OGG,AAC,M4A,MA4,FLAC,APE,3GP,WAV
Video format	AVI (H.264, DIVX, DIVX, XVID, rm, rmvb, MKV (H.264, DIVX, DIVX, XVID), WMV, MOV, MP4 (H.264, MPEG, DIVX, XVID), MPEG, MPG, FLV (H.263, H.264)
Picture format	JPEG, BMP, GIF,PNG