

HF-LPB135

Low Power WiFi Module User Manual

V 1.9



HF-LPB135

Overview of Characteristic

- ✧ **Support IEEE802.11b/g/n Wireless Standards**
- ✧ **Based on Cortex-M4 SOC, 160MHz CPU, 352KB RAM for 1MB Flash Version, 384KB for 2MB Flash**
- ✧ **Support UART Data Communication Interface**
- ✧ **Support Work As STA/AP/AP+STA Mode**
- ✧ **Support SmartLink V8 Function (Provide APP SDK)**
- ✧ **Support SmartAPLink Function**
- ✧ **Support WeChat Airkiss 2.0**
- ✧ **Support Wireless and Remote Firmware Upgrade Function**
- ✧ **Support Software SDK for Develop**
- ✧ **Support Different Antenna Option**
 - **HF-LPB135: Internal PCB or External IPEX**
- ✧ **Single +5V Power Supply for HF-LPB135**
- ✧ **Small Size:**

- **HF-LPB135: 41.3mm x 24.1mm x 6mm, 4Pin 2.54mm connectoer**
- ◇ **FCC/CE/SRRC/RoHS Certificated**

TABLE OF CONTENTS

LIST OF FIGURES.....	7
LIST OF TABLES.....	8
HISTORY.....	9
1. PRODUCT OVERVIEW.....	10
1.1. General Description.....	10
1.1.1 Key Application.....	10
1.1.2 Device Parameters.....	12
1.2. Hardware Introduction.....	13
1.2.1 HF-LPB135 Pins Definition.....	13
1.2.2 Electrical Characteristics.....	15
1.2.3 HF-LPB135 Mechanical Size.....	16
1.2.4 External Antenna.....	16
1.2.5 Evaluation Kit.....	17
1.2.6 Order Information.....	18
1.2.7 Hardware Typical Application.....	19
2. FUNCTIONAL DESCRIPTION.....	21
2.1. Wireless Networking.....	21
2.1.1 Basic Wireless Network Based On AP.....	21
2.1.2 Wireless Network Based On STA.....	21
2.2. Work Mode : Transparent Transmission Mode.....	22
2.3. Encryption.....	22
2.4. Parameters Configuration.....	22
2.5. Firmware Update.....	23
2.6. SOCKET B Function.....	23
2.7. Multi-TCP Link Connection.....	23
3. OPERATION GUIDELINE.....	25
3.1. Configuration.....	25
3.1.1 Open Web Management Interface.....	25
3.1.2 System Page.....	26
3.1.3 Work Mode Page.....	27
3.1.4 STA Setting Page.....	27
3.1.5 AP Setting Page.....	29
3.1.6 Other Setting Page.....	29
3.1.7 Account Management Page.....	30
3.1.8 Upgrade Software Page.....	30
3.1.9 Restart Page.....	30
3.1.10 Restore Page.....	31
3.1.11 Internal Webpage.....	31
3.2. Usage Introduction.....	32

3.2.1.	Software Debug Tools.....	32
3.2.2.	Network Connection.....	32
3.2.3.	Default Parameter Setting.....	32
3.2.4.	Module Debug.....	33
3.3.	Typical Application Examples.....	34
3.3.1.	Wireless Control Application.....	34
3.3.2.	Remote Management Application.....	35
3.3.3.	Transparent Serial Port Application.....	35
4.	AT+INSTRUCTION INTRODUCTION.....	36
4.1.	Configuration Mode.....	36
4.1.1.	Switch to Configuration Mode.....	36
4.1.2.	Send AT Command in Transparent Transmission Mode.....	37
4.2.	AT+Instruction Set Overview.....	37
4.2.1.	Instruction Syntax Format.....	38
4.2.2.	AT+Instruction Set.....	39
4.2.2.1.	AT+E.....	40
4.2.2.2.	AT+CMDPW.....	41
4.2.2.3.	AT+WMODE.....	41
4.2.2.4.	AT+ENTM.....	41
4.2.2.5.	AT+TMODE.....	42
4.2.2.6.	AT+MID.....	42
4.2.2.7.	AT+VER.....	42
4.2.2.8.	AT+BVER.....	42
4.2.2.9.	AT+HWVER.....	43
4.2.2.10.	AT+RELD.....	43
4.2.2.11.	AT+FCLR.....	43
4.2.2.12.	AT+Z.....	43
4.2.2.13.	AT+H.....	43
4.2.2.14.	AT+CFGTF.....	43
4.2.2.15.	AT+UART.....	44
4.2.2.16.	AT+PING.....	44
4.2.2.17.	AT+NETP.....	45
4.2.2.18.	AT+MAXSK.....	45
4.2.2.19.	AT+TCPLK.....	45
4.2.2.20.	AT+TCPTO.....	46
4.2.2.21.	AT+TCPDIS.....	46
4.2.2.22.	AT+SEND.....	47
4.2.2.23.	AT+RECV.....	47
4.2.2.24.	AT+SOCKB.....	47
4.2.2.25.	AT+TCPDISB.....	48
4.2.2.26.	AT+TCPTOB.....	48
4.2.2.27.	AT+TCPLKB.....	48
4.2.2.28.	AT+SNDB.....	48
4.2.2.29.	AT+RCVB.....	49

4.2.2.30.	AT+UDPLCPT.....	49
4.2.2.31.	AT+WSSSID.....	49
4.2.2.32.	AT+WSKEY.....	50
4.2.2.33.	AT+WANN.....	50
4.2.2.34.	AT+WSMAC.....	51
4.2.2.35.	AT+WSLK.....	51
4.2.2.36.	AT+WSLKO.....	51
4.2.2.37.	AT+WSLQ.....	52
4.2.2.38.	AT+WSCAN.....	52
4.2.2.39.	AT+LANN.....	52
4.2.2.40.	AT+WAP.....	52
4.2.2.41.	AT+WAKEY.....	53
4.2.2.42.	AT+WADHCP.....	53
4.2.2.43.	AT+WALK.....	54
4.2.2.44.	AT+WALKIND.....	54
4.2.2.45.	AT+WAPMXSTA.....	54
4.2.2.46.	AT+MDCH.....	54
4.2.2.47.	AT+OTA.....	55
4.2.2.48.	AT+UPURL.....	55
4.2.2.49.	AT+DISPS.....	55
4.2.2.50.	AT+PLANG.....	56
4.2.2.51.	AT+WEBU.....	56
4.2.2.52.	AT+WRMID.....	56
4.2.2.53.	AT+ASWD.....	57
4.2.2.54.	AT+SMTLK.....	57
4.2.2.55.	AT+WPS.....	57
4.2.2.56.	AT+NDBGL.....	57
4.2.2.57.	AT+TYPE.....	58
4.2.2.58.	AT+SMEM.....	58
4.2.2.59.	AT+WIFI.....	58
4.2.2.60.	AT+SMARTAPCONFIG.....	59
4.2.2.61.	AT+SMARTAPSTART.....	59
4.2.2.62.	AT+BTWAIT.....	59
5.	PACKAGE INFORMATION.....	61
5.1.	Recommended Reflow Profile.....	61
5.2.	Device Handling Instruction (Module IC SMT Preparation).....	61
5.3.	HF-LPB130/HF-LPT230 Shipping Information.....	62
5.4.	HF-LPT130A Shipping Information.....	62
	APPENDIX A: HW REFERENCE DESIGN.....	63
	APPENDIX B: HTTP PROTOCOL TRANSFER.....	64
	B.1. Sending HTTP Raw Data in Throughput Mode.....	64
	APPENDIX C: REFERENCES.....	65

C.1. High-Flying Mass Production Tool.....	65
C.2. SmartLink APP V8 Sniffer Config Tool.....	65
C.3. SDK.....	65
APPENDIX D: CONTACT INFORMATION.....	66

LIST OF FIGURES

Figure 1.	HF-LPB135-10 Appearance.....	13
Figure 2.	HF-LPB135 Pins Map.....	13
Figure 3.	HF-LPB135 Mechanical Dimension.....	16
Figure 4.	HF-LPB130 EVK.....	17
Figure 5.	HF-LPT230 EVK.....	18
Figure 6.	HF-LPB135 Order Information.....	19
Figure 7.	HF-LPB135 Hardware Typical Application.....	19
Figure 8.	HF-LPB135 Basic Wireless Network Structure.....	21
Figure 9.	HF-LPB135 STA Network Structure.....	21
Figure 10.	Socket B function demo.....	23
Figure 11.	Multi-TCP Link Data Transmission Structure.....	24
Figure 12.	Open Web Management page.....	25
Figure 13.	1MB Flash Version webpage.....	26
Figure 14.	System Web Page.....	26
Figure 15.	Work Mode Page.....	27
Figure 16.	STA Setting Page.....	28
Figure 17.	STA Scan Page.....	28
Figure 18.	AP Setting Page.....	29
Figure 19.	Other Setting Page.....	29
Figure 20.	Account Page.....	30
Figure 21.	Upgrade SW page.....	30
Figure 22.	Restart Page.....	31
Figure 23.	Restore Page.....	31
Figure 24.	Internal Webpage.....	32
Figure 25.	STA Interface Debug Connection.....	32
Figure 26.	AP Interface Debug Connection.....	32
Figure 27.	“CommTools” Serial Debug Tools.....	33
Figure 28.	“TCPUDPDbg” Tools Create Connection.....	33
Figure 29.	“TCPUDPDbg” Tools Setting.....	34
Figure 30.	“TCPUDPDbg” Tools Connection.....	34
Figure 31.	Wireless Control Application.....	34
Figure 32.	Remote Management Application.....	35
Figure 33.	Transparent Serial Port Application.....	35
Figure 34.	HF-LPB135 Default UART Port Parameters.....	36
Figure 35.	Switch to Configuration Mode.....	36
Figure 36.	“AT+H” Instruction for Help.....	38
Figure 37.	Reflow Soldering Profile.....	61
Figure 38.	HF-LPB130/HF-LPT230 Shipping Information.....	62
Figure 39.	Shipping Information.....	62

LIST OF TABLES

Table1.	HF-LPB135 Module Technical Specifications.....	12
Table2.	HF-LPB135 Pins Definition.....	13
Table3.	Absolute Maximum Ratings:.....	15
Table4.	Power Supply & Power Consumption:.....	15
Table5.	HF-LPB135 External Antenna Parameters.....	17
Table6.	HF-LPB135 Evaluation Kit Interface Description.....	18
Table7.	HF-LPB135 Web Access Default Setting.....	25
Table8.	Error Code Description.....	39
Table9.	AT+Instruction Set List.....	39
Table10.	Reflow Soldering Parameter.....	61

HISTORY

- Ed. V0.2** 07-25-2017 Internal Version.
- Ed. V0.2** 08-22-2017 Release Version
- Ed. V1.1** 13-10-2017 Add HF-LPT130A type module
- Ed. V1.2** 10-11-2017 Add HF-LPB130 type module
- Ed. V1.3** 03-01-2018 Update HF-LPT230 Pin, webpage config.
- Ed. V1.4** 03-01-2018 Add HF-LPT330 type, correct working temperature,voltage.
- Ed. V1.5** 04-28-2018 Add HF-LPB135 type, add 4.10.14 version software function. Add AT+TMODE, AT+PING, AT+BVER, AT+HWVER, AT+SMEM and others.
- Ed. V1.6** 06-15-2018 Delete 4MB version, add HF-LPT230-0 type
- Ed. V1.7** 08-08-2018 Add HF-LPT230-0 size, add HF-LPT130B type and 4.12.07 firmware new function(AT+CMDPW,AT+MDCH).
- Ed. V1.8** 10-10-2018 Add 4.12.14 version AT+SMARTAPCONFIG, AT+SMARTAPSTART, AT+BTWAIT command
- Ed. V1.9** 12-11-2018 Add AT+WSLKO command, fix LPB130 size picture error.

1. PRODUCT OVERVIEW

1.1. General Description

The HF-LPB135 is a fully self-contained small form-factor, single stream, 802.11b/g/n Wi-Fi module, which provide a wireless interface to any equipment with a Serial interface for data transfer. HF-LPB135 integrate MAC, baseband processor, RF transceiver with power amplifier in hardware and all Wi-Fi protocol and configuration functionality and networking stack, in embedded firmware to make a fully self-contained 802.11b/g/n Wi-Fi solution for a variety of applications.

The HF-LPB135 employs the world's lowest power consumption embedded architecture. It has been optimized for all kinds of client applications in the home automation, smart grid, handheld device, personal medical application and industrial control that have lower data rates, and transmit or receive data on an infrequent basis.

The HF-LPB135 series Wi-Fi modules provide different package with different size called HF-LPB130/HF-LPT230/HF-LPT130A/B(T means tiny). It is pin to pin compatible for HF-LPB100/HF-LPB120, HF-LPT200/HF-LPT220, HF-LPT100F/HF-LPT120A modules.

1.1.1 Key Application

- Remote equipment monitoring
- Asset tracking and telemetry
- Security
- Industrial sensors and controls
- Home automation
- Medical devices

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

this device may not cause harmful interference, and

this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Please notice that if the FCC identification number is not visible when the module is installed inside another device, then the outside of the device into which the module is installed must also display a label referring to the enclosed module. This exterior label can use wording such as the following: "Contains FCC ID:2ACSV-HF-LPB135" any similar wording that expresses the same meaning may be used.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator & your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

The module is limited to OEM installation ONLY.

The OEM integrator is responsible for ensuring that the end-user has no manual instruction to remove or install module.

The module is limited to installation in mobile application.

A separate approval is required for all other operating configurations, including portable configurations with respect to Part 2.1093 and difference antenna configurations.

There is requirement that the grantee provide guidance to the host manufacturer for compliance with Part 15B requirements.

The OEM integrator is responsible for ensuring that the end-user has no manual instructions to remove or install module.

The module is limited to installation in mobile or fixed application.

1.1.2 Device Parameters

Table1. HF-LPB135 Module Technical Specifications

Class	Item	Parameters
Wireless Parameters	Certification	FCC/CE/SRRC/RoHS
	Wireless standard	802.11 b/g/n
	Frequency range	2400MHz-2483.5MHz
	Transmit Power	802.11b: +16 +/-2dBm (@11Mbps)
		802.11g: +14 +/-2dBm (@54Mbps)
		802.11n: +13 +/-2dBm (@HT20, MCS7)
	Receiver Sensitivity	802.11b: -87 dBm (@11Mbps ,CCK)
		802.11g: -73 dBm (@54Mbps, OFDM)
		802.11n: -71 dBm (@HT20, MCS7)
	Antenna Option	HF-LPB130: Internal: PCB antenna External: IPEX antenna HF-LPT230: Internal: PCB antenna External: IPEX antenna HF-LPT130A: Internal: Copper Line antenna External: IPEX antenna HF-LPT130B: Internal: PCB antenna HF-LPT330: Internal: PCB antenna HF-LPB135: Internal: PCB antenna External: IPEX antenna
Hardware Parameters	Data Interface	UART GPIO,SPI
	Operating Voltage	2.9~4.2V
	Operating Current	Peak (Continuous TX): 260mA Average(STA, No data): 25mA Average(STA, Continuous TX): 32mA Average(AP): 80mA
	Operating Temp.	-40℃- 85℃ 0℃- 105℃(High Temperate Version)
	Storage Temp.	-40℃- 125℃
	Density	<85%
	Dimensions and Size	HF-LPB130: 23.1mm x 32.8mm x 3.5mm HF-LPT230: 22mm x 13.5mm x 3mm HF-LPT130A: 22mm x 14.3mm x 8mm HF-LPT130B: 22mm x 15.6mm x 8mm HF-LPT330: 24 mm x 16mm x 3mm HF-LPB135:

		41.3mm x 24.1mm x 6mm
Software Parameters	Network Type	STA/AP/AP+STA
	Security Mechanisms	WEP/WPA-PSK/WPA2-PSK
	Encryption	WEP64/WEP128/TKIP/AES
	Update Firmware	Local Wireless, Remote OTA
	Customization	Support SDK for application develop
	Network Protocol	IPv4, TCP/UDP/HTTP/TLS(SDK)
	User Configuration	AT+instruction set. Android/ iOS SmartLink APP tools

1.2. Hardware Introduction



Figure 1. HF-LPB135-10 Appearance

1.2.1. HF-LPB135 Pins Definition

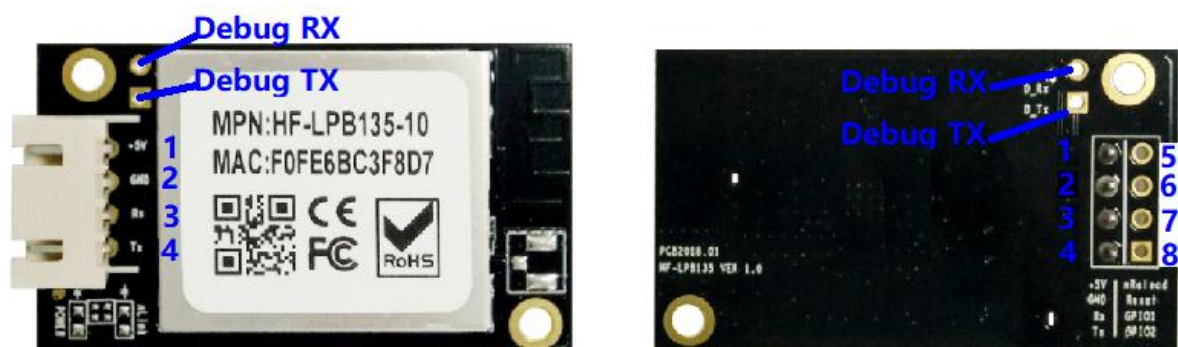


Figure 2. HF-LPB135 Pins Map

Table2. HF-LPB135 Pins Definition

Pi n	Description	Net Name	Signal Type	Comments
1	+5V Power	DVDD	Power	5V@300mA
2	Ground	GND	Power	Ground
3	UART0_RX	UART0_RX	I	5V UART0 Communication Input GPIO1

Pi n	Description	Net Name	Signal Type	Comments
4	UART0_TX	UART0_TX	O	5V UART0 Communication Output GPIO2
5	Multi-Function	nReload	IPU/O	Detailed functions see <Notes> GPIO25, PWM3
6	Module Reset	EXT_RESETn	I,PU	“Low” effective reset input. There is RC reset circuit internally. External pull-up resistor is not allowed.
7	GPIO0	GPIO0	I/O	GPIO0
8	GPIO13	GPIO13	I/O	GPIO13
	Debug RX	UART1_RXD	I	3.3V UART1 Debug Input
	Debug TX	UART1_TXD	O	3.3V UART1 Debug Output

<Notes>

I — Input; O — Output

PU—Internal Resistor Pull Up; I/O: Digital I/O; Power—Power Supply

nReload Pin (Button) function:

1. When this pin is set to “low” during module boot up, the module will enter wireless firmware and config upgrade mode. This mode is used for customer manufacture. (See Appendix to download software tools for customer batch configuration and upgrade firmware during mass production)
2. After module is powered up, short press this button (0.2s < “Low” < 1.5s) and loose to make the module go into “SmartLink “ config mode, waiting for APP to set password and other information. (See Appendix to download SmartLink V8 and SmartAPLink APP)
3. After module is powered up, long press this button (“Low” > 4s) and loose to make the module recover to factory setting.

High-Flying strongly suggest customer fan out this pin to connector or button for “Manufacture” upgrade or “ SmartLink” application.

nReady Pin (LED) function(Low effective):

1. OS initial finished indicator. Only after this pin output low, can the UART function be used.

nLink Pin (LED) function(Low effective):


1. At wireless firmware and config upgrade mode , this LED used to indicate configure and upgrade status.
2. At “SmartLink” config mode, this LED is used to indicate APP to finish setting.
3. At normal mode, it’s Wi-Fi link status indicator. Output Low when STA mode connect to router AP or other STA connect to it when in AP mode.

High-Flying strongly suggest customer fan out this pin to LED.

PWM function:

PWM0~PWM3 100ns period(if duty is from 0~255, then the maximum frequency is $10M/256=39KHz$), PWM4 support 800ns period.

Due to PWM pin is internal weak pull-up. So when these pins are used for LED bulb application, suggest to add strong pull-down resistor to revert the bulb on when boot.

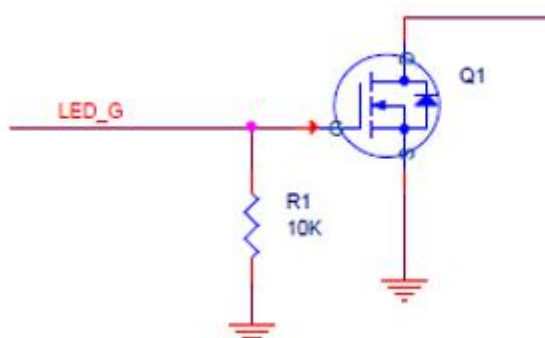

Note: nReload pin is also used for special function, when use this pin for PWM bulb application and add external pull-down resistor, this will cause the module wait 1 second when bootup(wait “space” key to enter bootloader). Contact us to provide special bootloader in order to remove this wait time.

UART1 Debug :

1. Is used for debug log or firmware program, baud rate 921600.
2. Can be used for communication in SDK.

1.2.2. Electrical Characteristics

Table3. Absolute Maximum Ratings:

Parameter	Condition	Min.	Typ.	Max.	Unit
Work temperature range		-40		105	°C
Maximum soldering temperature	IPC/JEDEC J-STD-020			260	°C
ESD (Human Body Model HBM)	TAMB=25°C			2.5	KV
ESD (MM)	TAMB=25°C			0.25	KV

Table4. Power Supply & Power Consumption:

Parameter	Condition	Min.	Typ.	Max.	Unit
Operating Supply voltage		2.9	3.3	4.2	V
Supply current, peak	Continuous Tx		260		mA
Supply current,	STA No data transfer		27		mA
Supply current,	STA Continuous data transfer		35		mA
Supply current,	AP		80		mA
GPIO sink current	GND+0.5V		3		mA
GPIO pull current	VCC-0.5V		3		mA

1.2.3. HF-LPB135 Mechanical Size

HF-LPB135 modules physical size (Unit: mm) as follows:

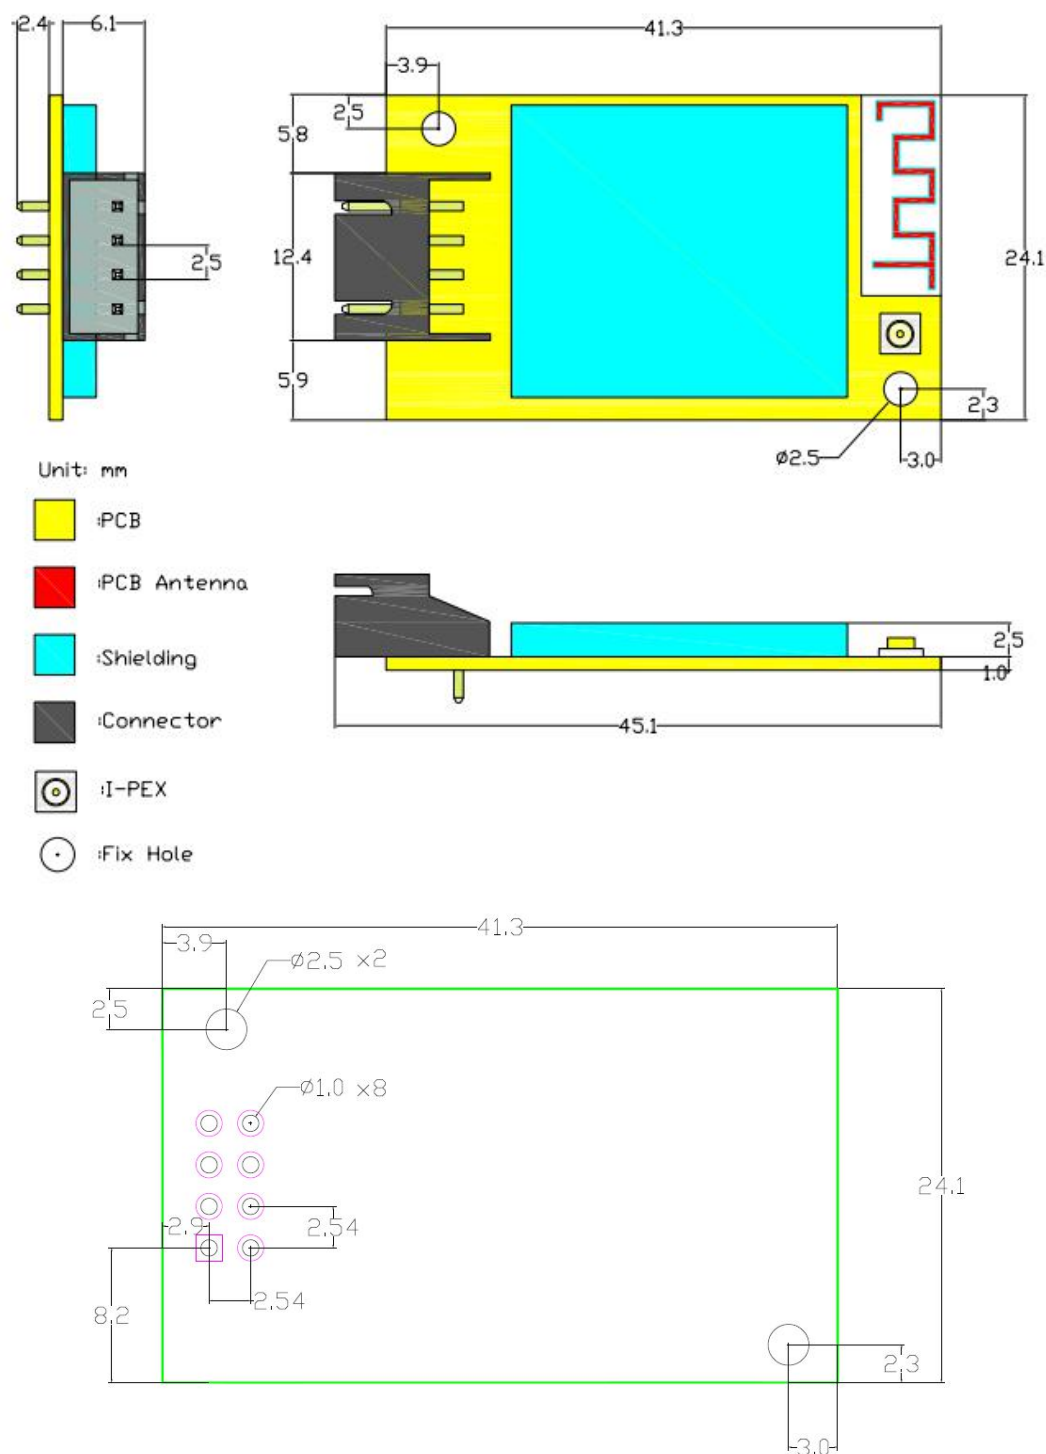


Figure 3. HF-LPB135 Mechanical Dimension

1.2.4. External Antenna

HF-LPB135 series module supports external antenna(I-PEX) option for user dedicated application.

If user select external antenna, HF-LPB135 series Wi-Fi modules must be connected to the 2.4G antenna according to IEEE 802.11b/g/n standards. We can provide external antenna if needed. Contact with our salesman.

The antenna parameters required as follows:

Table5. HF-LPB135 External Antenna Parameters

Item	Parameters
Frequency range	2.4~2.5GHz
Impedance	50 Ohm
VSWR	2 (Max)
Return Loss	-10dB (Max)
Connector Type	I-PEX or populate directly

1.2.5. Evaluation Kit

High-Flying provides the evaluation kit to promote user to familiar the product and develop the detailed application. The evaluation kit shown as below, user can connect to HF-LPB135 series module with the RS-232 UART, USB (Internal USB to UART convetor) or Wireless interface to configure the parameters, manage the module or do the some functional tests.

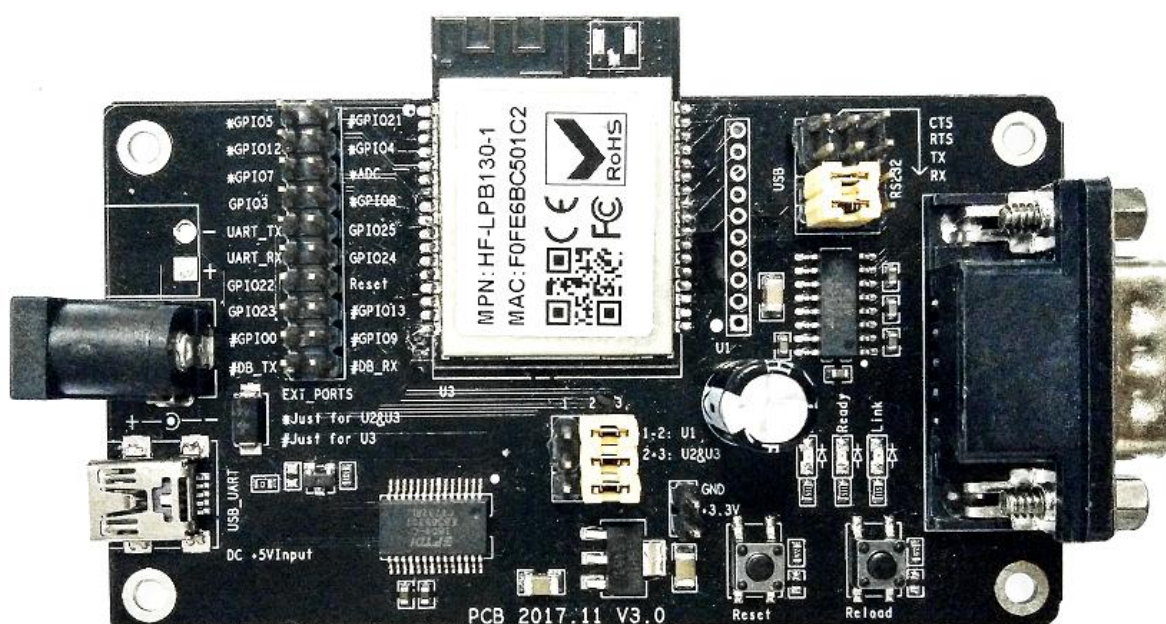


Figure 4. HF-LPB130 EVK

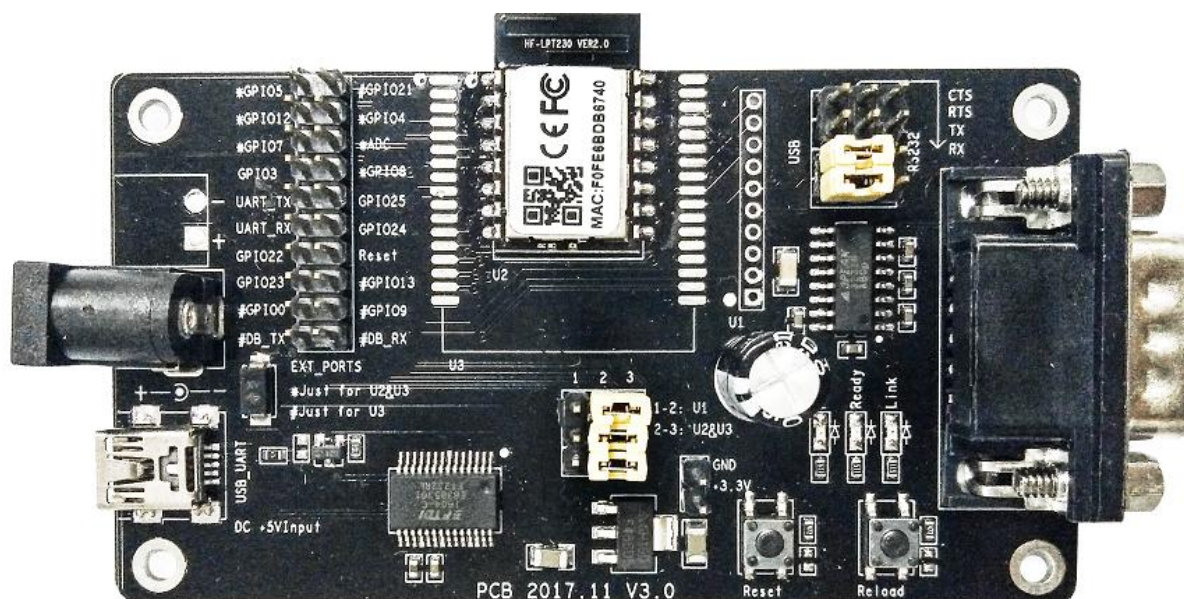


Figure 5. HF-LPT230 EVK

Notes: User need download USB to UART port driver from High-Flying web or contact with technical support people for more detail.

The external interface description for evaluation kit as follows:

Table6. HF-LPB135 Evaluation Kit Interface Description

Function	Name	Description
External Interface	RS232	Main data/command RS-232 interface, this interface maximum baud rate is 460800. Can not be used for debug UART log(It need 921600)
	USB	USB to UART interface, can be used for debug UART log
	DC5V	DC jack for power in, 5~9V input.
LED	Power	Power LED
	Ready	nReady LED
	Link	nLink LED
Button	nReload	Smartlink and Restore factory default configuration. See more for PIN Definition

1.2.6. Order Information

Base on customer detailed requirement, HF-LPB135 series modules provide different variants and physical type for detailed application.

HF-LPB135-XX (XM)

Blank: 1MB Flash
(2M): 2MB Flash

Connector:
0- 4PIN 2.5mm shrouded Header Side Enter
1- 8PIN 2.54mm Header Vertical Straight

ANT Option:
0-External (I-PEX)
1-Internal (PCB)

- Product : LPB135

Company : HF

Figure 6. HF-LPB135 Order Information

1.2.7. Hardware Typical Application

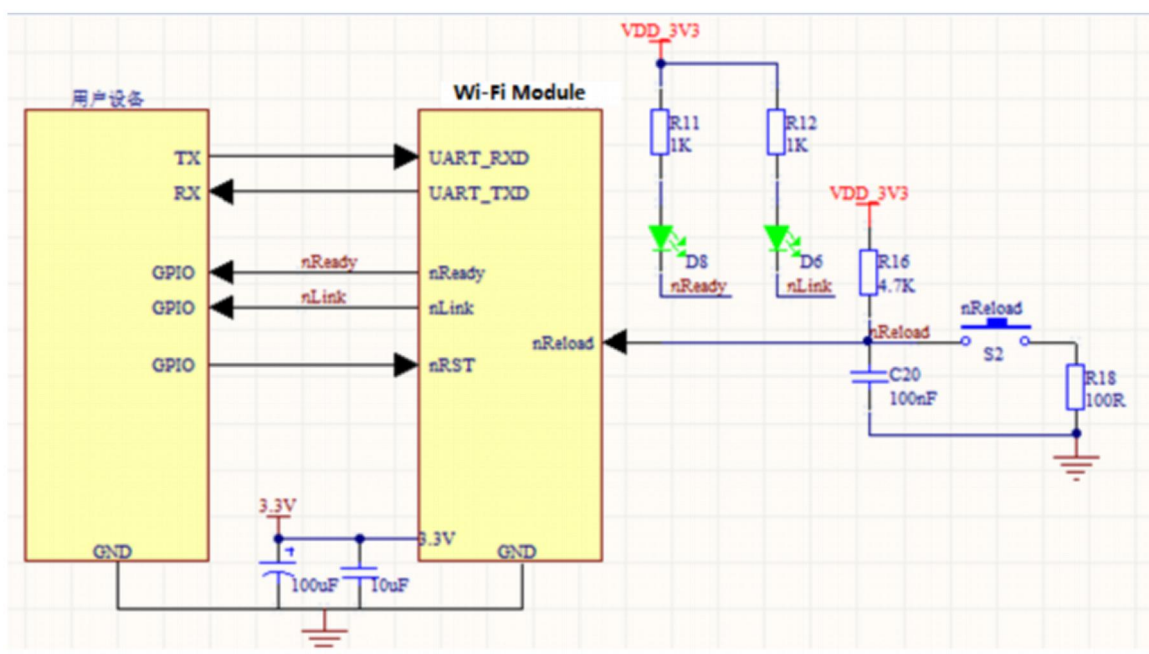


Figure 7. HF-LPB135 Hardware Typical Application

Notes:

nReset- Module hardware reset signal. Input. Logics “0” effective.

There is pull-up resistor internal and no external pull-up required. When module power up or some issue happened, MCU need assert nRST signal "0" at least 10ms, then set "1" to keep module fully reset.

nLink- Module WIFI connection status indication. Output.

(This pin is recommend to connect to LED, indicate status when the module in wireless upgrade mode)

When module connects to AP (AP associated), this pin will output “0”. This signal used to judge if module already at WiFi connection status. There is pull-up resistor internal and no external pull-up required. If nLink function not required, can leave this pin open.

nReady- Module boot up ready signal. Output. Logics “0” effective.

The module will output “0” after normal boot up. This signal used to judge if module finish boot up and ready for application or working at normal mode. If nReady function not required, can leave this pin open.

nReload- Module restore to factory default configuration. Input. Logics “0” effective.

(This pin is recommend to connect to button, is used to enter wireless upgrade mode)

User can de-assert nReload signal “0” more than 4s through button or MCU pin, then release, module will restore to factory default configuration and re-start boot up process.. If nReload function not required, can leave this pin open.

UART0_TXD/RXD- UART port data transmit and receive signal.

2. FUNCTIONAL DESCRIPTION

2.1. Wireless Networking

HF-LPB135 module can be configured as both wireless STA and AP base on network type. Logically there are two interfaces in HF-LPB135. One is for STA, and another is for AP. When HF-LPB135 works as AP, other STA equipments are able to connect to HF-LPB135 module directly. Wireless Networking with HF-LPB135 is very flexible.

Notes:

AP: that is the wireless Access Point, the founder of a wireless network and the centre of the network nodes. The wireless router we use at home or in office may be an AP.

STA: short for Station, each terminal connects to a wireless network (such as laptops, PDA and other networking devices) can be called with a STA device.

2.1.1. Basic Wireless Network Based On AP

Infrastructure: it's also called basic network. It built by AP and many STAs which join in.

The characters of network of this type are that AP is the centre, and all communication between STAs is transmitted through the AP. The figure following shows such type of networking.

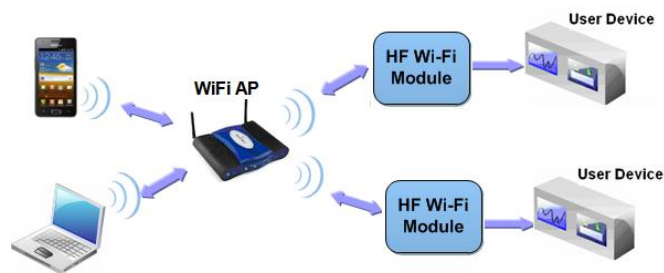


Figure 8. HF-LPB135 Basic Wireless Network Structure

2.1.2. Wireless Network Based On STA

HF-LPB135 module support STA network mode.

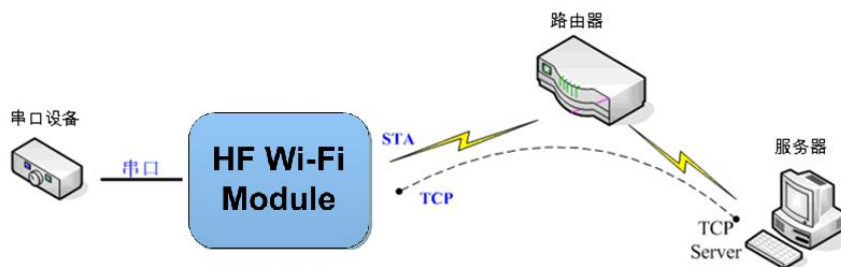


Figure 9. HF-LPB135 STA Network Structure

2.2. Work Mode : Transparent Transmission Mode

HF-LPB135 module support serial interface transparent transmission mode. The benefit of this mode is achieves a plug and play serial data port, and reduces user complexity furthest. In this mode, user should only configure the necessary parameters. After power on, module can automatically connect to the default wireless network and server.

As in this mode, the module's serial port always work in the transparent transmission mode, so users only need to think of it as a virtual serial cable, and send and receive data as using a simple serial. In other words, the serial cable of users' original serial devices is directly replaced with the module; user devices can be easy for wireless data transmission without any changes.

The transparent transmission mode can fully compatible with user's original software platform and reduce the software development effort for integrate wireless data transmission.

The parameters which need to configure include:

- **Wireless Network Parameters**
 - Wireless Network Name (SSID)
 - Security Mode
 - Encryption Key
- **TCP/UDP Linking Parameters**
 - Protocol Type
 - Link Type (Server or Client)
 - Target Port ID Number
 - Target Port IP Address
- **Serial Port Parameters**
 - Baud Rate
 - Data Bit
 - Parity (Check) Bit
 - Stop Bit
 - Hardware Flow Control

2.3. Encryption

Encryption is a method of scrambling a message that makes it unreadable to unwanted parties, adding a degree of secure communications. There are different protocols for providing encryption, and the HF-LPB135 module supports following:

- ◆ WEP
- ◆ WPA-PSK/TKIP
- ◆ WPA-PSK/AES
- ◆ WPA2-PSK/TKIP
- ◆ WPA2-PSK/AES

2.4. Parameters Configuration

HF-LPB135 module supports two methods to configuration parameters: **AT+instruction set**.

AT+instruction set configuration means user configure parameters through serial interface command. Refer to “AT+instruction set” chapter for more detail.

2.5. Firmware Update

HF-LPB135 module supports multiple upgrade methods:

- UART upgrade
- Local Network upgrade

2.6. SOCKET B Function

HF-LPB135 support double socket communication, the socket B function is disabled by default.

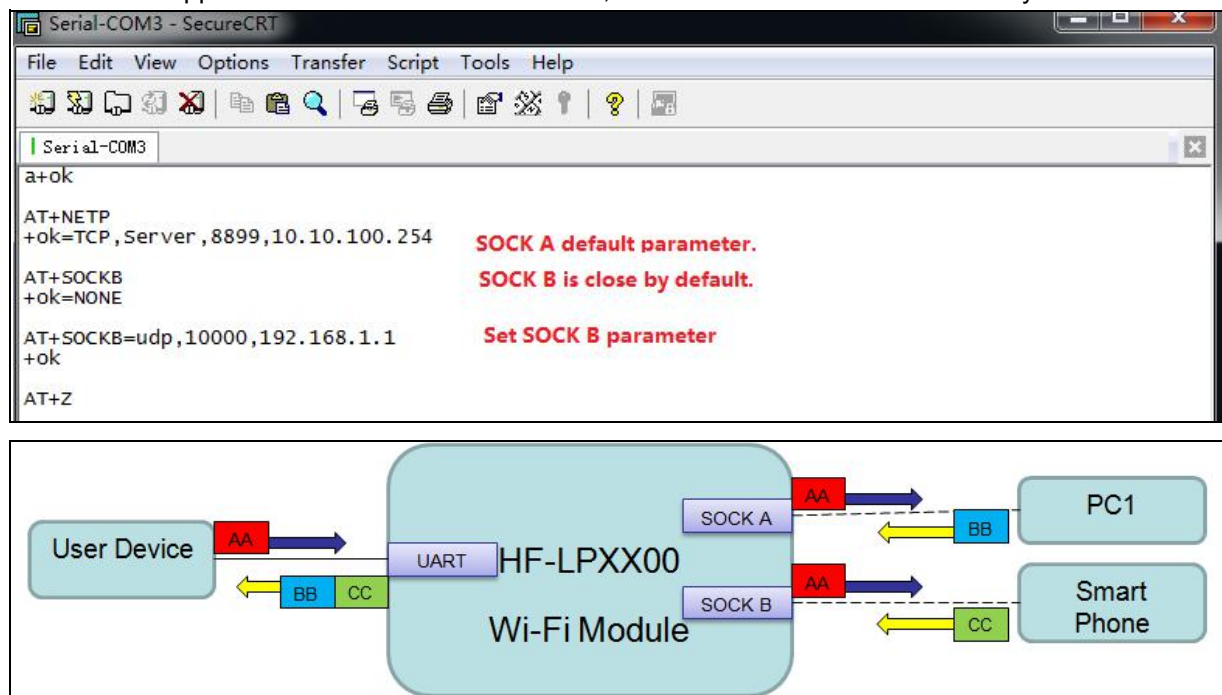


Figure 10. Socket B function demo

2.7. Multi-TCP Link Connection

When HF-LPB135 module SOCK A configured as TCP Server, it supports Multi-TCP link connection, and maximum 5 TCP clients permitted to connect to HF-LPB135 module. User can realize multi-TCP link connection at each work mode.

Multi-TCP link connection will work as following structure:

Upstream: All dates from different TCP connection or client will be transmitted to the serial port as a sequence.

Downstream: All data from serial port (user) will be replicate and broadcast to every TCP connection or client.

Detailed multi-TCP link data transmission structure as following figure:

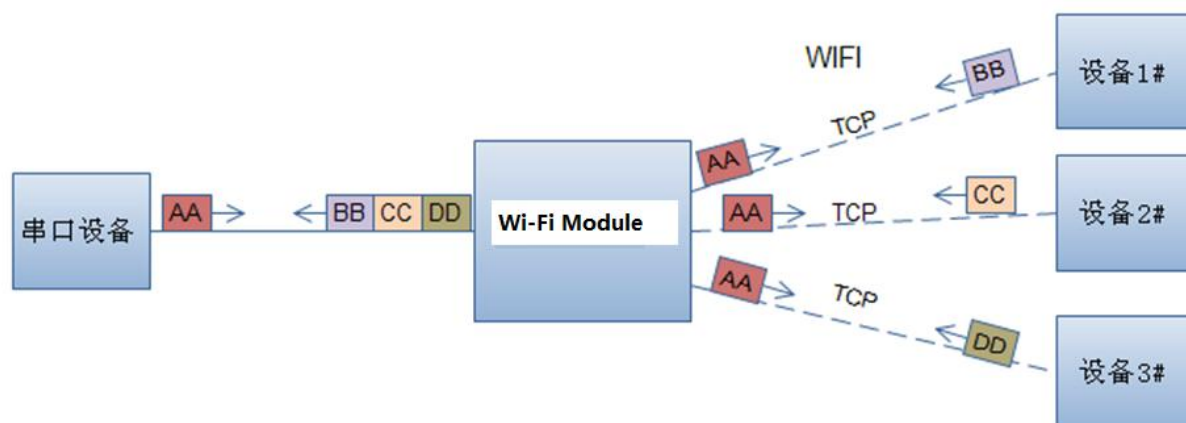


Figure 11. Multi-TCP Link Data Transmission Structure

3. OPERATION GUIDELINE

3.1. Configuration

When first use HF-LPB135 series modules, user may need some configuration. User can connect to HF-LPB135 module's wireless interface with following default setting information and configure the module through laptop.

Table7. HF-LPB135 Web Access Default Setting

Parameters	Default Setting
SSID	HF-LPB130 HF-LPT230 HF-LPT130A HF-LPT130B HF-LPT330
IP Address	10.10.100.254
Subnet Mask	255.255.255.0
Account	admin
Password	admin

3.1.1. Open Web Management Interface

There is internal webpage and external webpage in modules. The external webpage is for web management. The internal webpage is only for upgrading. 1MB Flash external webpage is different from 2MB/4MB Flash version, but the internal webpage is the same.

Step 1: Connect laptop to SSID "HF-LPT230" of HF-LPT230 module via wireless LAN card;

Step 2: After wireless connection OK. Open Wen browser and access "**http://10.10.100.254**";

Step 3: Then input user name and password in the page as following and click "OK" button.



Figure 12. Open Web Management page

The 1MB Flash version has the simple config page while the 2MB/4MB Flash version has the full config page. 1MB Flash version webpage is as following(By default is Chinese language, upgrade via internal webpage to upgrade English language).

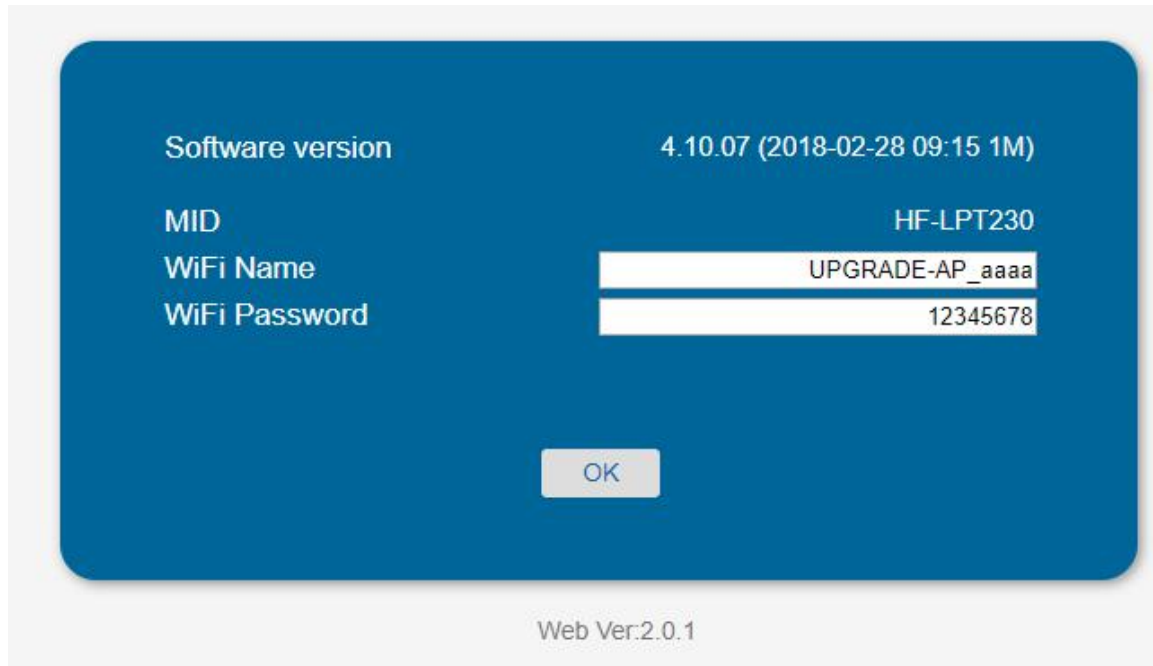


Figure 13. 1MB Flash Version webpage

The HF-LPB135 web management page support English and Chinese language. User can select language environment at the top right corner and click “Apply” button.

The main menu include nine pages: “System”, “Work Mode”, “STA Setting”, “AP Setting”, “Other Setting”, “Account”, “Upgrade SW”, “Restart”, “Restore”.

3.1.2. System Page

At this page, user can check current device’s important information and status such as: device ID (MID), software version, wireless work mode and related Wi-Fi parameters.



Figure 14. System Web Page

3.1.3. Work Mode Page

HF-LPB135 module can works at AP mode to simplify user's configuration, can also works at STA to connect remote server through AP router.

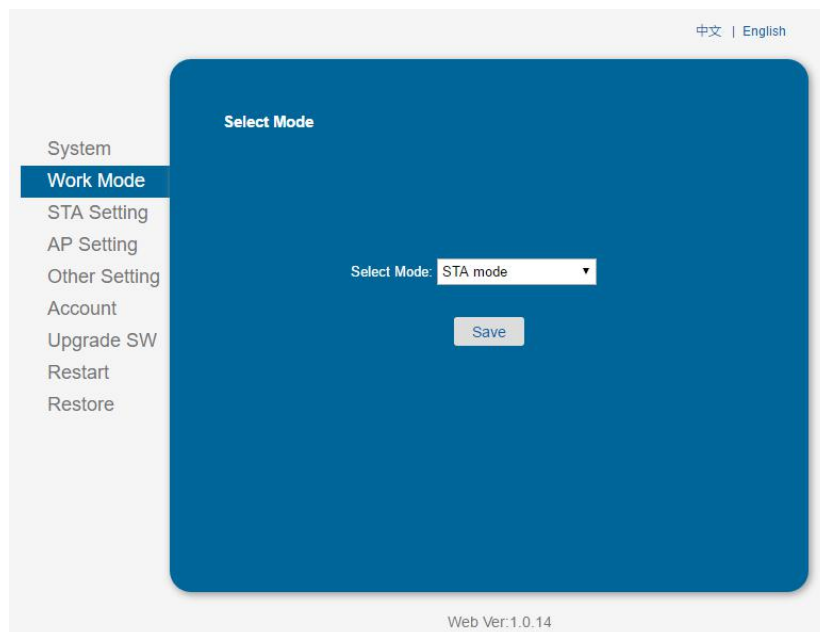


Figure 15. Work Mode Page

3.1.4. STA Setting Page

User can push “Scan” button to auto search Wi-Fi AP router nearby, and can connect with associate AP through some settings. Please note the encryption information input here must be fully same with Wi-Fi AP router's configuration, and then it can link with AP correctly.

中文 | English

System
Work Mode
STA Setting
AP Setting
Other Setting
Account
Upgrade SW
Restart
Restore

Network Name (SSID)
Note: case sensitive

UPGRADE-AP_aaaa

Scan

Encryption Method

WPA2PSK

Encryption Algorithm

AES

Password

.....

☐ Show passwords

Obtain an IP address automatically

Enable

IP Address

192.168.0.121

Subnet Mask

255.255.255.0

Gateway Address

192.168.0.1

DNS Server Address

192.168.0.1

Save

Web Ver:1.0.14

Figure 16. STA Setting Page

中文 | English

System
Work Mode
STA Setting
AP Setting
Other Setting
Account
Upgrade SW
Restart
Restore

Please select your current wireless network

Site Survey

	SSID	BSSID	RSSI	Channel
☐	youranmx	28:2C:B2:D2:E5:96	100	1
☐	UPGRADE-AP_aaaa	C8:3A:35:54:B3:70	100	11
☐	Soneter	10:BF:48:E6:F3:98	100	6
☐	UPGRADE-AP	24:69:68:7F:68:6E	100	11
☐	NETGEAR60	04:A1:51:15:22:6A	100	6
☐	TOTOLINK_LiLi	00:0E:E8:B6:57:2C	96	11
☐	MERCURY_2607	BC:5F:F6:17:26:07	92	1
☐	ChinaNet-demon	14:75:90:0B:C6:B2	92	1
☐	newifi_4F7C	20:76:93:20:4F:7C	92	12
☐	PHICOMM_85E8	8C:AB:8E:66:85:F0	90	4
☐	LQJ-AP	14:75:90:B5:BE:3A	90	10
☐	ZTE-D64C00	34:37:59:D6:4C:00	88	11
☐	Aaron	00:34:FE:5E:7E:EC	86	10
☐	bf_his	00:0F:E8:B6:55:54	82	1

OK Refresh

Web Ver:1.0.14

Figure 17. STA Scan Page

3.1.5. AP Setting Page

When user select module works at AP and AP+STA mode, then need setting this page and provide wireless and network parameters. Most of the system support DHCP to achieve IP address, so we suggest to “Enable” DHCP server in most applications.

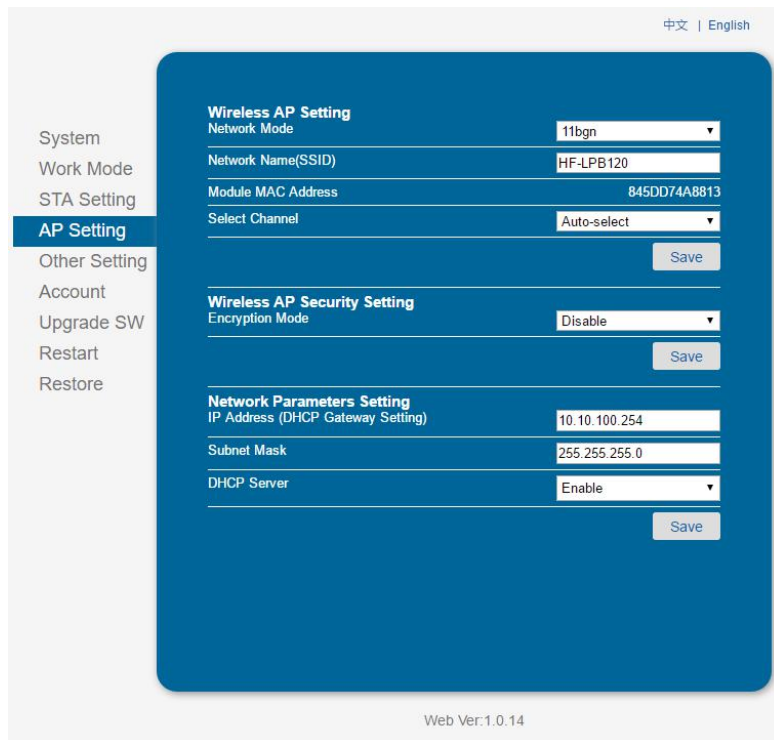


Figure 18. AP Setting Page

3.1.6. Other Setting Page

HF-LPB135 usually works at data transparent transmission mode. At this mode, the user device which connected with HF-LPB135 will connect and communicate with remote PC or server. At this page, user need setting serial port communication parameters and defines TCP related protocol parameters.

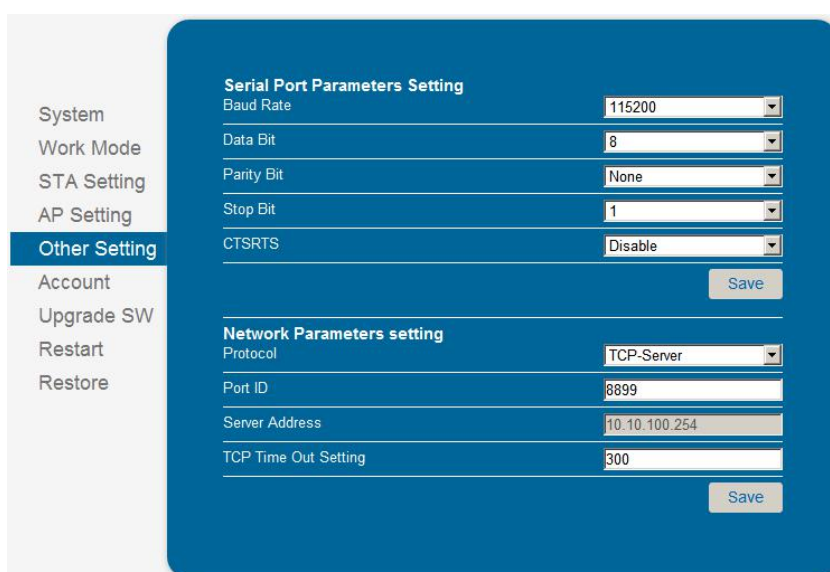


Figure 19. Other Setting Page

3.1.7. Account Management Page

This page set web server's user name and password.

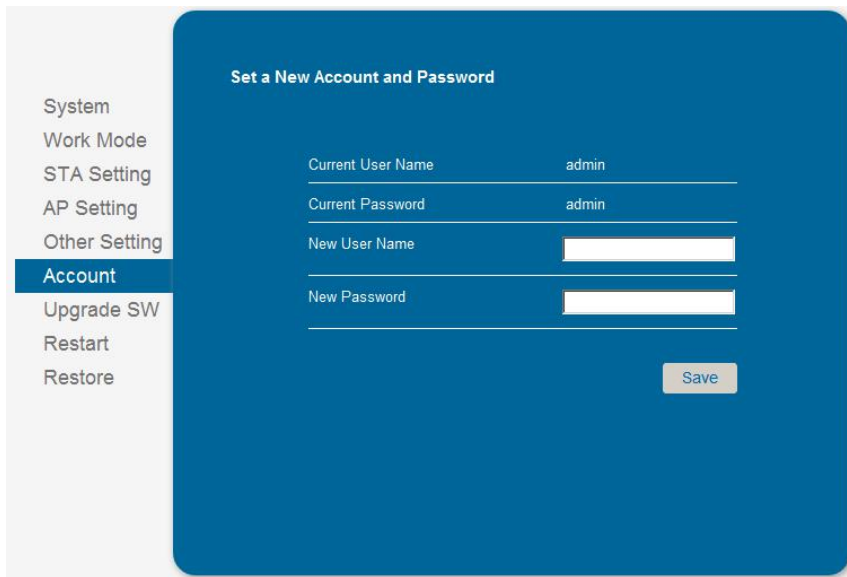


Figure 20. Account Page

3.1.8. Upgrade Software Page

User can upgrade new software (firmware) version through Wi-Fi. After upgrade success, need reboot it manually before new firmware valid.

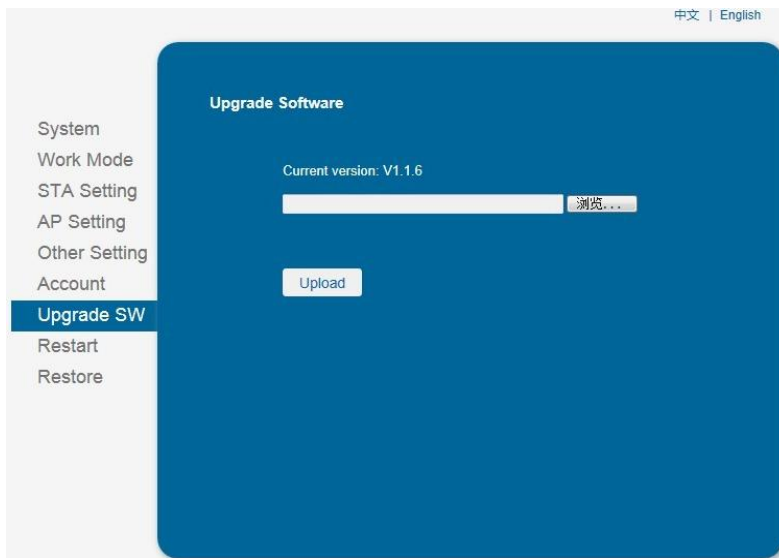


Figure 21. Upgrade SW page

3.1.9. Restart Page

Most of the setting and configuration can only effective after system restart. User shall restart after finish all setting.

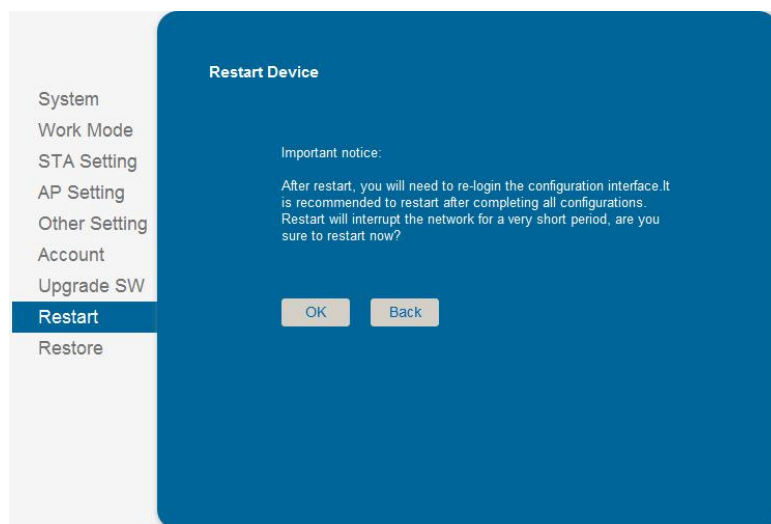


Figure 22. Restart Page

3.1.10. Restore Page

After module restore factory default setting, all user configuration profile will lose.

User can access <http://10.10.100.254> to set again, and user name and password is “admin”. HF-LPB135 will restore to AP mode for factory default setting.

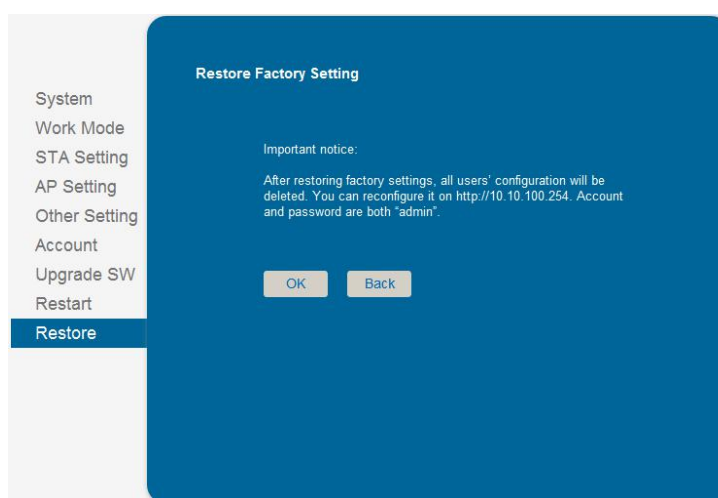


Figure 23. Restore Page

3.1.11. Internal Webpage

After wireless connection is OK. Open Wen browser and access “<http://10.10.100.254/iweb.html>”; It is for upgrading application and external webpage..

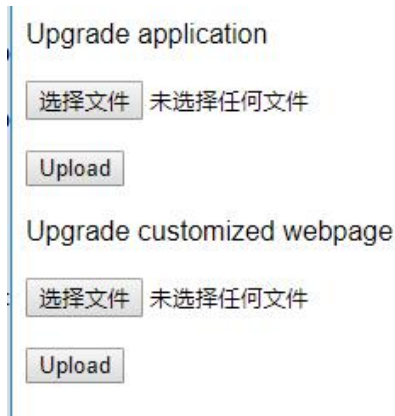


Figure 24. Internal Webpage

3.2. Usage Introduction

3.2.1. Software Debug Tools

High-Flying use two common software tools debugging and applying HF-LPB135 module. (User can also select other tools used to debug serial port).

- Serial Debugging Software: ComTools  **ComTools.exe**
- Ethernet Debugging Software: TCPUDPDbg  **TCPUDPDbg.exe**

3.2.2. Network Connection

User can select two methods to connect HF-LPB135 module base on dedicated application.

- **Use HF-LPB135 STA interface.** HF-LPB135 and debug PC2 connect to a wireless AP, another PC1 (or user device) connect to HF-LPB135 module with serial port:



Figure 25. STA Interface Debug Connection

- **Use HF-LPB135 AP interface.** Debug PC2 connect to HF-LPB135 through wireless connection, another PC1 (or user device) connect to HF-LPB135 module with serial port.



Figure 26. AP Interface Debug Connection

3.2.3. Default Parameter Setting

- Default SSID: HF-LPB135;

- Default security mode: open,none;
- User UART parameter setting:115200,8,1,None;
- Default network parameter setting:TCP,Server,8899,10.10.100.254;
- Module IP address: dhcp,0.0.0.0,0.0.0.0,0.0.0.0;

3.2.4. Module Debug

PC1 open “CommTools” program, setting the same serial port parameters with HF-LPB135 module and open serial port connection.

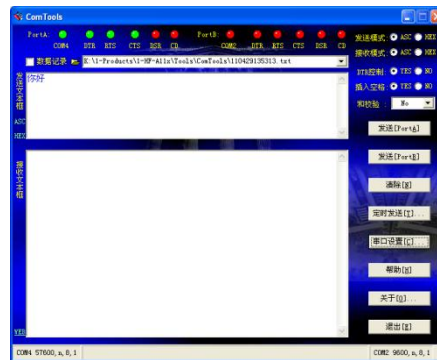


Figure 27. “CommTools” Serial Debug Tools

PC2 open “TCPUDPDbg” program, and create a new connection. If HF-LPB135 configured as Server mode, “TCPUDPDbg” Tools shall create “Client” mode connection. Or otherwise, create a “Server” mode connection.

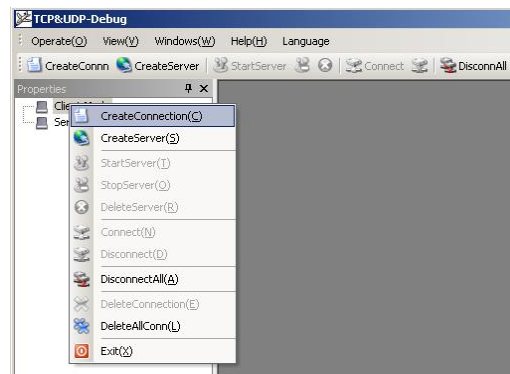


Figure 28. “TCPUDPDbg” Tools Create Connection

Then setting the TCP/UDP connection parameters. Default as following:

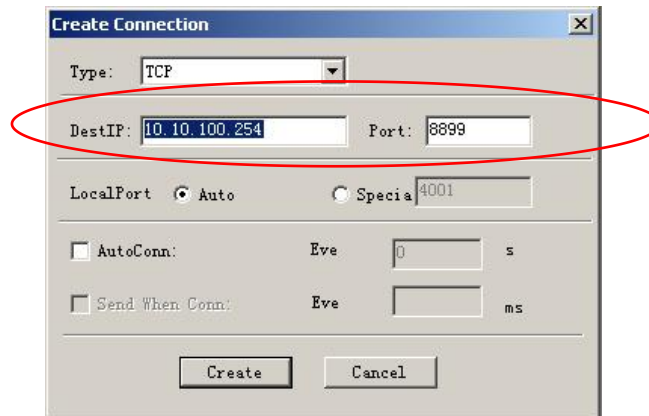


Figure 29. “TCPUDPDbg” Tools Setting

Then, click “Create” button to create a connection.

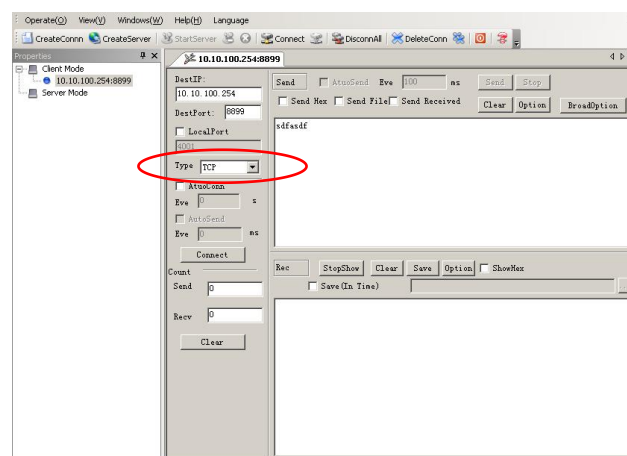


Figure 30. “TCPUDPDbg” Tools Connection

Now, in transparent transmission mode, data can be transferred from “CommTools” program to “TCPUDPDbg” program, or in reverse. You can see data in receiver side will keep same as in sender side.

3.3. Typical Application Examples

3.3.1. Wireless Control Application



Figure 31. Wireless Control Application

For this wireless control application, HF-LPB135 works as AP mode. Module’s serial port connects to user device. So, control agent (Smart phone for this example) can manage and control the user device through the wireless connection with HF-LPB135 module.

3.3.2. Remote Management Application

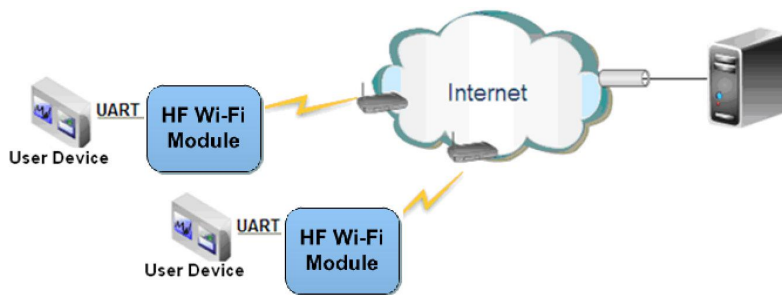


Figure 32. Remote Management Application

For this remote management application, HF-LPB135 works as STA mode and connects to Internet through wireless AP. Module configured as TCP Client and communicates with remote TCP server at Internet. Module's serial port connects to user device.

So, user device's data or sampling information can send to remote TCP server for storage or processing. Also remote TCP server can send command to control and manage the user device through the wireless network.

3.3.3. Transparent Serial Port Application

For this transparent serial port application, two HF-LPB135 modules connect as below figures to build up a transparent serial port connection. One HF-LPB135 works as AP mode, another HF-LPB135 works as STA mode. Make the STA device connects to AP.



Figure 33. Transparent Serial Port Application

4. AT+INSTRUCTION INTRODUCTION

4.1. Configuration Mode

When HF-LPB135 power up, it will default works as transparent transmission mode, then user can switch to configuration mode by serial port command. HF-LPB135 UART default parameters setting as below figure,

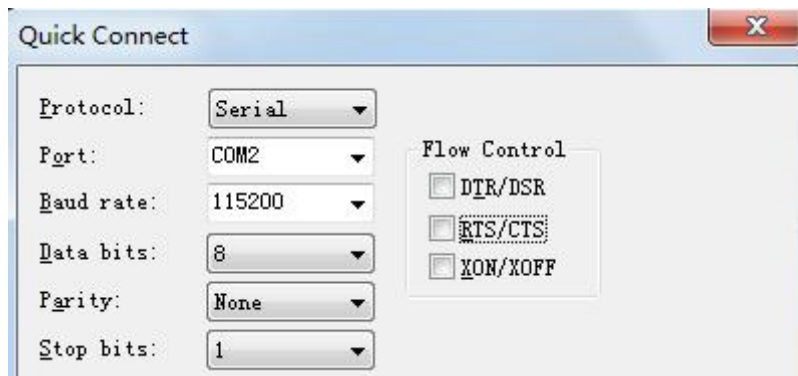


Figure 34. HF-LPB135 Default UART Port Parameters

In configuration mode, user can setting the module through AT+instruction set, which cover all web page setting function.

4.1.1. Switch to Configuration Mode

Two steps to finish switching from transparent transmission mode to configuration mode.

- **UART input “+++”, after module receive “+++”, and feedback “a” as confirmation.**
- **UART input “a”, after module receive “a” and feedback “+ok” to go into AT+instruction set configuration mode.**


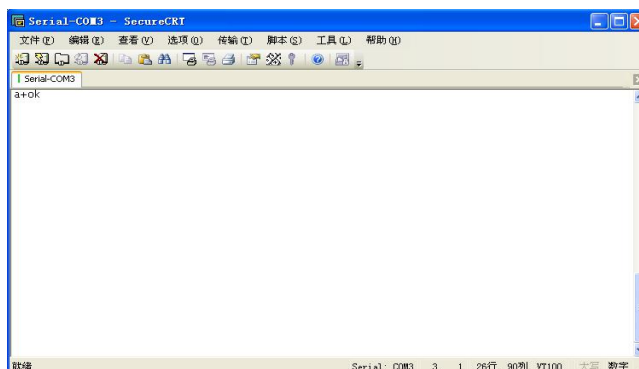


Figure 35. Switch to Configuration Mode

Notes:

1. When user input “+++” (No “Enter” key required), the UART port will display feedback information “a”, and not display input information “+++” as above UART display.


2. Any other input or wrong step to UART port will cause the module still works as original mode (transparent transmission).
3. “+++” and “a” should be input in a certain period of time to make the module switch to configuration mode. Like the following sequence.

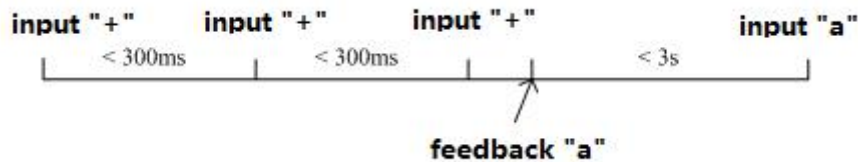

4.1.2. Send AT Command in Transparent Transmission Mode

After set AT+CMDDPW command value, the module support response AT command for special data format as “prefix”+“AT comman”+“\r”, it is very useful for query some status in transparent transmission mode. It saves the steps of changing to AT command mode.

The following example, we first set AT+CMDDPW=HF, then send the following data in transparent mode, and get the AT command response. This data won’t be sent to socket.

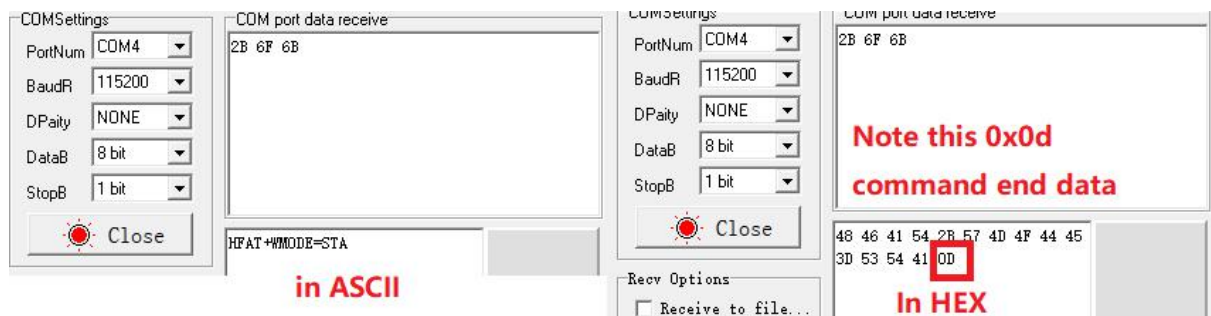

4.2. AT+Instruction Set Overview

User can input AT+Instruction through hyper terminal or other serial debug terminal, also can program the AT+Instruction to script. User can also input “AT+H” to list all AT+Instruction and description to start.

AT+H
+ok

AT+: NONE command, reply "+ok".
 AT+ASWD: Set/Query WiFi configuration code.
 AT+E: Echo ON/Off, to turn on/off command line echo function.
 AT+ENTM: Goto Through Mode.
 AT+NETP: Set/Get the Net Protocol Parameters.
 AT+UART: Set/Get the UART Parameters.
 AT+UARTF: Enable/disable UART AutoFrame function.
 AT+UARTFT: Set/Get time of UART AutoFrame.
 AT+UARTFL: Set/Get frame length of UART AutoFrame.
 AT+UARTTE: Set/Query UART free-frame triggerf time between two byte.
 AT+PING: General PING command.
 AT+WAP: Set/Get the AP parameters.
 AT+WKEY: Set/Get the Security Parameters of WIFI AP Mode.
 AT+WMODE: Set/Get the WIFI Operation Mode (AP or STA).
 AT+WSKEY: Set/Get the Security Parameters of WIFI STA Mode.
 AT+WSSSID: Set/Get the AP's SSID of WIFI STA Mode.
 AT+WSLK: Get Link Status of the Module (only for STA Mode).
 AT+WSLQ: Get Link Quality of the Module (only for STA Mode).
 AT+WSCAN: Get The AP site Survey (only for STA Mode).
 AT+WEBU: Set/Get the Login Parameters of WEB page.
 AT+TCPLK: Get The state of TCP link.
 AT+TCPTO: Set/Get TCP time out.
 AT+TCPDIS: Connect/Dis-connect the TCP Client link
 AT+RCV: Recv data from UART
 AT+SEND: Send data to UART
 AT+WANN: Set/Get The WAN setting if in STA mode.
 AT+LANN: Set/Get The LAN setting if in ADHOC mode.
 AT+RELD: Reload the default setting and reboot.
 AT+RLDEN: Put on/off the GPIO12.
 AT+Z: Reset the Module.
 AT+MID: Get The Module ID.
 AT+VER: Get application version.
 AT+H: Help.

Figure 36. "AT+H" Instruction for Help

4.2.1. Instruction Syntax Format

AT+Instruction protocol is based on the instruction of ASCII command style, the description of syntax format as follow.

- **Format Description**
 - < >: Means the parts must be included
 - []: Means the optional part

➤ **Command Message**

AT+<CMD>[op][para-1,para-2,para-3,para-4...]<CR>

- AT+: Prefix of command message;
- CMD: Command string;
- [op]: Symbol of command operator,
 - ◆ "=" : The command requires parameters input;
 - ◆ "NULL": Query the current command parameters setting;
- [para-n]: Parameters input for setting if required;
- <CR>:"Enter" Key, it's 0x0a or 0x0d in ASCII;

Notes: When input AT+Instruction, "AT+<CMD>" character will display capital letter automatic and other_parts will not change as you input.

➤ **Response Message**

+<RSP>[op] [para-1,para-2,para-3,para-4...]<CR><LF><CR><LF>

- +: Prefix of response message;
- RSP: Response string;
 - ◆ “ok” : Success
 - ◆ “ERR”: Failure
- [op] : =
- [para-n]: Parameters if query command or Error code when error happened;
- <CR>: ASCII 0x0d;
- <LF>: ASCII 0x0a;

➤ Error Code

Table8. Error Code Description

Error Code	Description
-1	Invalid Command Format
-2	Invalid Command
-3	Invalid Operation Symbol
-4	Invalid Parameter
-5	Operation Not Permitted

4.2.2. AT+Instruction Set

Table9. AT+Instruction Set List

Instruction	Description
<null>	NULL
Managment Instruction Set	
E	Open/Close show back function
WMODE	Set/Query Wi-Fi work mode (AP/STA)
ENTM	Set module into transparent transition mode
TMODE	Set/Query module data transfer mode
MID	Query module ID information
VER	Query module software version information
BVER	Query Bootloader version
HWVER	Query Wi-Fi chip hardware version
RELD	Restore to factory default setting
FCLR	Erase factory setting
Z	Re-start module
H	Help
Configure Parameters Instruction Set	
CFGTF	Copy User Parameters to Factory Default Parameters
UART Instruction Set	
UART	Set/Query serial port parameters
Network Instruction Set	
PING	Network "Ping" Instruction
NETP	Set/Query SOCKA network protocol parameters
MAXSK	Set/Query SOCKA TCP Client connection number
TCPLK	Query if SOCKA TCP link already build-up

Instruction	Description
TCPTO	Set/Query SOCKA TCP timeout
TCPDIS	Open/Close SOCKA TCP link
SEND	Send Data at Command Mode
RECV	Receive Data at Command Mode
SOCKB	Set/Query SOCKB parameters
TCPDISB	Open/Close SOCKB TCP link
TCPTOB	Set/Query SOCKB TCP timeout
TCPLKB	Query if SOCKB TCP link already build-up
SNDB	Send data to SOCKB in Command Mode
RCVB	Receive data from SOCKB in Command Mode
Wi-Fi STA Instruction Set	
WSKEY	Set/Query STA security parameters
WSSID	Set/Query associated AP SSID parameters
WANN	Set/Query STA's network parameters
WSMAC	Set/Query module MAC address
WSLK	Query STA Wi-Fi link status
WSLQ	Query STA Wi-Fi signal strength
WSCAN	Scan AP
Wi-Fi AP Instruction Set	
LANN	Set/Query AP's network parameters
WAP	Set/Query AP Wi-Fi parameters
WAKEY	Set/Query AP security parameters
WADHCP	Set/Query AP DHCP Server status
WALK	Query MAC address of STA device connecting to module AP
WALKIND	Enable/Disable indication of connection status.
WAPMXSTA	Set/Query max STA devices supported for AP.
Remote Upgrade Instruction Set	
OTA	Upgrade Firmware
UPURL	Set/Query remote upgrade URL address
Webpage Set	
PLANG	Set/Query webpage language
WEBU	Set/Query webpage login account
Others Instruction Set	
WRMID	Set module ID
ASWD	Set/Query WiFi configuration code
WPS	Start WPS function
SMTLK	Start SmartLink function
NDBG	Set UART debug information
SMEM	Query RAM malloc status
WIFI	Enable/Disable Wi-Fi

4.2.2.1. AT+E

- Function: Open/Close show back function;

- Format:

◆ Set Operation

AT+E=<status><CR>

+ok<CR><LF><CR><LF>

- Parameters:

- ◆ status: Echo status
 - ◇ on: Open echo
 - ◇ off: Close echo

When HF-LPB135 module firstly switch from transparent transmission to configuration mode, show back status is open, input “AT+E” to close show back function, input“AT+E” again to open show back function, use AT+E=on/off command to save the echo status..

4.2.2.2. AT+CMDPW

- Function: Set/Query AT command prefix character for sending AT command in throughput mode. Setting is valid after reset;

- Format:

- ◆ Query Operation

AT+CMDPW<CR>

+ok=<data><CR><LF><CR><LF>

- ◆ Set Operation

AT+CMDPW=<data><CR>

+ok<CR><LF><CR><LF>

- Parameters:

- ◆ mode: Default is blank for disable t 是 his function. The maximum is 20 chacter length, once has been set, the AT command in transparent transmission mode function is enabled (AT+H and AT+WSCAN are not supported). Do restore to factory operation to disable and clear the setting

When set this value to “HF”, then can get response of “+ok=STA”(Hex: 2B 6F 6B 3D 53 54 41) for send “HFAT+WMODE\r”(Hex: 48 46 41 54 2B 57 4D 4F 44 45 0D, AT command should end with 0D or 0A).

4.2.2.3. AT+WMODE

- Function: Set/Query Wi-Fi work mode. Setting is valid after reset;

- Format:

- ◆ Query Operation

AT+WMODE<CR>

+ok=<mode><CR><LF><CR><LF>

- ◆ Set Operation

AT+WMODE=<mode><CR>

+ok<CR><LF><CR><LF>

- Parameters:

- ◆ mode:Wi-Fi work mode
 - ◇ AP
 - ◇ STA
 - ◇ APSTA

4.2.2.4. AT+ENTM

- Function: Set module into transparent transmission mode;
- Format:

AT+ENTM<CR>

+ok<CR><LF><CR><LF>

When operate this command, module switch from configuration mode to transparent transmission mode.

4.2.2.5. AT+TMODE

- Function: Set/Query module data transfer mode. Setting is valid after reset.

- Format:

- ◆ Query Operation

AT+TMODE<CR>

+ok=<tmode><CR><LF><CR><LF>

- ◆ Set Operation

AT+TMODE=<tmode><CR>

+ok<CR><LF><CR><LF>

- Parameters:

- ◆ tmode: data transfer mode, include:
 - ✧ throughput: throughput mode
 - ✧ cmd: command mode

4.2.2.6. AT+MID

- Function: Query module ID information;

- Format:

- ◆ Query Operation

AT+MID<CR>

+ok=<module_id><CR><LF><CR><LF>

- Parameters:

- ◆ module_id: Module ID information;
 - ✧ HF-LPB135;

Notes: User can set this parameter through AT+WRMID.

4.2.2.7. AT+VER

- Function: Query module software version information;

- Format:

- ◆ Query Operation

AT+VER<CR>

+ok=<ver><CR><LF><CR><LF>

- Parameters:

- ◆ ver: Module software version information;

4.2.2.8. AT+BVER

- Function: Query Bootloader software version information;

- Format:

- ◆ Query Operation

AT+BVER<CR>

+ok=<ver><CR><LF><CR><LF>

- Parameters:
 - ◆ ver: Ex:1M_U06 V3.0.06, 0xC09F8

4.2.2.9. AT+HWVER

- Function: Query Bootloader software version information;
 - Format:
 - ◆ Query Operation
- AT+HWVER<CR>**
- +ok=<ver><CR><LF><CR><LF>**
- Parameters:
 - ◆ ver: Ex: U06,5

4.2.2.10. AT+RELD

- Function: module restore to factory default setting;
- Format:
 - ◆ Set Operation

AT+RELD<CR>

+ok=rebooting...<CR><LF><CR><LF>

When operate this command, module will restore to factory default setting and reboot.

4.2.2.11. AT+FCLR

- Function: Erase factory setting;
- Format:
 - ◆ Query Operation

AT+FCLR<CR>

+ok=<status><CR><LF><CR><LF>

4.2.2.12. AT+Z

- Function: Re-start module;
- Format:

AT+Z<CR>

4.2.2.13. AT+H

- Function: Help;
- Format:
 - ◆ Query Operation

AT+H<CR>

+ok=<command help><CR><LF><CR><LF>

- Parameters:
 - ◆ command help: command introduction;

4.2.2.14. AT+CFGTF

- Function: Copy User Parameters to Factory Default Parameters;
- Format:

◆ Query Operation

AT+CFGTF<CR>

+ok=<status><CR><LF><CR><LF>

■ Parameters:

- ◆ status: feedback operation status;

4.2.2.15. AT+UART

- Function: Set/Query serial port parameters. Setting is valid after reset.

■ Format:

◆ Query Operation

AT+UART[=uart_num]<CR>

+ok=<baudrate,data_bits,stop_bit,parity,flowctrl><CR><LF><CR><LF>

◆ Set Operation

AT+UART=<baudrate,data_bits,stop_bit,parity,flowctrl>[,uart_num]<CR>

+ok<CR><LF><CR><LF>

■ Parameters:

- ◆ uart_num: UART Channel, the default is UART0.
 - 0: UART0 Channel
- ◆ baudrate:
 - ✧ 1200,1800,2400,4800,9600,19200,38400,57600,115200,230400,380400,460800,921600
- ◆ data_bits:
 - ✧ 8
- ◆ stop_bits:
 - ✧ 1
- ◆ parity:
 - ✧ NONE
 - ✧ EVEN
 - ✧ ODD
- ◆ Flowctrl: (CTSRTS)
 - ✧ NFC: No hardware flow control
 - ✧ **FC: hardware flow control(4.10.11 or above version support)**

4.2.2.16. AT+PING

- Function: Network “PING” Instruction.

■ Format:

◆ Set Operation

AT+PING=<ip[,count,size]><CR>

+ok=<sta><CR><LF><CR><LF>

■ Parameters:

- ◆ ip: ip address or domain name.
- ◆ count: Ping command execute count times. Default is 1.
- ◆ size: Ping packet size. Default is 32 bytes.
- ◆ sta: feedback result

- ✧ Success
- ✧ Timeout
- ✧ Unknown host

4.2.2.17. AT+NETP

- Function: Set/Query SOCKA network protocol parameters. Setting is valid immediately.

- Format:

- ◆ Query Operation

AT+NETP<CR>

+ok=<protocol,CS,port,IP><CR><LF><CR><LF>

- ◆ Set Operation

AT+NETP=<protocol,CS,port,IP><CR>

+ok<CR><LF><CR><LF>

- Parameters:

- ◆ protocol:

- ✧ TCP
- ✧ UDP

- ◆ CS: Network mode:

- ✧ SERVER
- ✧ CLIENT

- ◆ Port: protocol port ID: Decimal digit and less than 65535

- ◆ IP: Server's IP address when module set as client

If set as UDP SERVER, the module will save the IP address and port of the latest UDP packet received. The data will be sent to the saved IP address and port. If the module hasn't saved any IP address and port when power up. The data will be sent to the IP address and port which is set by this command.

If set as UDP,CLIENT, the data will always be sent to the IP address and port set by this command.

4.2.2.18. AT+MAXSK

- Function:Set/ Query SOCKA TCP Client connection number.

- Format:

- ◆ Query Operation

AT+MAXSK<CR>

+ok=<num><CR><LF><CR><LF>

- ◆ Set Operation

AT+MAXSK=<num><CR>

+ok<CR><LF><CR><LF>

- Parameters:

- ◆ num: TCP Client connection number. Range: 1~5. 5 is the default value it means when the module work in TCP server , it accepts max 5 TCP client connect to it.

4.2.2.19. AT+TCPLK

- Function: Query if SOCKA TCP link already build-up;

- Format:
 - AT+TCPLK<CR>**
 - +ok=<sta><CR><LF><CR><LF>**
- Parameters:
 - ◆ sta.: if module already setup TCP link;
 - ✧ on: TCP link setup;
 - ✧ off: TCP link not setup;

4.2.2.20. AT+TCPTO

- Function: Set/Query SOCKA TCP timeout; Setting is valid after reset.
- Format:
 - ◆ Query Operation
 - AT+TCPTO<CR>**
 - +ok=<time><CR><LF><CR><LF>**
 - ◆ Set Operation
 - AT+TCPTO=<time><CR>**
 - +ok<CR><LF><CR><LF>**
- Parameters:
 - ◆ time: TCP timeout time.
 - ✧ ≤ 600, (600s);
 - ✧ ≥ 0, (0 means no timeout);
 - ✧ Default, 300s;

Module begin to count time when TCP channel don't receive any data, clecherar time counter when TCP channel receive any data. If the time counter reaches the TCPTO, the tcp channel will be break. If the module work in TCP Client, it will connect the TCP server instantly and when the module work in TCP Server, the TCP client device should make the connection itself.

4.2.2.21. AT+TCPDIS

- Function: Open/Close SOCKA TCP link;
- Format:
 - ◆ Query Opera
 - AT+TCPDIS<CR>**
 - +ok=<sta><CR><LF><CR><LF>**
 - ◆ Set Operation
 - AT+TCPDIS =<on/off><CR>**
 - +ok<CR><LF><CR><LF>**

■ Parameters:
When query, sta.: Feedback if TCP Client can be link,

- ✧ On, TCP link close
- ✧ off, TCP link on

When setting, "off" means close TCP link. After finish this command, module disconnect TCP link and not connect again. "On" means open TCP link. After finish this command, module re-connect TCP server right away.

4.2.2.22. AT+SEND

- Function: Send Data to SOCKA at Command Mode.
- Format:

AT+SEND=<data_lenth><CR>

+ok<CR><LF><CR><LF>

- Parameters:
 - ◆ data_lenth: Lenth of send data. Range: 0~1000 Byte

The UART port will wait 3 seconds for input after this command is sent OK. The data received from UART port is sent to SOCKA. If the interval of two bytes is more than 10ms, the data will be sent instantly.

4.2.2.23. AT+RECV

- Function: Receive Data from SOCKA at Command Mode.
- Format:

AT+RECV=<data_lenth><CR>

+ok=< data_lenth, data_content><CR><LF><CR><LF>

- Parameters:
 - ◆ data_lenth: Lenth of receive data. Range: 0~1000 Byte
 - ◆ data_content: contents of receive data.

If not receive any data in 3 second, then feedback +ok=0.

4.2.2.24. AT+SOCKB

- Function: Set/Query SOCKB parameters. Setting is valid immediately.
- Format:
 - ◆ Query Operation

AT+SOCKB<CR>

+ok=<protocol,port,IP><CR><LF><CR><LF>

- ◆ Set Operation

AT+SOCKB=<protocol,port,IP><CR>

+ok<CR><LF><CR><LF>

- Parameters:
 - ◆ Protocol: Protocol type:
 - ✧ TCP: Only for TCP Client
 - ✧ UDP: UDP Client
 - ✧ UDPS: UDP Server
 - ◆ Port: Protocol Port in decimal, less than 65535
 - ◆ IP: Destination IP address, domain name is support

If set as UDP SERVER, the module will save the IP address and port of the latest UDP packet received. The data will be sent to the saved IP address and port. If the module hasn't saved any IP address and port when power up. The data will be sent to the IP address and port which is set by this command.

If set as UDP,CLIENT, the data will always be sent to the IP address and port set by this command.

4.2.2.25. AT+TCPDISB

- Function: Open/Close SOCKB connection
- Format:
 - ◆ Query Operation

AT+TCPDISB<CR>**+ok=<sta><CR><LF><CR><LF>**

- ◆ Set Operation

AT+TCPDISB =<on/off><CR>**+ok<CR><LF><CR><LF>**

- Parameters:

When setting, “off” means close TCP link. After finish this command, module disconnect TCP link and not connect again. “On” means open TCP link. After finish this command, module re-connect TCP server right away.

4.2.2.26. AT+TCPTOB

- Function: Set/Query Operation SOCKB TCP timeout. Setting is valid after reset.
- Format:
 - ◆ Query Operation

AT+TCPTOB<CR>**+ok=<time><CR><LF><CR><LF>**

- ◆ Set Operation

AT+TCPTOB=<time ><CR>**+ok<CR><LF><CR><LF>**

- Parameters

- ◆ Time: TCP timeout

- ✧ ≤ 600:600s
- ✧ ≥ 0:0 means no timeout
- ✧ Default:300s

If the SOCKB TCP don't receive any data from TCP server for TCP tmeout setting, the module will break and reconnect the TCP server. If it receive data from server, the timeout counter will be clear.

4.2.2.27. AT+TCPLKB

- Function:Query SOCKB connection status
- Format:

AT+TCPLKB<CR>**+ok=<sta><CR><LF><CR><LF>**

- Parameters:

- ◆ sta.: SOCKB connection status
 - ✧ on: TCP connected
 - ✧ off: TCP disconnected

4.2.2.28. AT+SNDB

- Function: Send datas to SOCKB at Command Mode

- Format:

AT+SNDB=<data_lenth ><CR>
+ok<CR><LF><CR><LF>

- Parameters:

- ◆ data_lenth: Lenth of send data. Range: 0~1000 Byte

The UART port will wait 3 seconds for input after this command is sent OK. The data received from UART port is sent to SOCKB. If the interval of two bytes is more than 10ms, the data will be sent instantly.

4.2.2.29. AT+RCVB

- Function: Receive datas from SOCKB at Command Mode

- Format:

AT+RCVB=<data_lenth><CR>
+ok=< data_lenth, data_content><CR><LF><CR><LF>

- Parameters:

- ◆ data_lenth: Lenth of receive data. Range: 0~1000 Byte
- ◆ data_content: contents of receive data.

If not receive any data in 3 second, then feedback +ok=0.

4.2.2.30. AT+UDPLCPT

- Function: Set/Query UDP local port of Socket A and Socket B..

- Format:

- ◆ Query Operation

AT+UDPLCPT<CR>
+ok=<porta,portb><CR><LF><CR><LF>

- ◆ Set Operation

AT+UDPLCPT=<porta,portb><CR>
+ok<CR><LF><CR><LF>

- Parameters

- ◆ porta: UDP local port of Socket A, 0: do not fix local UDP port.
- ◆ portb: UDP local port of Socket B, 0: do not fix local UDP port.

4.2.2.31. AT+WSSSID

- Function: Set/Query Wi-Fi associated AP SSID parameters. Setting is valid after reset.

- Format:

- ◆ Query Operation

AT+WSSSID<CR>
+ok=<ap's ssid><CR><LF><CR><LF>

- ◆ Set Operation

AT+WSSSID=<ap's ssid ><CR>
+ok<CR><LF><CR><LF>

- Parameters:

- ◆ ap's ssid: AP's SSID (Within 32 character);

4.2.2.32. AT+WSKEY

- Function: Set/Query STA security parameters. Setting is valid after reset.
- Format:

- ◆ Query Operation

AT+WSKEY<CR>

+ok=<auth, encry, key><CR><LF><CR><LF>

- ◆ Set Operation

AT+WSKEY=< auth, encry, key><CR>

+ok<CR><LF><CR><LF>

- Parameters:
 - ◆ auth: Authentication mode
 - ✧ OPEN
 - ✧ SHARED
 - ✧ WPAPSK
 - ✧ WPA2PSK
 - ◆ encry: Encryption algorithm
 - ✧ NONE: When “auth=OPEN”, effective
 - ✧ WEP-H: When “auth=OPEN” or “SHARED”, effective, in HEX format
 - ✧ WEP-A: When “auth=OPEN” or “SHARED”, effective, in ASCII format
 - ✧ TKIP: When “auth= WPAPSK” or “WPA2PSK”, effective
 - ✧ AES: When “auth= WPAPSK” “WPA2PSK”, effective
 - ◆ key: password. When encry is WEP-H, password is in HEX format, password length is 10 or 26. When encry is WEP-A, password is in ASCII format, password length is 5 or 13. When encry is TKIP or AES, password is in ASCII code, password length shall be 8~63.

4.2.2.33. AT+WANN

- Function: Set/Query STA network setting. Setting is valid after reset.
- Format:
 - ◆ Query Operation

AT+WANN<CR>

+ok=<mode, address, mask, gateway><CR><LF><CR><LF>

- ◆ Set Operation

AT+WANN=< mode, address, mask, gateway ><CR>

+ok<CR><LF><CR><LF>

- Parameters:
 - ◆ mode: STA's IP network setting
 - ✧ static: Static IP
 - ✧ DHCP: Dynamic IP
 - ◆ address: STA IP address;
 - ◆ mask: STA subnet mask;
 - ◆ gateway: STA gateway address;

4.2.2.34. AT+WSMAC

- Function: Set/Query Module STA MAC address parameters. Setting is valid after reset.
- Format:
 - ◆ Query Operation
AT+WSMAC<CR>
+ok=<mac_address><CR><LF><CR><LF>
 - ◆ Set Operation
AT+WSMAC=<code,mac_address,key><CR>
+ok<CR><LF><CR><LF>
- Parameters:
 - ◆ code: security code
 - ✧ 8888 (default value)
 - ◆ Mac_address: module MAC address, such as ACCF23FF1234
 - ◆ key: encryption key. It is not allowed to change, contact us if need to change MAC.

4.2.2.35. AT+WSLK

- Function: Query STA WiFi link status
- Format:
 - ◆ Query Operation
AT+WSLK<CR>
+ok=<ret><CR><LF><CR><LF>
- Parameters:
 - ◆ ret
 - ✧ "Disconnected", if no WiFi connection;
 - ✧ "AP' SSID (AP's MAC") , if WiFi connection available;

4.2.2.36. AT+WSLKO

- Function: Query/Set STA WiFi connection order function.
- Format:
 - ◆ Query Operation
AT+WSLKO<CR>
+ok=<order><CR><LF><CR><LF>
 - ◆ Set Operation
AT+WSLKO=<order><CR>
+ok<CR><LF><CR><LF>
- Parameters:
 - ◆ Order: order scheme. When there is much same name and password SSID, If enable this order function, module will connect to the strongest signal strength. If disabled, it will connect to the first response AP(may connect to the weakest AP). Enable this function will cost 2 more seconds more first connect time.
 - ✧ Enable: Enable order function.
 - ✧ Disable: Disable order function.

4.2.2.37. AT+WSLQ

- Function: Query STA WiFi signal strength;
 - Format:
 - ◆ Query Operation
- AT+WSLQ<CR>**
- +ok=<ret><CR><LF><CR><LF>**
- Parameters:
 - ◆ ret
 - ✧ "Disconnected", if no WiFi connection;
 - ✧ "AP's WiFi signal strength", if WiFi connection available;

4.2.2.38. AT+WSCAN

- Function: Scan AP, max show 50 item;
 - Format:
 - ◆ Query Operation
- AT+WSCAN<CR>**
- +ok=<ap_site><CR><LF><CR><LF>**
- Parameters:
 - ◆ ap_site: AP searched.

```
AT+WSCAN
+ok=
Ch,SSID,BSSID,Security,Indicator
4,TP-LINK_686E,24:69:68:7F:68:6E,WPAPSKWPA2PSK/AES,100
7,Upd,7C:B5:40:4F:B2:CD,WPAPSKWPA2PSK/AES,100
5,UPGRADE-AP_aaaa,C8:3A:35:54:B3:70,WPA2PSK/AES,100
7,LBLINK,3C:33:00:A8:35:2C,WPAPSKWPA2PSK/AES,100
```

4.2.2.39. AT+LANN

- Function: Set/Query AP's network parameters. Setting is valid after reset.
 - Format:
 - ◆ Query Operation
- AT+LANN<CR>**
- +ok=<ipaddress,mask><CR><LF><CR><LF>**
- ◆ Set Operation
- AT+LANN=< ipaddress,mask><CR>**
- +ok<CR><LF><CR><LF>**
- Parameters:
 - ◆ ipaddress: AP's IP address;
 - ◆ mask: AP's net mask;

4.2.2.40. AT+WAP

- Function: Set/Query AP Wi-Fi parameters. Support maximum 5 STA connection. Setting is valid after reset.
 - Format:
 - ◆ Query Operation
- AT+WAP<CR>**
- +ok=<wifi_mode,ssid,channel><CR><LF><CR><LF>**

◆ Set Operation

AT+WAP=<wifi_mode,ssid,channel><CR>

+ok<CR><LF><CR><LF>

■ Parameters:

- ◆ wifi_mode: Wi-Fi mode, include:
 - ✧ 11B
 - ✧ 11BG
 - ✧ 11BGN (Default Value)
- ◆ ssid:SSID at AP mode, the maximum length is 32.
- ◆ channel: Wi-Fi channel selection:
 - ✧ AUTO;(Default CH1)
 - ✧ CH1~CH11;

4.2.2.41. AT+WAKEY

- Function: Set/Query AP Wi-Fi security parameters. Setting is valid after reset.

■ Format:

◆ Query Operation

AT+WAKEY<CR>

+ok=<auth,encry,key><CR><LF><CR><LF>

◆ Set Operation

AT+WAKEY=< auth,encry,key><CR>

+ok<CR><LF><CR><LF>

■ Parameters:

- ◆ auth: include
 - ✧ OPEN
 - ✧ WPA2PSK
- ◆ Encry: include
 - ✧ NONE: When “auth=OPEN” available;
 - ✧ AES: When “auth=WPA2PSK” available;
- ◆ key: security code, ASCII code, 8~63 bytes.

4.2.2.42. AT+WADHCP

- Function: Set/Query AP DHCP server status; Setting is valid after reset.

■ Format:

◆ Query Operation

AT+WADHCP<CR>

+ok=<status>,<ip1>,<ip2><CR><LF><CR><LF>

◆ Set Operation

AT+WADHCP=<status>[,ip1,ip2]<CR>

+ok<CR><LF><CR><LF>

■ Parameters:

- ◆ status:AP's DHCP server function status:
 - ✧ on:DHCP Server Open;
 - ✧ off:DHCP Server Close;

- ◆ ip1: DHCP allocate IP start value.
- ◆ ip2: DHCP allocate IP end value.

4.2.2.43. AT+WALK

- Function: Query MAC address of STA device connecting to module AP
- Format:

- ◆ Query Operation

AT+WALK<CR>

+ok=<status> <CR><LF><CR><LF>

- Parameters:

- ◆ status: MAC address of STA device connecting to module AP.
 - ✧ No Connection: No STA device connecting to module AP;

4.2.2.44. AT+WALKIND

- Function: Enable/Disable indication of module AP connection status.
- Format:
- ◆ Query Operation

AT+WALKIND<CR>

+ok=<status> <CR><LF><CR><LF>

- ◆ Set Operation

AT+WALKIND=<status><CR>

+ok<CR><LF><CR><LF>

- Parameters:

- ◆ status: indication of module AP connection status.
 - ✧ on: Enable nLink indication function. When STA device connecting to module AP, nLink output Low, otherwise output High.
 - ✧ off: Disable nLink indication function. **(default mode)**.

4.2.2.45. AT+WAPMXSTA

- Function: Set/Query max STA number supported for AP.
- Format:
- ◆ Query Operation

AT+WAPMXSTA<CR>

+ok=<num> <CR><LF><CR><LF>

- ◆ Set Operation

AT+WAPMXSTA=<num><CR>

+ok<CR><LF><CR><LF>

- Parameters:

- ◆ num: max STA number supported for AP.
 - ✧ 1~5: Support max 1~5 STA devices connects to module AP. **5 is default value for max 5 STA device supported.**

4.2.2.46. AT+MDCH

- Function: Set Wi-Fi Auto Switch Function. Setting is valid after reset.
- Format:

◆ Query Operation

AT+MDCH<CR>

+ok=<mode><CR><LF><CR><LF>

◆ Set Operation

AT+MDCH=<mode> <CR><LF><CR><LF>

+ok<CR><LF><CR><LF>

■ Parameters:

◆ mode: Wi-Fi Auto Switch Mode

- ✧ off: Disable Wi-Fi auto switch. When response with auto, it is the same as off.
- ✧ on: Enable Wi-Fi auto switch. When the module(STA mode) fail to connect to router, it will switch to AP mode itself in one minute.

4.2.2.47. AT+OTA

■ Function: Set OTA Upgrade

■ Format:

◆ Set Operation

AT+OTA<CR>

+ok=<CR><LF><CR><LF>

Note: See Appendix C Module Upgrade for detail

4.2.2.48. AT+UPURL

■ Function: Set/ Query remote upgrade URL address;

■ Format:

◆ Query Operation

AT+UPURL<CR>

+ok=<url><CR><LF><CR><LF>

◆ Set Operation

AT+UPURL=<url,filename><CR>

+ok=<result><CR><LF><CR><LF>

■ Parameters:

- ◆ url: the upgrade file url address; the last charter shall be "/" (within 20 characters).
- ◆ filename: the upgrade file name, it's optional and not saved parameter. If provide this file name here, the module will start upgrade right away;
- ◆ result: the download operation result.
 - Download failed: Url is error or file is not valid.
 - Update success: Need reboot to run new the download new firmware.

4.2.2.49. AT+DISPS

■ Function: Set/Query power save parameters;

■ Format:

◆ Query Operation

AT+DISPS<CR>

+ok=<ret><CR><LF><CR><LF>

◆ Set Operation

AT+DISPS=<mode[,time]><CR><LF><CR><LF>

- Parameters:
 - ◆ ret:
 - ✧ No: Enable power save
 - ✧ Yes: Disable power save
 - ✧ Auto: Auto power save mode(default), enter power saving mode after receive or send data in time seconds.
 - ◆ mode:
 - ✧ No: Enable power save
 - ✧ Yes: Disable power save
 - ✧ Auto: Auto power save mode(default), enter power saving mode after receive or send data in time seconds.
 - ◆ time: Only valid in auto mode, >=2 integer value, default is 3 seconds. when value is 0, the default waiting time is still 3 seconds.

4.2.2.50. AT+PLANG

- Function: Set/Query webpage language option;
- Format:
 - ◆ Query Operation

AT+PLANG<CR>

+ok=<language><CR><LF><CR><LF>

- ◆ Set Operation

AT+PLANG=<language> <CR>

+ok<CR><LF><CR><LF>

- Parameters:
 - ◆ language: webpage's language
 - ✧ CN: Chinese Version (Default);
 - ✧ EN: English Version;

4.2.2.51. AT+WEBU

- Function: Set/ Query webpage user name and password; Setting is valid after reset.
- Format:
 - ◆ Query Operation

AT+WEBU<CR>

+ok=<username,password> <CR><LF><CR><LF>

- ◆ Set Operation

AT+WEBU=<username,password><CR>

+ok<CR><LF><CR><LF>

- Parameters:
 - ◆ username: User Name, within 15 characters, not support empty.
 - ◆ password: password, within 15 characters, support empty.

4.2.2.52. AT+WRMID

- Function: Set module ID;

- Format:
 - ◆ Set Operation
- AT+WRMID=<wrmid> <CR><LF><CR><LF>**
- Parameters:
 - ◆ wrmid: set module's ID (within 20 characters).

4.2.2.53. AT+ASWD

- Function: Set/Query WiFi Configuration Password;
- Format:
 - ◆ Query Operation
- AT+ASWD<CR>**
- +ok=<aswd> <CR><LF><CR><LF>**
- ◆ Set Operation
- AT+ASWD=<aswd><CR><LF><CR><LF>**
- Parameters:
 - ◆ aswd: WiFi Configuration Password (within 20 characters).

4.2.2.54. AT+SMTLK

- Function: Start SmartLink function
- Format:
 - ◆ Query Operation

AT+SMTLK<CR>

SmartLink is a One-Key config function. Config the module connecting to router easily. After start SmartLink function , the module work in SmartLink status and nLink LED is fast flashing waiting for APP to push information. See the Appendix for more details.

4.2.2.55. AT+WPS

- Function: Start WPS function
- Format:
 - ◆ Query Operation

AT+WPS<CR>

+ok<CR><LF><CR><LF>

Note: The router WPS function must be open first then enable module WPS Scan function. The module will always in WPS mode if WPS is started. Only with success or reset can the module recover normal working mode.

4.2.2.56. AT+NDBGL

- Function: Enable/Disable UART debug information
- Format:
 - ◆ Query Operation

AT+NDBGL<CR>

+ok=<debug_level,uart_num> <CR><LF><CR><LF>

- ◆ Set Operation

AT+NDBGL=<debug_level,uart_num><CR>

+ok<CR><LF><CR><LF>

- Parameters:
 - ◆ debug_level: UART debug level value
 - ✧ 0: Disable debug information output
 - ✧ 1~XX: Output internal UART debug information which is same or higher then this set value
 - ◆ uart_num: UART debug information output channel
 - ✧ 0: UART0
 - ✧ 1: UART1, 921600bps, with more system information output.

4.2.2.57. AT+TYPE

- Function: Set/Query WeChat device type.
- Format:
 - ◆ Query Operation
AT+TYPE<CR>
+ok=<type> <CR><LF><CR><LF>
 - ◆ Set Operation
AT+TYPE=<type><CR><LF><CR><LF>
- Parameters:
 - ◆ type: WeChat device type. Ex: gh_ba0c25259dca.

4.2.2.58. AT+SMEM

- Function: Query the RAM malloc status.
- Format:
 - ◆ Query Operation
AT+SMEM<CR>
+ok=<status><CR><LF><CR><LF>
- Parameters:
 - ◆ status: The RAM malloc status. Ex for 1MB:
 current_size:47016, max_size:41696, total_size:89984, alloc_cnt:42968, alloc_fail_cnt:0

4.2.2.59. AT+WIFI

- Function: Enable/Disable Wi-Fi Command
- Format:
 - ◆ Query Operation
AT+WIFI<CR>
+ok=<status> <CR><LF><CR><LF>
 - ◆ Set Operation
AT+WIFI =<status><CR>
+ok<CR><LF><CR><LF>
- Parameters:
 - ◆ status: Wi-Fi status.
 - ✧ UP(boot default status): Enable Wi-Fi Chip

- ✧ DOWN: Disable Wi-Fi Chip, it will take several seconds(max 10) to disable the Wi-Fi, if response with +ERR=-5 means disable failed, usually it is already in disable status.

Note: Some Wi-Fi status change command(AT+WMODE and so on)need to reboot before valid. But may use this command only to reboot the Wi-Fi Chip to make the corresponding command valid.This is AT+WIFI=DOWN,AT+WSSSID to set router information and then AT+WIFI=UP.

4.2.2.60. AT+SMARTAPCONFIG

- Function: Config SmartAPLink function
- Format:
 - ◆ Query Operation


```
AT+SMARTAPCONFIG<CR>
```

```
+ok=<status,[ap_prefix,ap_key]><CR>< LF><CR>< LF>
```
 - ◆ Set Operation


```
AT+SMARTAPCONFIG=<status,[ap_prefix,ap_key]><CR>
```

```
+ok<CR>< LF><CR>< LF>
```
- Parameters:
 - ◆ status: Enable/Disable SmartAPLink function
 - ✧ on: Enable SmartAPLink function, after enabled, use AT+SMARTAPSTART or nReload to start config.
 - ✧ off: Disable SmartAPLink. Default.
 - ◆ ap_prefix: module AP SSID prefix, default is hiflying_softap_
 - ◆ ap_key: module AP password, blank for no password, password length 8~63.
 - ◆ ..

4.2.2.61. AT+SMARTAPSTART

- Function: Start SmartAPLink function, only valid if SmartAPLink is enabled.
- Format:
 - ◆ Query Operation


```
AT+SMARTAPSTART<CR>
```

```
+ok<CR>< LF><CR>< LF>
```

Note: Reset to quit this config mode.

4.2.2.62. AT+BTWAIT

- Function: Enable/Disable UART bootloader function
- Format:
 - ◆ Query Operation


```
AT+BTWAIT<CR>
```

```
+ok=<status><CR>< LF><CR>< LF>
```
 - ◆ Set Operation


```
AT+BTWAIT=<status><CR>
```

```
+ok<CR>< LF><CR>< LF>
```
- Parameters:

- ◆ status: Enable/Disable UART bootloader, 3.0.8 version bootloader support this config
 - ✧ Enable: Enable UART bootloader, default value.
 - ✧ Disable: Disable..

Note: For LED application using nReload PIN for PWM output, if disable this UART bootloader, it will save about 1 second for bootup make the LED on more quickly.

5. PACKAGE INFORMATION

5.1. Recommended Reflow Profile

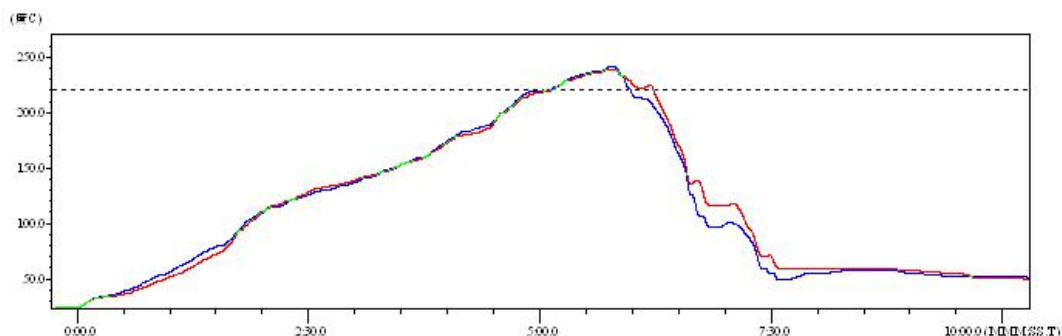


Figure 37. Reflow Soldering Profile

Table10. Reflow Soldering Parameter

NO.	Item	Temperature (Degree)	Time(Sec)
1	Reflow Time	Time of above 220	35~55 sec
2	Peak-Temp	260 max	

- Note:** 1. Recommend to supply N2 for reflow oven.
2. N2 atmosphere during reflow (O2<300ppm)

5.2. Device Handling Instruction (Module IC SMT Preparation)

- Shelf life in sealed bag: 12 months, at <30℃ and <60% relative humidity (RH)
- After bag is opened, devices that will be re-baked required after last baked with window time 168 hours.
- Recommend to oven bake with N2 supplied
- Recommend end to reflow oven with N2 supplied
- Baked required with 24 hours at 125+/-5℃ before rework process.
- Recommend to store at ≤ 10% RH with vacuum packing
- If SMT process needs twice reflow:

(1) Top side SMT and reflow (2) Bottom side SMT and reflow

Case 1: Wifi module mounted on top side. Need to bake when bottom side process over 168 hours window time, no need to bake within 168 hours

Case 2: Wifi module mounted on bottom side, follow normal bake rule before process

Note: Window time means from last bake end to next reflow start that has 168 hours space.

5.3. HF-LPB130/HF-LPT230 Shipping Information



Figure 38. HF-LPB130/HF-LPT230 Shipping Information

Note:

1 tape = 900pcs

1 box = 5 tapes = 5 * 900 pcs = 4500pcs

5.4. HF-LPT130A Shipping Information

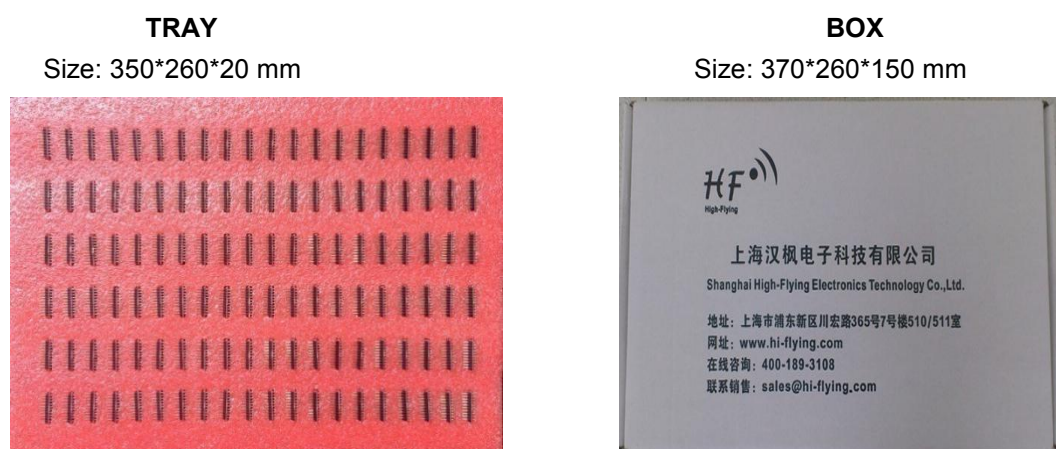



Figure 39. Shipping Information

Note:

1 tray = 20*6pcs = 120 pcs

LPT130A: 1 box = 4 trays = 4 * 120 pcs = 480pcs

APPENDIX A: HW REFERENCE DESIGN

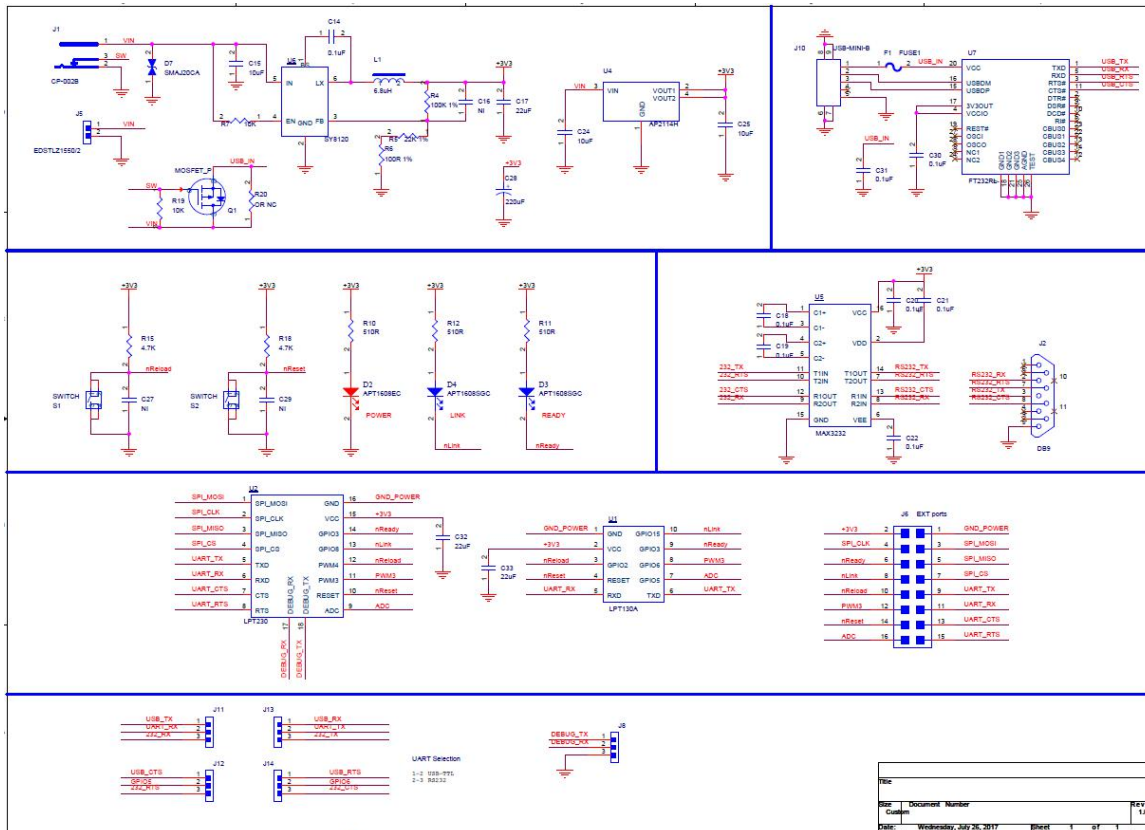

Detailed HF-LPB135 Evaluation Board design source files, pls access High-Flying web download page or contact with High-Flying technical support people to acquire.

APPENDIX B: HTTP PROTOCOL TRANSFER

HF-LPB135 module support http data transfer in throughput mode. If any detailed HTTP protocol, contact us and we may support customization.

B.1. Sending HTTP Raw Data in Throughput Mode

Step 1、Configure HTTP server information

```
AT+NETP=tcp,client,80,testnewjava.gotoip4.com
+ok
```

Step 2、Configure module connecting to router AP and reboot.


```
AT+WSSSID=Tenda_GYH
+ok

AT+WSKEY=wpa2psk,aes,12345678
+ok

AT+WMODE=sta
+ok

AT+Z
```

Step 3、Sending HTTP raw data via UART, end the data with<CR><LF><CR><LF>

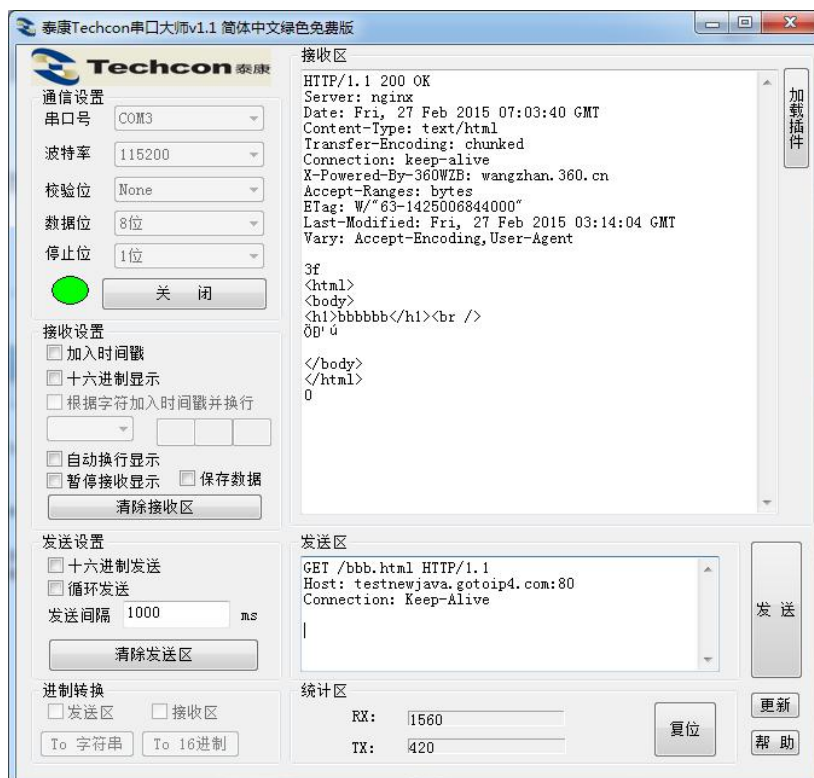

APPENDIX C:REFERENCES

C.1. High-Flying Mass Production Tool

Download Address: <http://www.hi-flying.com/download-center-1/applications-1/download-item-production-tool>

C.2. SmartLink APP V8 Sniffer Config Tool

Download Address : <http://www.hi-flying.com/download-center-1/applications-1/download-item-smartlink-v8>

C.3. SDK

Download Address: <http://www.hi-flying.com/download-center-1/software-development-kit-1/download-item-HF-LPB135-hsf-sdk-1mb-2mb>

APPENDIX D: CONTACT INFORMATION

Address: [Room 1002,Building 1,No.3000,Longdong Avenue,Pudong New Area,Shanghai,China,201203](#)

Web: www.hi-flying.com

Service Online: [400-189-3108/18616078755](tel:400-189-3108/18616078755)

Sales Contact: sales@hi-flying.com

For more information about High-Flying modules, applications, and solutions, please visit our web site
<http://www.hi-flying.com/en/>

<END OF DOCUMENT>

© Copyright High-Flying, May, 2011

The information disclosed herein is proprietary to High-Flying and is not to be used by or disclosed to unauthorized persons without the written consent of High-Flying. The recipient of this document shall respect the security status of the information.

The master of this document is stored on an electronic database and is "write-protected" and may be altered only by authorized persons at High-Flying. Viewing of the master document electronically on electronic database ensures access to the current issue. Any other copies must be regarded as uncontrolled copies.