 


REMOTE CONTROL TRACKLESS TRAIN
TREN CON CONTROL REMOTO SIN VÍAS
TRAIN TÉLÉCOMMANDÉ SANS VOIE

INSTRUCTIONS • ANVISNINGER • TALİMATLAR • GEBRUIKSAANWIJZING • INSTRUCTIONS • 说明
INSTRUCCIONES • INSTRUZIONI • ANVISNINGER • INSTRUÇÕES • ANLEITUNG • INSTRUKSJONER • OHEET

3+

4 MODES

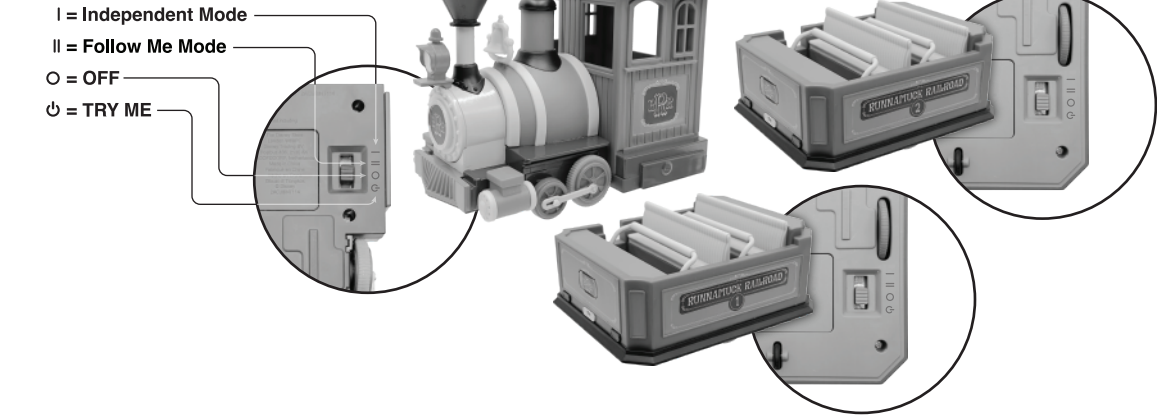

 
I = MODE 1 “INDEPENDENT MODE”
(LOCOMOTIVE)

- Slide switch on the backside of the remote control to the ON position (as shown in image). Pairing indicator (red LED) on the remote control will start blinking.
- Slide switch on the bottom of the Locomotive to “I” location.
- When paired successfully, the pairing indicator (red LED) on remote control will stop blinking and remain solid ON. Locomotive is now ready for play.
 - NOTE: If LED continues to blink and does not change to solid ON, pairing has not been completed. Start over and repeat steps 1-2.
- If no activity is detected after 5 minutes, the Locomotive will turn OFF. Slide switch to OFF (“O”) then back to Independent Mode (“I”) to turn Locomotive back ON.




I = MODE 1 “INDEPENDENT MODE”
(RAILWAY CAR)

- Slide switch on the bottom of the Railway Car to “I” location.
- Watch it roam, spin and shake freely! Railway Car(s) will sense the surroundings to help prevent hitting objects.
 - NOTE: Guest is not able to control the Railway Car(s) with remote control.
- If no activity is detected after 5 minutes, the Railway Car will turn OFF. Slide switch to OFF (“O”) then back to Independent Mode (“I”) to turn Railway Car back ON.

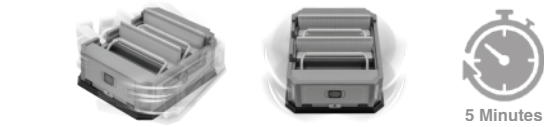

II = MODE 2 “FOLLOW ME MODE”

 
- Slide switch on the backside of the remote control to the ON position (as shown in image). Pairing indicator (red LED) on the remote control will start blinking.
- Next, slide the switch on the bottom of the Locomotive to “II” location.
- When paired successfully, the pairing indicator (red LED) on the remote control will stop blinking and remain solid ON.
 - NOTE: If LED continues to blink and does not change to solid ON, pairing has not been completed. Start over and repeat steps 1-2.
- Slide switch on the bottom of the Railway Car(s) to “II” location.
- Place Railway Car(s) directly behind the Locomotive to have them “connect”.
 - NOTE: For optimal connection, place Railway Car(s) 1.5” - 2.0” apart.

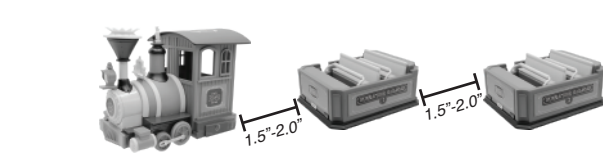

- Move the Locomotive using the directional joysticks on the remote control. The Railway Car(s) should follow behind!
 - NOTE: Locomotive cannot move backward when it is in "Follow Me Mode".
 - NOTE: If the Railway Car(s) lose connection in "Follow Me Mode", pick-up Railway Car and place behind Locomotive or other Railway Car(s) to reconnect.
- If no activity is detected after 5 minutes, the Locomotive and Railway Car(s) will turn OFF. Slide switches to OFF (“O”) then back to Independent Mode (“I”) again to turn them back ON.




 REMOTE CONTROL

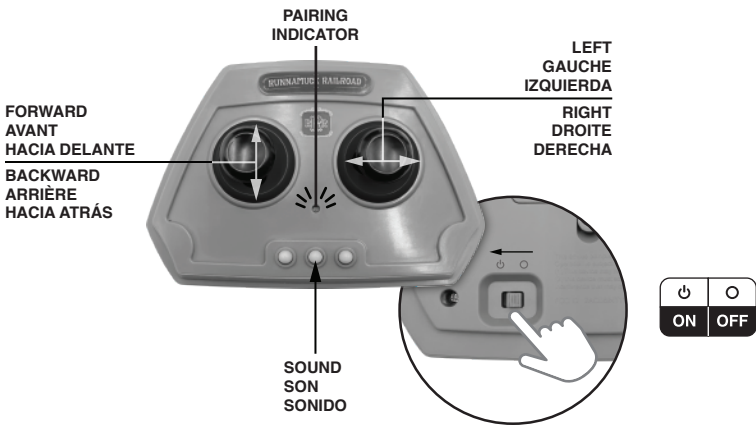

U = “TRY ME MODE”

 - Press button on front of the side of the Locomotive to activate sounds.
- Press button on front of the Railway Car(s) to activate sounds.
- Sounds will cycle through randomly.

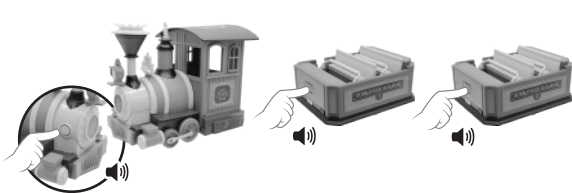

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRABLE OPERATION.

CAUTION: CHANGES OR MODIFICATIONS NOT EXPRESSLY APPROVED BY THE PARTY RESPONSIBLE FOR COMPLIANCE COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT. NOTE: THIS EQUIPMENT HAS BEEN TESTED AND FOUND TO COMPLY WITH THE LIMITS FOR A CLASS B DIGITAL DEVICE, PURSUANT TO PART 15 OF THE FCC RULES. THESE LIMITS ARE DESIGNED TO PROVIDE REASONABLE PROTECTION AGAINST HARMFUL INTERFERENCE IN A RESIDENTIAL INSTALLATION. THIS EQUIPMENT GENERATES, USES AND CAN RADIATE RADIO FREQUENCY ENERGY AND, IF NOT INSTALLED AND USED IN ACCORDANCE WITH THE INSTRUCTIONS, MAY CAUSE HARMFUL INTERFERENCE TO RADIO COMMUNICATIONS. HOWEVER, THERE IS NO GUARANTEE THAT INTERFERENCE WILL NOT OCCUR IN A PARTICULAR INSTALLATION. IF THIS EQUIPMENT DOES CAUSE HARMFUL INTERFERENCE TO RADIO OR TELEVISION RECEPTION, WHICH CAN BE DETERMINED BY TURNING THE EQUIPMENT OFF AND ON, THE USER IS ENCOURAGED TO TRY TO CORRECT THE INTERFERENCE BY ONE OR MORE OF THE FOLLOWING MEASURES:

- REORIENT OR RELOCATE THE RECEIVING ANTENNA.
- INCREASE THE SEPARATION BETWEEN THE EQUIPMENT AND RECEIVER.
- CONNECT THE EQUIPMENT INTO AN OUTLET ON A CIRCUIT DIFFERENT FROM THAT TO WHICH THE RECEIVER IS CONNECTED.
- CONSULT THE DEALER OR AN EXPERIENCED RADIO/TV TECHNICIAN FOR HELP.

HEREBY, INTERNATIONAL TOY, INC. DECLARES THAT THE RADIO EQUIPMENT TYPE RADIO-CONTROLLED TOY IS IN COMPLIANCE WITH DIRECTIVE 2014/53/EU. THE FULL TEXT OF THE EU DECLARATION OF CONFORMITY IS AVAILABLE AT THE FOLLOWING INTERNET ADDRESS:

IL FABBRICANTE, INTERNATIONAL TOY, INC., DICHIARA CHE IL TIPO DI APPARECCHIATURA RADIO GIOCATTOLO RADIOCOMANDATO È CONFORME ALLA DIRETTIVA 2014/53/UE. IL TESTO COMPLETO DELLA DICHIARAZIONE DI CONFORMITÀ UE È DISPONIBILE AL SEGUENTE INDIRIZZO INTERNET:

POR LA PRESENTE, INTERNATIONAL TOY, INC. DECLARA QUE EL TIPO DE EQUIPO RADIOELÉCTRICO JUGUETE TELEDIRIGIDO ES CONFORME CON LA DIRECTIVA 2014/53/UE. EL TEXTO COMPLETO DE LA DECLARACIÓN UE DE CONFORMIDAD ESTÁ DISPONIBLE EN LA DIRECCIÓN INTERNET SIGUIENTE:

LE SOUSSIGNÉ, INTERNATIONAL TOY, INC. DÉCLARE QUE L'ÉQUIPEMENT RADIOÉLECTRIQUE DU TYPE JOUET CONTRÔLÉ PAR RADIO EST CONFORME À LA DIRECTIVE 2014/53/UE. LE TEXTE COMPLET DE LA DÉCLARATION UE DE CONFORMITÉ EST DISPONIBLE À L'ADRESSE INTERNET SUIVANTE:

O(A) ABAIXO ASSINADO(A) INTERNATIONAL TOY, INC. DECLARA QUE O PRESENTE TIPO DE EQUIPAMENTO DE RÁDIO BRINQUEDO RADIOCONTROLADO ESTÁ EM CONFORMIDADE COM A DIRETIVA 2014/53/UE. O TEXTO INTEGRAL DA DECLARAÇÃO DE CONFORMIDADE ESTÁ DISPONÍVEL NO SEQUINTE ENDEREÇO DE INTERNET:

HIERBIJ VERKLAA IK, INTERNATIONAL TOY, INC., DAT HET TYPE RADIOAPPARATUUR RADIOGRAFISCH BESTUURD SPEELGOED CONFORM IS MET RICHTLIJN 2014/53/UE. DE VOLLEDIGE TEKST VAN DE EU-CONFORMITEITSVERKLARING KAN WORDEN GERAADPLEEGD OP HET VOLGENDE INTERNETADRES:

HIERMIT ERKLÄRTINTERNATIONAL TOY, INC., DASS DER FUNKANLAGENTYP FERNGESTEUERTES SPIELZEUG DER RICHTLINIE 2014/53/UE ENTSPRICHT. DER VOLLSTÄNDIGE TEXT DER EU-KONFORMITÄTSERKLÄRUNG IST UNTER DER FOLGENDEN INTERNETADRESSE VERFÜGBAR:

HERMED ERKLÆRER INTERNATIONAL TOY, INC., AT RADIOUDSTYRTSTYPEN RADIOSTYRT LEGETØJ ER I OVERENSSTEMMELSE MED DIREKTIV 2014/53/UE. EU-OVERENSSTEMMELSESERKLÆRINGENS FULDE TEKST KAN FINDES PÅ FØLGENDE INTERNETADRESSE: 22.5.2014 L 153/104 DEN EUROPÆISKE UNIONS TIDENDE DA

INTERNATIONAL TOY, INC. UZAKTAN KUMANDALI OYUNCAK TELSİZ KİPMANI TIPININ DIREKTİF 2014/53/AB İLE UYUMLU OLDUĞUNU BEYAN EDER. AB UYUM BEYANININ TAM METNİ ŞU İNTERNET ADRESİNDE BULUNABİLİR:

HÄRMED FÖRSÄKRAR INTERNATIONAL TOY, INC. ATT DENNA TYP AV RADIOUTRUSTNING RADIOSTYRD LEKSAK ÖVERENSSTÄMMER MED DIREKTIV 2014/53/UE. DEN FULLSTÄNDIGA TEXTEN TILL EU-FÖRSÄKRAN OM ÖVERENSSTÄMMELSE FINNS PÅ FÖLJANDE WEBBADRESS:

HERVED ERKLÆRER INTERNATIONAL TOY, INC. AT TYPEN RADIOUDSTYR RADIOSTYRT LEKETØY ER I SAMSVAR MED DIREKTIV 2014/53/UE. HELE TEKSTEN TIL EU-SAMSVARERKLÆRINGEN ER TILGJENGELIG PÅ FØLGENDE INTERNETT-ADRESSE:

INTERNATIONAL TOY, INC. VAKUUTTA, ETTÄ RADIOLAITETYYPPI RADIO-OHJATTAVA LEIKKIKALU ON DIREKTIIVIN 2014/53/UE MUKAINEN. EU-VAATIMUSTENMUKAISUUSVAKUUTUKSEN TÄYSIMITTAINEN TEKSTI ON SAATAVILLA SEURAAVASSA INTERNETOSITTEESSA:

INTERNATIONAL TOY, INC. 在此聲明，無線電設備類型 無線電遙控玩具 符合歐盟指令 2014/53/UE，請在以下網際網路地址查閱歐盟符合性聲明全文：

INTERNATIONAL TOY, INC. は、本無線機器の型式ラジコンおもちゃが指令2014/53/EUに適合していることをここに宣言します。EU適合宣言書の全文は、以下のインターネットアドレスから入手できます。

INTERNATIONAL TOY, INC. بموجب هذا أن نوع أجهزة الراديو لعبة يتم التحكم فيها عن بُعد يمثل للتوجيه 03/14/2014. ويمكن الاطلاع على النص الكامل لبيان المطابقة للاتحاد الأوروبي على عنوان الإنترنت التالي:

DENGAN INI, INTERNATIONAL TOY, INC. MENYATAKAN BAHWA JENIS PERANGKAT RADIO MAINAN KONTROL RADIO SUDAH SESUAI DENGAN PEDOMAN 2014/53/UE. TEKS LENGKAP PERNYATAAN KEPATUHAN UE TERSEDIA DI ALAMAT INTERNET BERIKUT:

在此，INTERNATIONAL TOY, INC. ขอประกาศว่าประเภทอุปกรณ์วิทยุ ของเล่นวิทยุบังคับ เป็นไปตามคำสั่ง 2014/53/EU สามารถอ่านข้อความประกาศความสอดคล้องของสหภาพยุโรปฉบับเพิ่มเติมได้ที่ที่อยู่อินเทอร์เน็ตต่อไปนี้:

<https://support.disney.com/hc/en-gb/articles/360034640231-Declarations-of-conformity>

DO NOT IMMERSE PORTION WITH BATTERY COMPARTMENT IN LIQUID.
NON IMMERGERE IN LIQUIDI LA PARTE CONTENENTE IL VANO BATTERIA.
NO SUMERGIR EN LÍQUIDO LA PARTE DEL COMPARTIMENTO PARA LAS PILAS.
NE PAS IMMERGER LA PARTIE CONTENANT LA BATTERIE DANS DU LIQUIDE.
NÃO SUBMERJA A PARTE COM O COMPARTIMENTO DE PILHAS EM LÍQUIDOS.
HET GEDEELTE MET HET BATTERIJVAK NIET IN VLOESTOFFEN ONDERDOMPELEN.
DEN TEIL MIT DEM BATTERIEFACH NICHT IN WASSER TAUCHEN.

NEDS:ENIKKE BATTERIDELEN I VÆSKE.
PIL BÖLMELI KESMI SIVYA BATTRIMAYIN.
SÄNK INTE NED DELEN MED BATTERIFACH I VÄSKA.
IKKE LEGG DELEN MED BATTERIBROMMET NED I VÆSKE.
ÄLÄ UPOTA PARISTOTILAN SISÄLTÄVÄÄ OSAA NESTEeseen.
請勿將電池槽的部分浸入液體中。
バッテリー収納部は液体に浸さないでください。
ห้ามแช่ส่วนที่เก็บแบตเตอรี่ลงในของเหลว
JANGAN BENAMKAN BAGIAN DENGAN KOMPARTEMEN BATERAI DALAM CAIRAN.
لا تغمر أجزاء حجرة البطارية في السوائل.
警告! 窒息危険 - 不適合三歳以下児童・小零件。

WARNING! CHOKING HAZARD – SMALL PARTS. NOT SUITABLE FOR CHILDREN UNDER 3 YEARS.
ATTENZIONE! RISCHIO DI SOFFOCAMENTO – PRESENZA DI PICCOLE PARTI. NON ADATTO PER BAMBINI DI ETÀ INFERIORE A 3 ANNI.
¡ADVERTENCIA! PELIGRO DE ATRAGANTAMIENTO – PIEZAS PEQUEÑAS. NO ES ADECUADO PARA NIÑOS MENORES DE 3 AÑOS.
ATTENTION! DANGER D'ÉTOUFFEMENT – PETITS ÉLÉMENTS. NE CONVIENT PAS AUX ENFANTS DE MOINS DE 3 ANS.
CUIDADO! PERIGO DE ENGASGAMENTO – PEÇAS PEQUENAS. NÃO ADEQUADO PARA CRIANÇAS COM MENOS DE 3 ANOS.
WAARSCHUWING! VERSTIKKINGSGEVAAR – KLEINE ONDERDELEN. NIET GESCHIKT VOOR KINDEREN ONDER DE 3 JAAR.
ACHTUNG! ERSTICKUNGSGEFAHR – KLEINTEILE. NICHT GEEIGNET FÜR KINDER UNTER 3 JAHREN.
ADVÆRSEL! RISIKO FOR KVELNING PGA. SMÅDELER. UEGNET TIL BØRN UNDER 3 ÅR.
UYARI! BOĞULMA TEHLİKESİ – KÜÇÜK PARÇALAR. 3 YAŞ ALTINDAKİ ÇOCUKLAR İÇİN UYGUN DEĞİLDİR.
VARNING! KVVÄNNINGSRISK – SMÅDELAR. LÄMPAR SIG INTE FÖR BARN UNDER 3 ÅR.
ADVÆRSEL! KVELNINGSFARE – SMÅ DELER. IKKE EGNET FOR BARN UNDER 3 ÅR.
VAROITUS! TUKEHTUMISVAARA – PIENIÄ OSIA. EI SOVELLU ALLE 3-VUOTIAILLE LAPSIILLE.

คำเตือน! ไม่เหมาะสำหรับเด็กอายุต่ำกว่า 3 ปี เพราะอาจเป็นอันตราย

警告! 窒息危険 - 不適合三歳以下児童・小零件。
警告! 小部品 - 誤飲による窒息。3 歳未満のお子様にはお使いいただけません。
تنبيه! خطر التعرض للاختناق — أجزاء صغيرة. لا تناسب الأطفال الأصغر من 3 سنوات

REQUIRES 11 AAA 1.5V BATTERIES, INCLUDED.
SONO NECESSARIE 11 AAA 1.5V BATTERIE, INCLUSE.
NECESITA 11 PILAS AAA 1.5V, INCLUIDAS.
FONCTIONNE AVEC 11 PILE(S) AAA 1.5V, INCLUSE(S)
REQUER 11 PILHAS AAA DE 1.5V, INCLUIDAS.
VEREIST 11 AAA 1.5V BATTERIEN, INBEGREPEN.
BENÖTIGT 11 AAA 1.5V BATTERIEN, SIND ENTHALTEN.
KRÆVER 11 AAA 1.5V BATTERIER, INKLUDERET.
11 AAA 1.5V PIL GEREKTIRIR, BIRLIKTE VERILMIŞTİR.
KRÄVER 11 AAA 1.5V BATTERIER, INKLUDERADE.
KREVER 11 AAA 1.5V BATTERIER, INKLUDERT.
VAATII 11 AAA 1.5V PARISTOA, SISÄLTYY PARKAUKSEEN.
需要 11 AAA 1.5V 電池,已包含。
電池 (數量):11, (種別):AAA, (電圧):1.5V, 使用, 同梱。
مواصفات البطاريات 11 AAA 1.5V، محتوية، مضمنة.
MEMBUTUHKAN 11 AAA 1.5V BATERAI, TERMASUK.
ต้องใชแบตเตอรี่ 11 AAA 1.5V ก่อน ซึ่งมามีให้



需要 11 AAA 1.5V 電池,已包含。