
MU006FT & MU006FR User Mannual

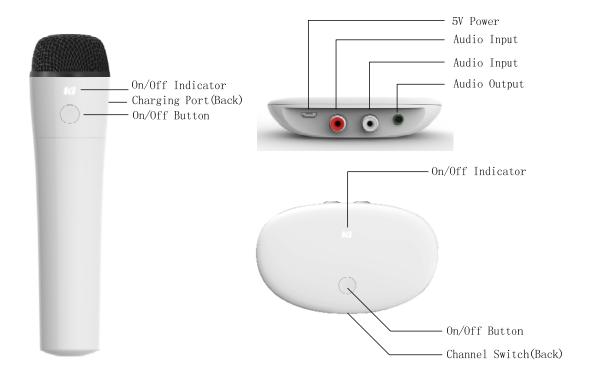


Portable Mode

- 1. Connect the "pebble" to the power supply
- 2. Connect the "pebble" to the portable speaker
- 3. Short press the On/Off Button on the "pebble", the device will be powered on and then the On/Off indicator will be highlighted
- 4. Short press the On/Off Button on the microphone, the device will be powered on and then the On/Off indicator will be highlighted
- 5. Pair your phone/tablet with the "pebble" through Bluetooth
- 6. Access karaoke songs via download YOUTUBE.COM/VEVO/KARAOKE App onto your Mobile Phone or Tablet
- 7. Access your instant FREE KARAOKE songs via VEVO/YOUTUBE.COM
- 8. Go KARAOKE!

Home Audio Mode

Maximize your KARAOKE experience even more by replacing the mobile device with a WIFI "Dongle" such as a Roku "Stick" that plugged into a Big-Screen HDTV and simply follow the steps above.

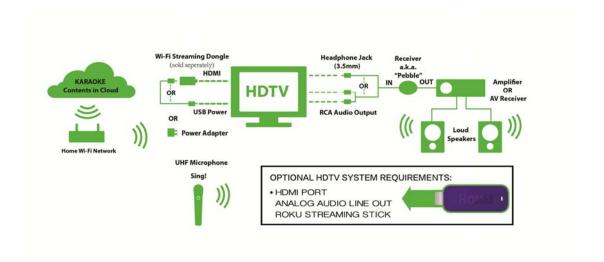

Power Off

- 1. To power off the "pebble" and the microphone, the On/Off Button should be **long** press for at least 3 seconds until the On/Off indicator is off.
- 2. The microphone will be powered off automatically if no voice is detected for more than 10 minutes.

Charge

- 1. The On/Off indicator will indicate orange color if the microphone is in low power status.
- 2. It needs about 4 hours to complete the charge.


Channel Switching

The channel should be changed synchronously on both the microphone and the "pebble" if the interference occurs.

Backside of the "pebble"



"channel switch

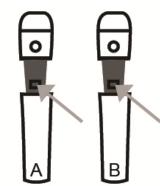

The case should be rotated off from the microphone

Channel Swtich Sample:

the "pebble":

CH-A1 CH-B1

Microphone A:

CH-A1

MicrophoneB:

CH-B1

CH-A2 CH-B2

CH-A2

CH-B2

the "Pebble":

CH-A1

Microphone A:

CH-A1 Microphoe B:

CH-B1

CH-A2

CH-B2

CH-A2

CH-B2

FCC NOTE:

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS OR CHANGE TO THIS EQUIPMENT. SUCH MODIFICATIONS OR CHANGE COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -- Reorient or relocate the receiving antenna.
- -- Increase the separation between the equipment and receiver.
- -- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -- Consult the dealer or an experienced radio/TV technician for help.