 
 


REMOTE CONTROL

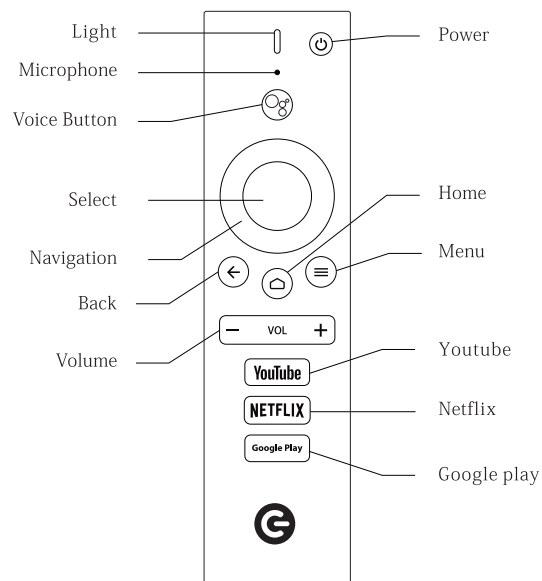

Voice Remote with Google Assistant

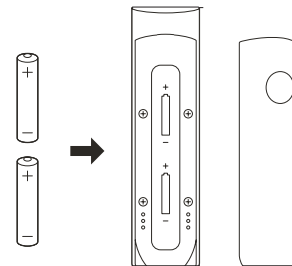 


1. Open the battery cover.
2. Insert two "AAA" size batteries (supplied with the product). Place the batteries with their terminals corresponding to the (+) and (-) indications in the battery compartment.
3. Close the battery cover


Caution

- Incorrect installation may cause battery leakage and corrosion, resulting in damage to the remote control.
 - Do not mix old and new batteries.
 - Do not mix different battery types (such as alkaline and magnesium batteries).
 - Do not use rechargeable batteries.
- Do not burn or break batteries.

Remote Pairing

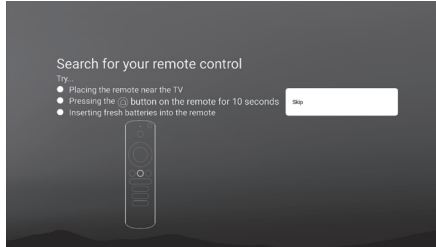

1

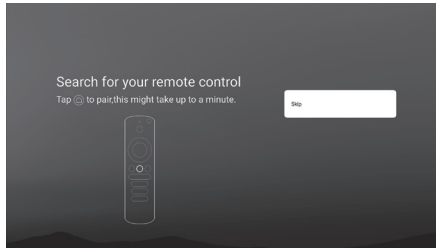 

2

- Once you've connected your devices to your television and plugged it in, insert the included AAA batteries into the back of the remote and press the [power button icon] "power" button on the remote. Your television will start and after press and hold the [power button icon] button on your remote for 10 seconds you will be prompted to pair your remote with your television. Pairing your remote to your television is necessary because the remote uses Bluetooth to send most button commands and voice commands to your television.
- If your television doesn't find your remote, remove and reinsert the batteries in your remote. If your remote doesn't pair with your TV press and hold the [power button icon] button on your remote for 10 seconds while your television is searching for your remote.
- Once you've paired your remote, follow the on-screen instructions to set up your TV.



FCC STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Changes or not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio technician for help.

FCC Radiation Exposure Statement

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

For customer support: 1-888-338-5666

Please send all correspondence to:

Element TV Company, LP. Customer Service

customerservice@elementelectronics.com

www.elementelectronics.com