




WIRELESS DOOR SENSOR INSTALLATION GUIDE

Read instructions carefully before beginning

Please make sure your garage door is closed before you start installation.

The GoGogate product and our wireless door sensors are meant to be used with garage door openers equipped with photo-eye safety sensors (manufactured after 1993). These sensors are normally found at the bottom of your garage door and avoid accidental closing of your garage door if an object or person is on the path of the door.


Step 1

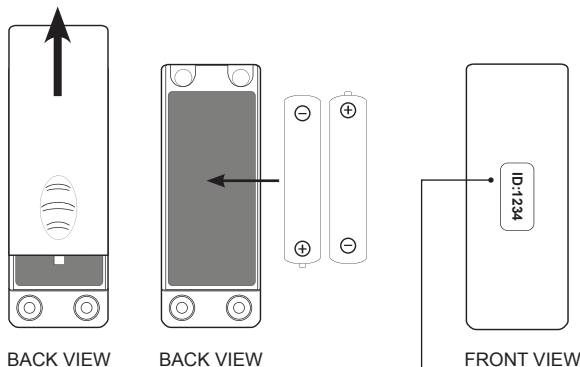

Open the sensor's batteries' compartment to include the provided AAA batteries (x2). Place the batteries as per picture indications. Finally, close the compartment.

Note: write down and store in a safe location the 4 digit code located on the front of your sensor.

Step 2

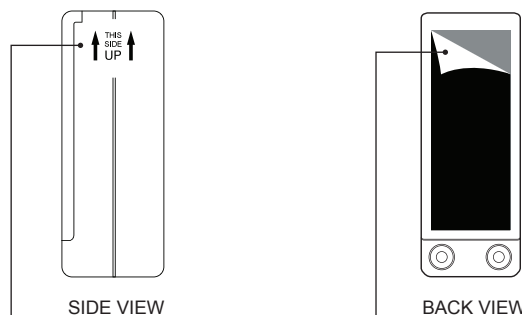


Make sure you place the sensor with the "TOP" label facing the garage door ceiling.

Place on the wall with the double-sided fastening strip.


Step 3

Attach your wireless sensors to your garage door as per drawing below.

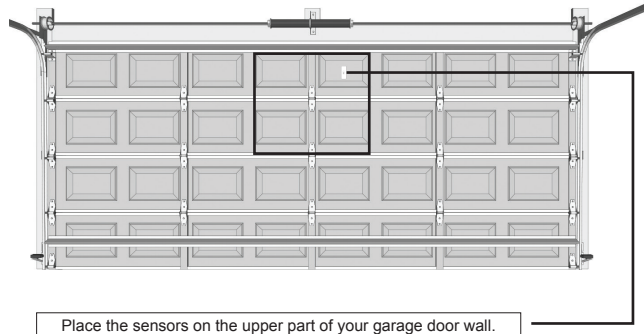

Place the sensors on the upper part of your garage door wall.

PLACE THE SENSOR IN THE UPPER PART OF YOUR GARAGE WITH RED LED LIGHT FACING DOWN. (LEFT OR RIGHT SIDE)

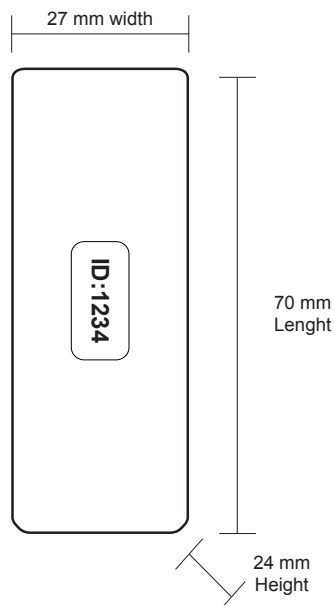

Main sensor's features:

- Remotely monitor if garage door is open or closed
- Check garage door temperature in °C/°F
- Receive real time alerts on your Smartphone
- Easy to install tilt sensor with double sided tapes
- Tilt switch broken when garage door opens.
- Monitor sensor's battery status for prompt replacement
- Keep track of all garage door events in a built-in calendar of events

SPECS	GGG2-TWS-001
Frequency	2.4 Ghz
Range	50 m or 150 ft (open space)
Operating Temperature	Between -10°C and 70°C
Battery type	AAA (x2)
Battery life span	1.5 years
Packaging	Clamshell
Certification	CE - FCC

Regulatory notices

REMSOL has not approved any changes or modifications to this device by the user. Any changes or modifications could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

This device complies with FCCC radiation exposure limits set forth for an uncontrolled environment and meets the FCC radio frequency (RF) Exposure Guidelines. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.



Still having issues. No problem.

Download our user manual in our website www.gogogate.com or contact us at: support@gogogate.com