 



42 x 20.5 x 15.5cm



BOAT STICKERS

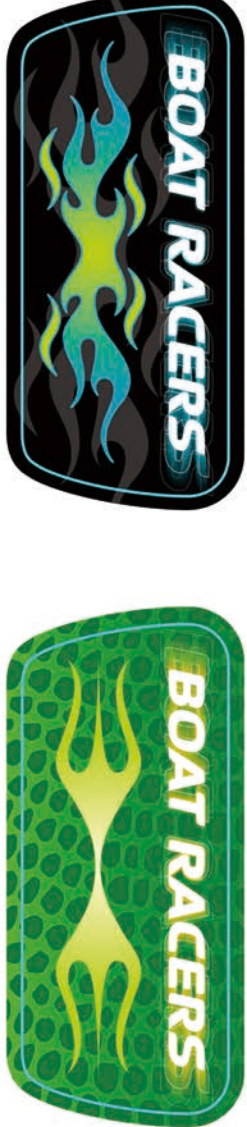

 RECHARGEABLE RC SPEEDBOAT

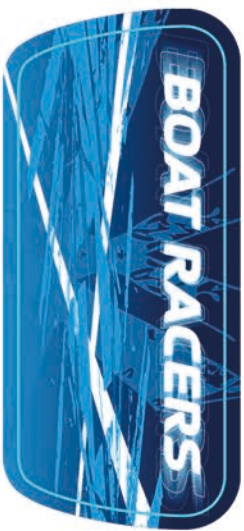

RECHARGEABLE RC SPEEDBOAT



RECHARGEABLE RC SPEEDBOAT

RECHARGEABLE RC SPEEDBOAT

BOAT RACERS

BATTERY OPERATED RC SPEEDBOAT



 
BATTERY INSTALLATION

KEEP THIS PACKAGE FOR REFERENCE AS IT CONTAINS IMPORTANT INFORMATION.


- Operation requires 6 "AA" 1.5V batteries (not included) for the Boat and 2 "AA" 1.5V batteries (not included) for the radio controller.
- Carefully remove items from packaging.
 - Locate the battery compartment by unscrewing the top portion of the boat from the base. Remove the top portion.
 - Unscrew the battery compartment door to install batteries.
 - Insert 6 "AA" 1.5V batteries according to the polarity diagram located on the battery tray (Fig. 1).
 - Replace the battery compartment door. Replace the top section of the boat.
 - Securely fasten by screwing down the top cover.
 - Slide open the battery compartment door of the controller (Fig. 2).
 - Insert 2 "AA" 1.5V batteries according to the polarity diagram.
 - Replace the battery compartment door.
 - Replacement propellers are provided. To replace please carefully remove the damaged propeller from the motor shaft. Replace with new propeller by pressing firmly into place.

SAFETY PRECAUTIONS

- Do not operate during thunderstorms or rain.
- Operate only in swimming pool or fresh water.
- Avoid salty ocean water, as this will corrode boat parts.
- Never submerge remote control in water.
- Never operate boat without proper adult supervision.
- Disconnect battery when not in use to avoid accidental operation.
- Do not use people or animals as obstacles inside pool.
- Do not run boat into pool walls, objects or other hard surfaces, as this will cause damage to the boat.
- Keep fingers, hair and loose clothing away from the spinning propellers while the boat is operational.
- Do not leave boat or remote control near sources of heat or under direct sunlight for extended periods.
- Do not leave boat or remote control outside overnight.
- Always remove boat from water when not in use.

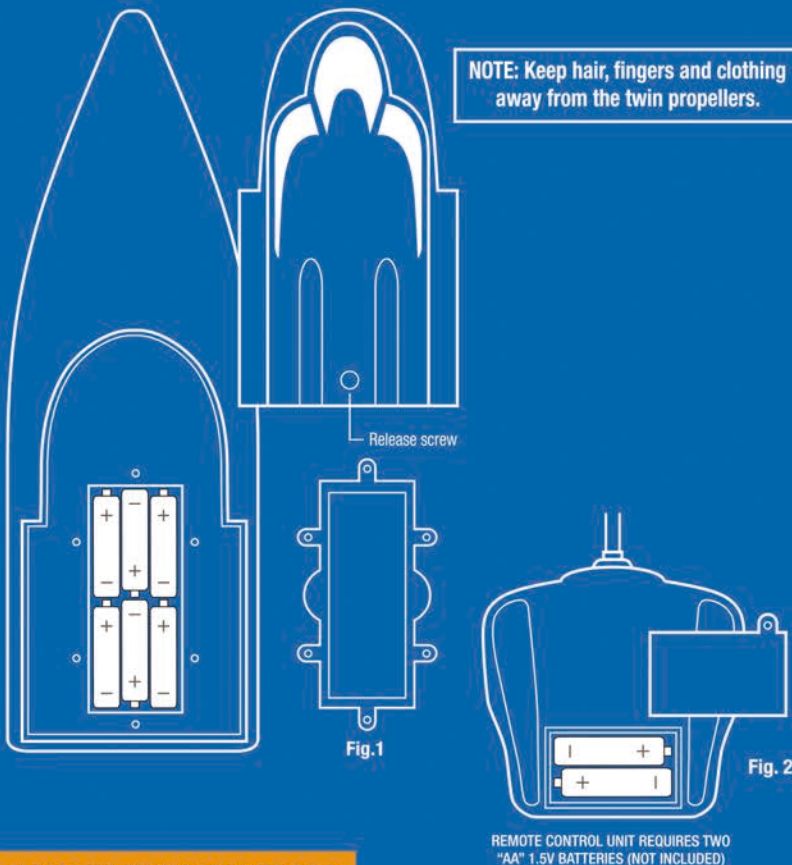

RC OPERATING CONTROLS

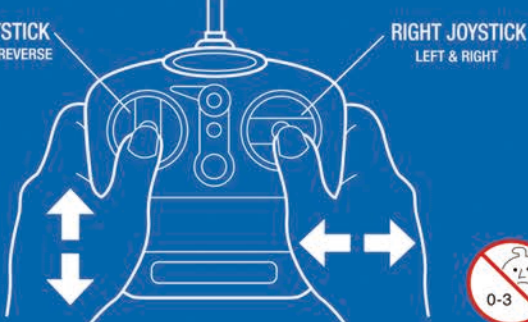 

BATTERY WARNING:

- Do not risk old and new batteries.
- Do not mix alkaline, standard alkaline, acid, or rechargeable (nickel cadmium) batteries.
- Insert batteries using the correct polarity. Do not insert batteries in the wrong direction.
- Remove batteries when not in use. Replace or recharge rechargeable batteries according to label, date, and local laws. Do not dispose of batteries in fire. They may heat or explode.
- Only use manufacturer specified batteries. Charge and/or dispose of batteries as specified by the manufacturer.
- Always use, replace, and recharge if applicable batteries under adult supervision.

SAFETY WARNINGS - PLEASE READ BEFORE USING PRODUCT

- Not recommended for children under 6 years of age. As with all electrical products, precautions should be observed during handling and use to reduce the risk of electrical shock.
- It is recommended that this toy and all accessories be periodically examined for potential hazards and that any potentially hazardous parts be repaired or replaced.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

©2009 MentoSource, LLC. Blue Hat Toy Company and all associated logos are trademarks of MentoSource, LLC. All rights reserved. Distributed by MentoSource, LLC, Irvine, CA 92618.

For technical support, please visit www.mentosource.com or call 1-800-576-2244. The artwork and design of this package are property of MentoSource and may not be reproduced, distributed, displayed, published or used for any purposes without prior written permission. It is not permitted to alter, remove or reproduce any trademarks or copyright notice from this package.



BOAT RACERS

BATTERY OPERATED RC SPEEDBOAT



BLUE HAT
TOY COMPANY



BOX CONTAINS
THE FOLLOWING
FREQUENCY:
☐ 27 MHz
☐ 49 MHz

For the recommended
battery installation, please refer to the
instructions included in the battery pack.
The battery pack is not included in the
package.



BLUE HAT
TOY COMPANY



BOAT RACERS

BATTERY OPERATED RC SPEEDBOAT

BOAT RACERS

BATTERY OPERATED RC SPEEDBOAT



- Battery Operated High-Performance Design
- Full Function Wireless Radio Controller
- Control Boat From Up To 80 Feet Away
- Available In 2 Frequencies For Competitive Racing

BLUE HAT
TOY COMPANY

BOAT RACERS

BATTERY OPERATED RC SPEEDBOAT



- EXCITING RACING ACTION!
- Battery Operated High-Performance Design
- Full Function Wireless Radio Controller
- Control Boat From Up To 80 Feet Away
- Available In 2 Frequencies For Competitive Racing

Blue Hat Toy Company is not responsible for any damage to property or injury to persons caused by the use of this product. Blue Hat Toy Company is not responsible for any damage to property or injury to persons caused by the use of this product.