

42 x 20.5 x 15.5cm



BOAT STICKERS



- Battery Operated High-Performance Design
- Full Function Wireless Radio Controller
- Control Boat From Up To 80 Feet Away
- Available In 2 Frequencies For Competitive Racing



BOAT RACERS

BATTERY OPERATED RC SPEEDBOAT



BOAT RACERS

BATTERY OPERATED RC SPEEDBOAT



AGES 8+

BOX CONTAINS THE FOLLOWING FREQUENCY:
☐ 27 MHz
☐ 49 MHz



BLUE HAT TOY COMPANY



BOAT RACERS

BATTERY OPERATED RC SPEEDBOAT

Boat Racers RC is a high-speed RC speedboat that comes with a 27 MHz radio system and a 49 MHz radio system. The difference in radio system is determined by the radio system you choose to use.

BOAT RACERS
BATTERY OPERATED RC SPEEDBOAT



BATTERY INSTALLATION

KEEP THIS PACKAGE FOR REFERENCE AS IT CONTAINS IMPORTANT INFORMATION.


Operation requires 6 "AA" 1.5V batteries (not included) for the Boat and 2 "AA" 1.5V batteries (not included) for the radio controller.

- Carefully remove items from package.
- Locate the battery compartment by unscrewing the top portion of the boat from the base. Remove the top portion.
- Unscrew the battery compartment door to install batteries.
- Insert 6 "AA" 1.5V batteries according to the polarity diagram located on the battery top (Fig. 1).
- Replace the battery compartment door. Replace the top section of the boat.
- Securely fasten by screwing down the top cover.
- Slide open the battery compartment door of the controller (Fig. 2).
- Insert 2 "AA" 1.5V batteries according to the polarity diagram.
- Replace the battery compartment door.
- Replacement propellers are provided. To replace please carefully remove the damaged propeller from the motor shaft. Replace with new propeller by pressing firmly into place.

NOTE: Boat must be placed in water in order to function. Motor will not operate when removed from water.

SAFETY PRECAUTIONS

- Do not operate during thunderstorms or rain.
- Operate only in swimming pool or fresh water.
- Avoid salty ocean water, as this will corrode boat parts.
- Never submerge remote control in water.
- Never operate Boat without proper adult supervision.
- Disconnect battery when not in use to avoid accidental operation.
- Do not use people or animals as obstacles inside pool.
- Do not use Boat in pool with objects or other hard surfaces, as this will cause damage to the boat.
- Keep fingers, hair and loose clothing away from the spinning propellers while the boat is operational.
- Do not leave Boat or remote control near sources of heat or under direct sunlight for extended periods.
- Do not leave Boat or remote control outside overnight.
- Always remove Boat from water when not in use.

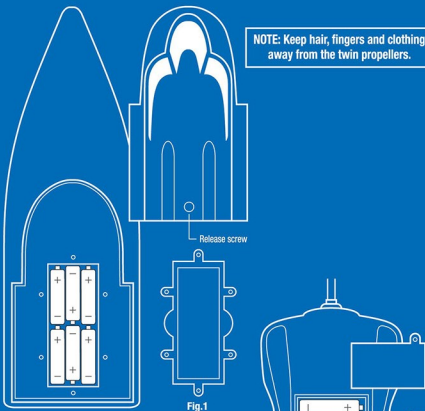

RC OPERATING CONTROLS



SAFETY WARNINGS - PLEASE READ BEFORE USING PRODUCT
*Not recommended for children under 8 years of age. As with all electrical products, precautions should be observed during handling and use to reduce the risk of electrical shock.
*It is recommended that this toy and all accessories be periodically examined for potential hazards and that any potentially hazardous parts be repaired or replaced.

BATTERY WARNING:
• Do not use old and new batteries.
• Do not use alkaline, rechargeable battery, or a rechargeable battery without batteries.
• Insert batteries using the correct polarity. Do not short circuit the supply terminal.
• Remove batteries when not in use. Remove the top cover of the battery compartment.
• Only use the batteries specified in the instructions. Do not use other types of batteries.
• Always use the correct polarity of the batteries and the correct polarity of the batteries.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

©2015 Meritronics, LLC. Boat Hat Toy Company and all associated logos are trademarks of Meritronics, LLC. All rights reserved.
Manufactured by Meritronics, LLC, 1000 N. 10th St., Suite 100, Lincoln, NE 68502.

For technical support, please visit www.meritronics.com or call 1-800-274-2744.
The artwork and design of this package are protected by US copyright law and may not be reproduced, distributed, published or used for any purpose without our written permission. It is not permitted to alter, remove or reproduce any trademark or copyright notice from this package.



WIRELESS RC ACTION!

BATTERY OPERATED PLAY VEHICLE
AGES 8 AND UP
WARNING!
CHOKING HAZARD - Small parts. Not suitable for children under 3 years.



BOAT RACERS

BATTERY OPERATED RC SPEEDBOAT



EXCITING RACING ACTION!

- Battery Operated High-Performance Design
- Full Function Wireless Radio Controller
- Control Boat From Up To 80 Feet Away
- Available In 2 Frequencies For Competitive Racing

