



Monoprice™
**BT-700ANC Over-Ear Bluetooth® Headphones
with aptX™ and Active Noise Cancelling**

P/N **49663**
User Manual

SCAN TO
LEARN MORE



THANK YOU FOR PURCHASING THIS PRODUCT

For optimum performance and safety, please read these instructions carefully before connecting, using, or adjusting this product.

SAFETY WARNINGS AND GUIDELINES

Please read this entire manual before using this device, paying extra attention to these safety warnings and guidelines. Please keep this manual in a safe place for future reference.

- These headphones are intended for indoor use only.
- Do not expose these headphones to water or moisture of any kind.
- Do not use these headphones while operating a motor vehicle or heavy equipment, walking in traffic, or engaging in any other activity in which situational awareness is key to safety.
- Charge the battery before first use and at least once every three months to keep it fresh and capable of holding a full charge.
- Do not allow the battery to fully discharge, as doing so can damage it and reduce its maximum capacity.
- Clean using a soft, dry cloth only. Do not use chemical cleaners, solvents, or detergents. For stubborn deposits, moisten the cloth with warm water.
- These headphones have no user-serviceable parts. Do not attempt to open, service, or modify the headphones.

TABLE OF CONTENTS

 
SAFETY WARNINGS AND GUIDELINES.....	2
PACKAGE CONTENTS	3
PRODUCT OVERVIEW.....	4
LED INDICATORS	4
Left LED.....	4
Right LED	4
CHARGING.....	5
POWER.....	6
BLUETOOTH PAIRING	6
DISCONNECTING	7
ANC MODES	7
MULTIFUNCTION TOUCHPAD.....	8
Playback Control	8
Incremental Volume Control.....	9
Ambient Sound.....	9
Answering an Incoming Call	10
Rejecting an Incoming Call.....	11
Terminating a Call.....	11
Voice Assistant	12
USING THE AUDIO CABLE	12
CUSTOMER SERVICE.....	13
TECHNICAL SUPPORT	13
REGULATORY COMPLIANCE.....	13
Notice for FCC	13
Radio Notice for FCC	14
Notice for ISED Canada.....	14
Radio Notice for ISED Canada.....	14
DISPOSAL AND RECYCLING INFORMATION	15

PACKAGE CONTENTS

Please take an inventory of the package contents to ensure you have all the items listed below. If anything is missing or damaged, please contact Monoprice Customer Service for a replacement.

- 1x BT-700ANC Over-Ear Bluetooth Headphones
- 1x Carrying Case
- 1x 3.5 mm Audio Cable
- 1x USB Type-A to Type-C® Charging Cable
- 1x User Manual

PRODUCT OVERVIEW

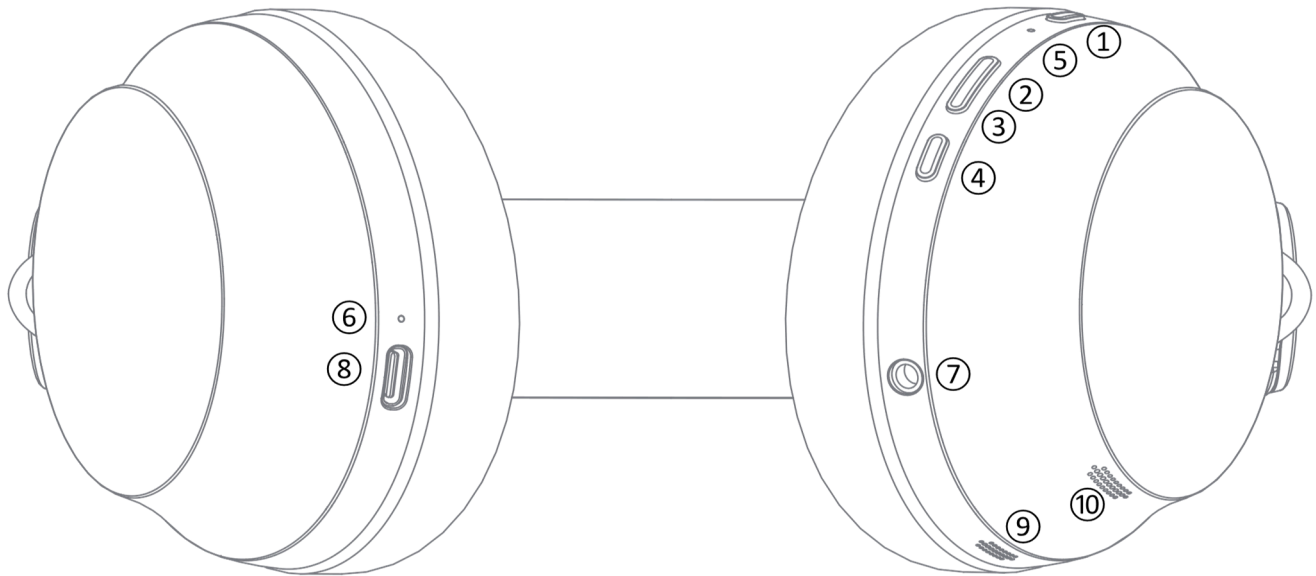

- | | |
|---|--|
| 1. Multifunction Button (MFB) | 7. 3.5 mm Audio Jack |
| 2. Volume + | 8. USB-C® Charge Port |
| 3. Volume - | 9. Talk Microphone |
| 4. Active Noise Cancelling (ANC) Button | 10. Clear Voice Capture (cVc™) |
| 5. MFB LED Indicator | Environmental Noise Cancellation (ENC) |
| 6. Charge LED Indicator | Microphone |

LED INDICATORS

The headphones feature two LED indicators. The LED on the left earcup shows the charging status, while the one on the right earcup shows the Bluetooth, ANC, and low battery status.

Left LED

- **Solid Red:** Battery is charging.
- **Solid Blue:** Battery is fully charged.

Right LED

 
- **Flashing Red and Blue:** The headphones are in Bluetooth pairing mode.
- **Flashing Blue (Every 5 Seconds):** Bluetooth is connected.
- **Flashing Blue (Every 2 Seconds):** Bluetooth is not connected.

- **Solid Green:** Noise Cancelling is on.
- **Breath LED Light:** Ambient Sound is on.
- **Off:** Noise Cancelling and Ambient Sound are both off.
- **Flashing Red (Every 5 Seconds):** The battery is low and should be charged.

CHARGING

When the battery is low, the **Right LED** will **flash red once every 5 seconds** and a voice prompt saying **Battery Low** can be heard. Note that the battery should be fully charged before first use and at least once every three months to keep it fresh and capable of holding a full charge.

Using the included USB Type-C, plug one end into the USB-C port on the left earcup, then plug the other end into a USB power source, such as a wall charger (not included). The **Left LED** will illuminate **solid red** while charging is in progress and will illuminate **solid blue** when charging is complete.

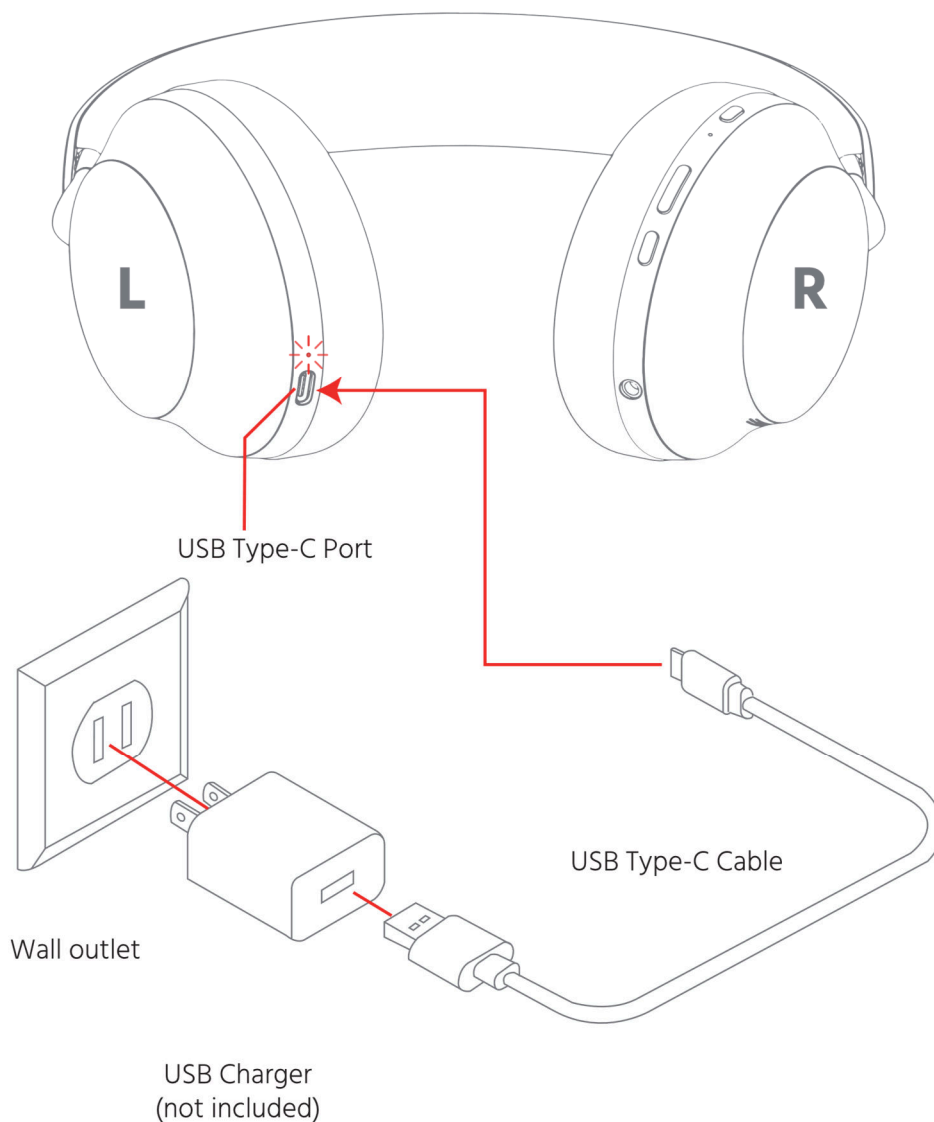


POWER

Press and hold the **Power Button** until the **Right LED** either **flashes blue once every 5 seconds** and a voice prompt saying **Connected** can be heard, or **flashes red and blue** and a voice prompt saying **Bluetooth Pairing On** can be heard, depending on the Bluetooth connection status.

To turn power off, press and hold the **Power Button** until the **Right LED** turns off and a voice saying **Power Off** can be heard.

 Note: If Bluetooth is not connected, the headphones will automatically power off after 5 minutes.

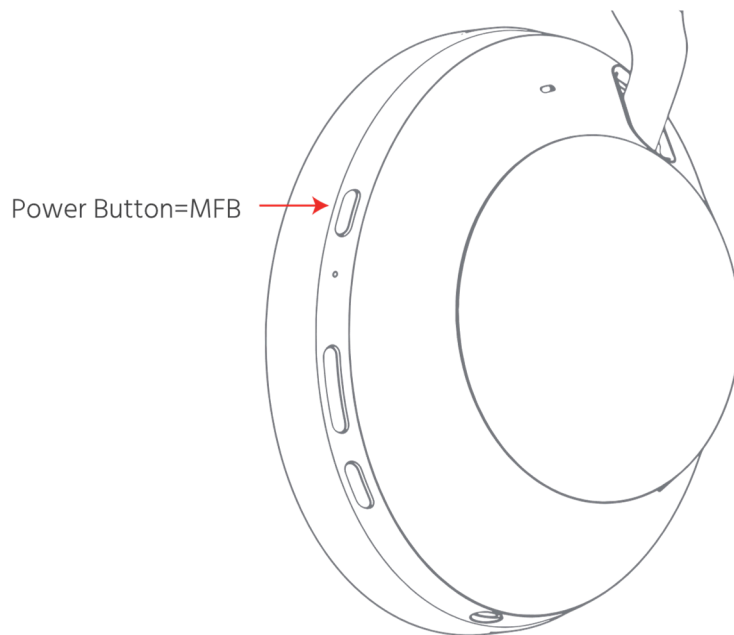


BLUETOOTH PAIRING

Perform the following steps to pair the headphones with your mobile device.

1. Power the headphones on, then press and hold the **Bluetooth Button** until the **Right LED flashes red and blue**. A voice prompt saying **Pairing** can be heard.
Note: Momentarily press the **Bluetooth Button** to exit Bluetooth pairing mode.
2. Open the Bluetooth settings on your mobile device, then scan for nearby Bluetooth devices. Locate and select the **BT-700ANC** entry.
3. Once paired, the **Right LED** will **flash blue once every 5 seconds** and a voice prompt saying **Connected** can be heard.

 Note: The headphones support the HSP, HFP, A2DP, and AVRCP Bluetooth profiles.

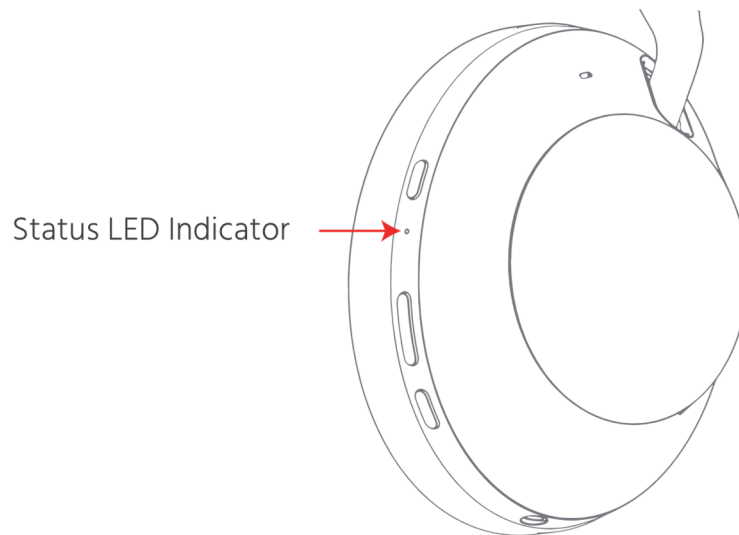

DISCONNECTING

If you want to connect the headphones to a different mobile device, you will need to disconnect the currently paired device.

 
To disconnect the headphones from a paired device, press and hold the **Bluetooth Button** until the **Right LED flashes red and blue**. A voice prompt saying **Bluetooth Pairing On** can be heard.

The headphones are now ready to be paired to a different device.

ANC MODES

The BT-700ANC headphones offer three different listening experiences. Momentarily press the **ANC Button** to cycle through the three modes.

1. **Noise Cancelling (NC) Mode:** This mode isolates your listening experience to sounds coming through the headphones and helps block unwanted outside noise. **NC Mode** is automatically selected when the headphones are powered on. When **NC Mode** is selected, the **Right LED** illuminates **solid green** and a voice prompt saying **Noise Cancelling** can be heard.
2. **Ambient Sound Mode:** This mode allows you to listen to the sounds around you using the built-in microphones. When **Ambient Sound Mode** is selected, the **Right LED** illuminates **solid white** and a voice prompt saying **Ambient Sound** can be heard.
3. **NC and Ambient Sound Modes Off:** The third selection disables both **NC** and **Ambient Sound Modes**, allowing the headphones to operate like ordinary headphones. When this mode is selected, the **Right LED turns off** and a voice prompt saying **Noise Cancelling Off** can be heard.

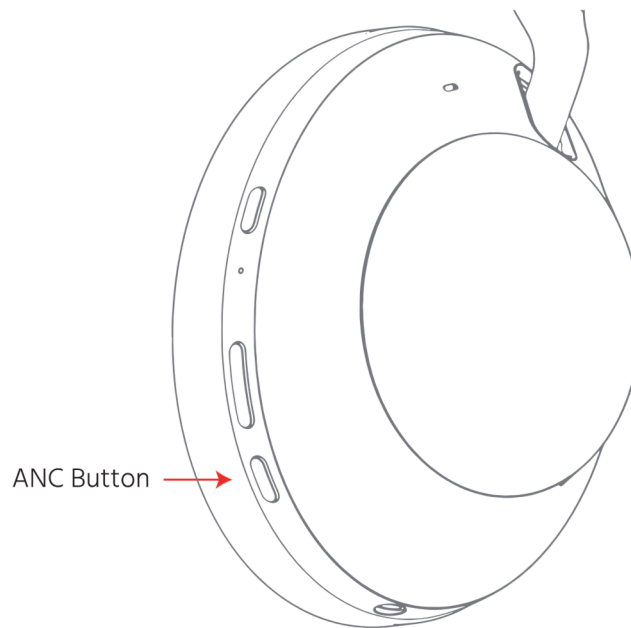


MULTIFUNCTION TOUCHPAD

The headphones feature a unique multifunction touchpad on the right earcup. The following sections describe the gestures used to perform the various functions.


Playback Control

 - Quickly **tap the center** of the touchpad **two times** to **pause** or **resume** playback.
- **Swipe forward** on the touchpad, or **press and hold the Volume + button for 1s**, to skip forward to the **Next Track**.
- **Swipe backward** on the touchpad, or **press and hold the Volume - button for 1s**, to skip back to the **Previous Track**.

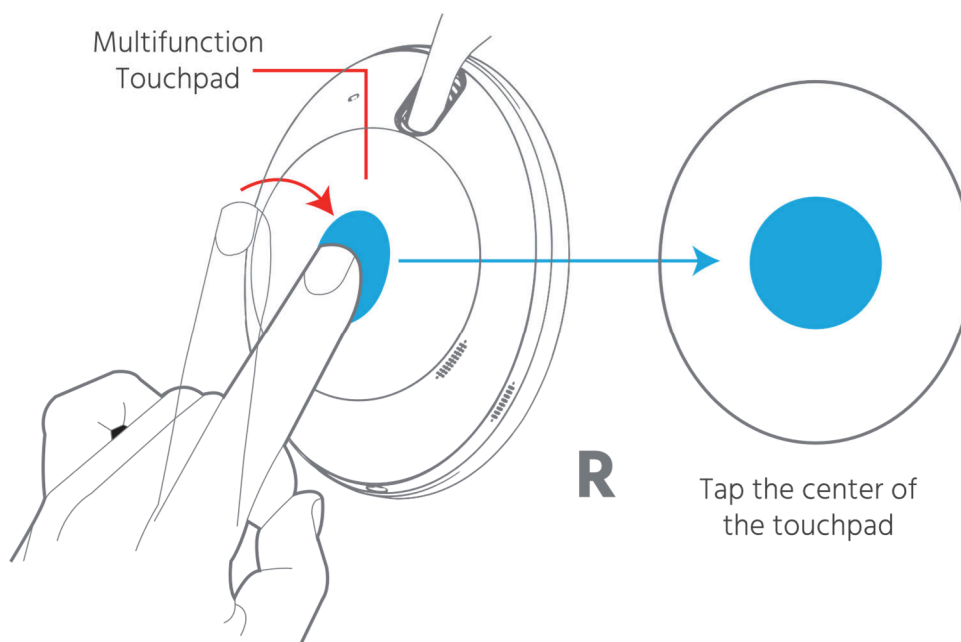


Incremental Volume Control

 - Place your finger at the **top** of the right earcup, then **slowly swipe down** to **incrementally decrease volume** one step. Or **press the Volume - button** to **decrease volume** one step.
- Place your finger at the **bottom** of the right earcup, then **slowly swipe up** to **incrementally increase volume** one step. Or **press the Volume + button** to **increase volume** one step.

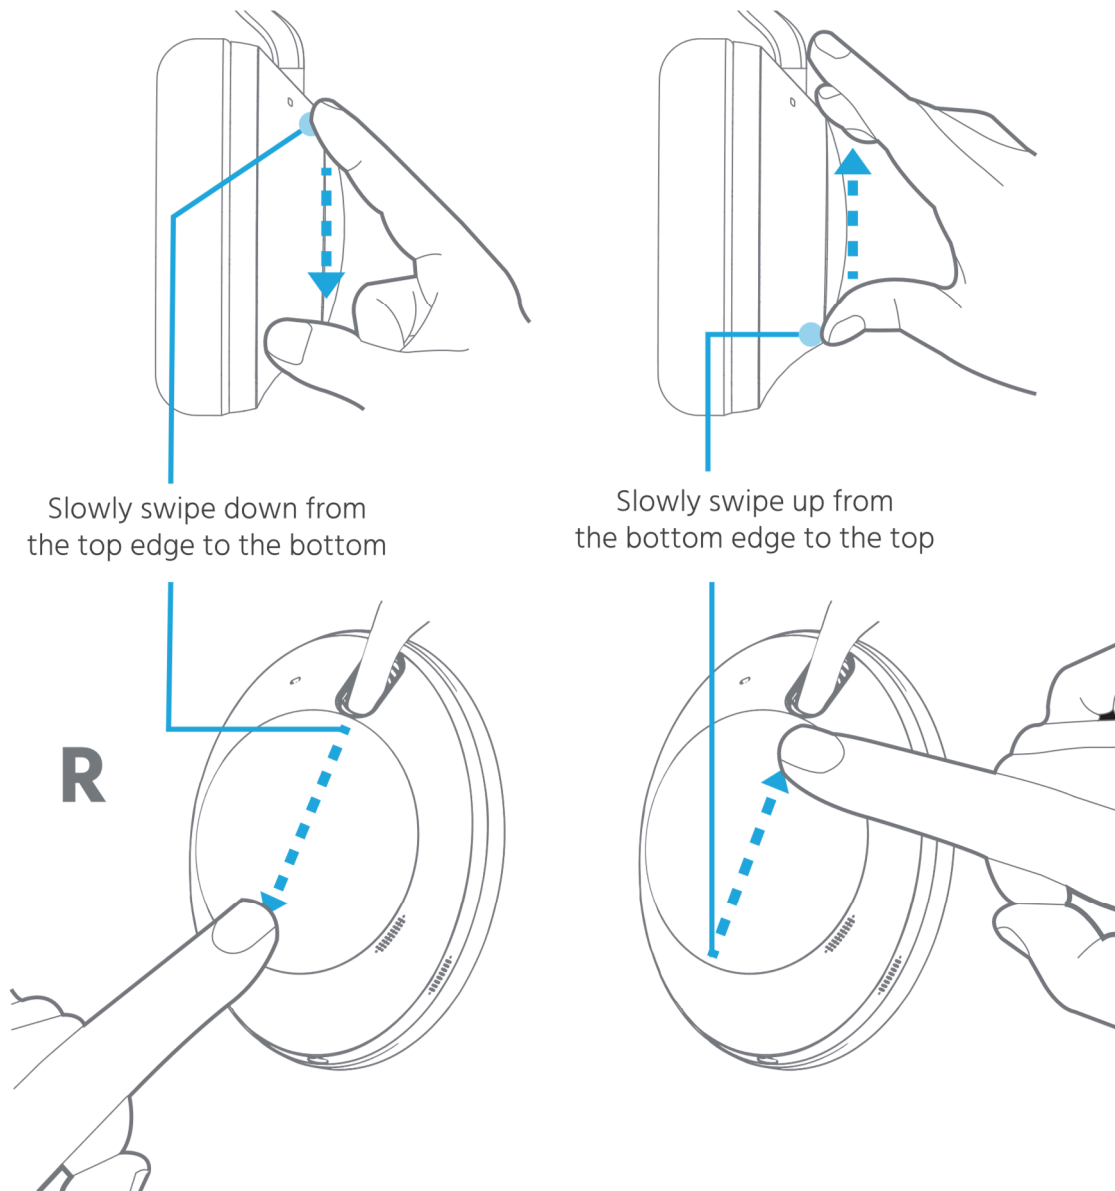


Ambient Sound

 - Place the **palm** of your hand **over the right earcup** to **mute audio and enter ambient sound**.
- **Remove your hand** from the right earcup to **exit audio muting and ambient sound and resume normal playback**.

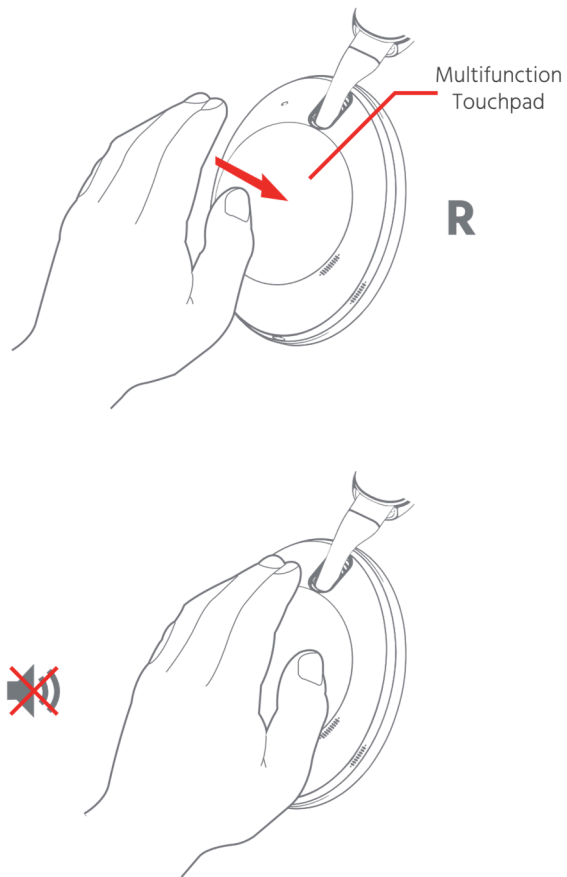


Answering an Incoming Call

 - When an incoming phone call is received, **press once on the MFB** to answer the call.

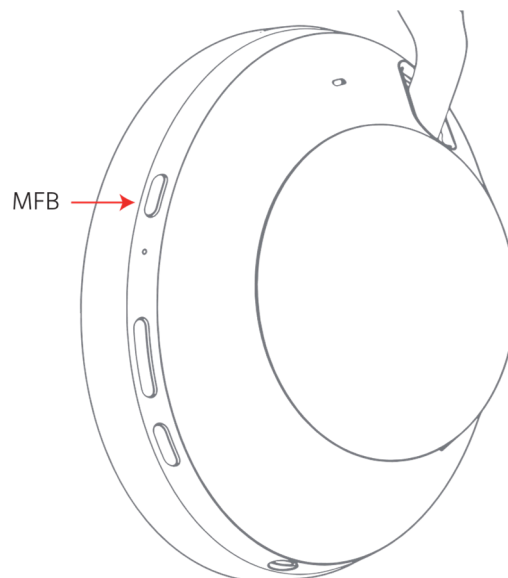


Rejecting an Incoming Call

 - If you want to reject an incoming phone call, **press and hold the MFB for 1s.**

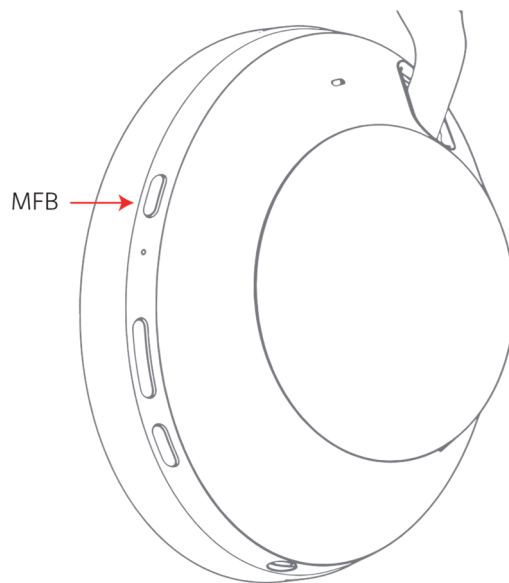


Terminating a Call

 - While a call is in progress, **press once on the MFB** to terminate the call.

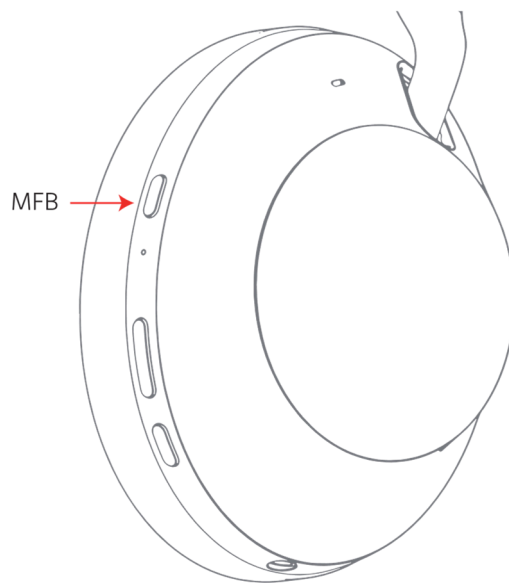

Voice Assistant

 - If your connected device has a voice assistant, you can **activate it by pressing and holding the MFB** during normal playback. **Press and hold the MFB again to disable** the voice assistant.

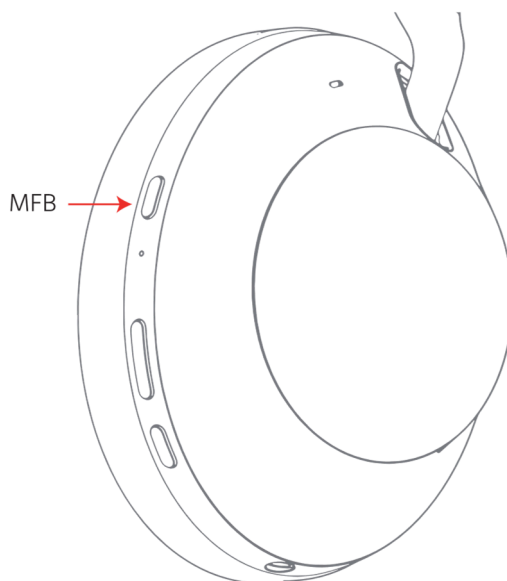

USING THE AUDIO CABLE

If you want to use a **wired connection**, plug one end of the included **3.5 mm audio cable** into the **3.5 mm jack** on the right earcup, then plug the other end into the **headphone output** of your **mobile device**. If **powered on**, the **3.5 mm analog audio** will take **priority over Bluetooth**. When you **unplug** the 3.5 mm cable, the headphones will **enter pairing mode**.

CUSTOMER SERVICE

The Monoprice Customer Service department is dedicated to ensuring that your ordering, purchasing, and delivery experience is second to none. If you have any problems with your order, please give us an opportunity to make it right. You can contact a Monoprice Customer Service representative through the Live Chat link on our website **www.monoprice.com** or via email at **support@monoprice.com**. Check the website for support times and links.

TECHNICAL SUPPORT

Monoprice is pleased to provide free, live, online technical support to assist you with any questions you may have about installation, setup, troubleshooting, or product recommendations. If you ever need assistance with your new product, please come online to talk to one of our friendly and knowledgeable Tech Support Associates. Technical support is available through the online chat button on our website **www.monoprice.com** or through email by sending a message to **tech@monoprice.com**. Check the website for support times and links.

To download the latest drivers, firmware, manuals, etc., go to **www.monoprice.com** and type **49663** into the search bar. If available, support files are linked at the bottom of the product page.

REGULATORY COMPLIANCE

Notice for FCC



This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Radio Notice for FCC

FCC ID: 2ADDH-49663

Caution

This FCC Part 15 radio device operates on a non-interference basis with other devices operating at this frequency. Any changes or modification to said product not expressly approved by Monoprice, including the use of non-approved antennas, could void the user's authority to operate this device.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC RF Exposure Statement

The equipment has been evaluated to meet general RF exposure requirement. The device can be used in portable condition without restriction.

Notice for ISED Canada

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Radio Notice for ISED Canada

IC: 24103-49663

Caution

This device complies with ISED Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'ISED Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes: (1) l'appareil ne doit pas produire de brouillage, et (2) l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

ISED RF Exposure Statement

This product complies with Innovation, Science and Economic Development Canada's RF exposure limit set forth for an uncontrolled environment and is safe for intended operation as described in this manual.

Déclaration d'exposition aux RF d'ISED

Ce produit est conforme aux limites d'exposition aux RF fixées par Innovation, Sciences et Développement économique Canada pour un environnement non contrôlé, et son utilisation dans les conditions prévues dans le présent manuel ne présente aucun danger.

DISPOSAL AND RECYCLING INFORMATION



The symbol indicates that this product should be disposed of separately from regular household waste streams. It is your responsibility to dispose of this and other electrical and electronics products via designated collection facilities appointed by the government or local authorities. Correct disposal and recycling will help prevent potential negative consequences to the environment and human health. For more detailed information about the disposal of your unwanted product, please contact your local authorities, waste disposal service, or the shop where you purchased the product.

Monoprice™ and all Monoprice logos are trademarks of Monoprice Inc.

The Bluetooth® word mark and logos are registered trademarks of Bluetooth SIG, Inc.

Qualcomm® is a trademark of Qualcomm Incorporated, registered in the United States and other countries. aptX™, the aptX™ logo, and cVc™ Echo Cancelling and Noise Suppression are trademarks of Qualcomm Technologies International, Ltd. aptX™ and cVc™ Echo Cancelling and Noise Suppression are products of Qualcomm Technologies International, Ltd.

USB Type-C® and USB-C® are registered trademarks of USB Implementers Forum.



TECHNOLOGY AT PRICES THAT MAKE SENSE

www.monoprice.com

Need Help? We're here for you!

Contact us: www.monoprice.com/contactus

Product pictures are for reference only.

Specifications described in this manual are subject to change without prior notification.

Monoprice™ and all Monoprice logos are trademarks of Monoprice Inc.

Copyright © 2026 Monoprice, Inc. All rights reserved.

Monoprice, Inc.

1 Pointe Drive, Suite 400

Brea, CA 92821 – USA

www.monoprice.com