 
 
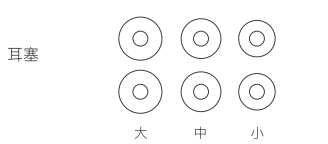 
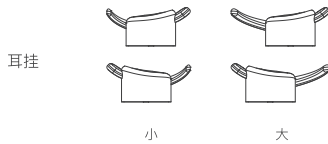 




您好！

 
 
 
W302
使用说明

产品清单

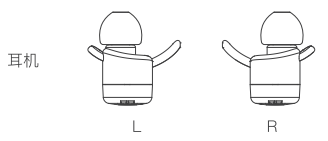

按键与接口

按键图示

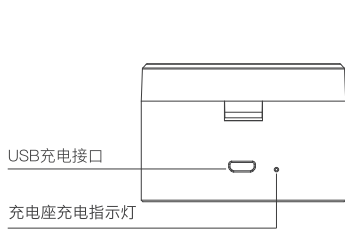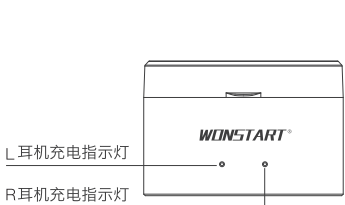

操作说明

按键操作与提示说明

开机：
长按左右耳机功能键2秒后开机。

蓝牙配对：
A.左右耳机配对：左右耳机同时开机后，自动配对成立体声。
B.手机连接：长按左耳机功能键三秒，进入配对状态，手机搜索到“W302”并配对，连接成功即可正常使用。

关机：
长按任意一个耳机功能键6秒关机，关机成功后，另一个将自动关机。

指示灯说明：
A.蓝灯常亮，无连接。
B.蓝灯每隔5秒闪两下，已正常连接。
C.红灯闪，电量低。
D.红蓝交替闪烁，配对中。

音乐控制：
双击功能键，切换下一曲，单击功能键，暂停/播放。

来电接听：
来电时单击功能键接听，再单击功能键挂断。

充电盒操作说明：
充电盒开关一键开关机，单击开启，再单击关闭。

心跳电量指示灯：
闪四下表示有四格电，76~100%
闪三下表示有三格电，51~75%
闪两下表示有两格电，26~50%
闪一下表示有一格电，0~25%

注：L主耳机带有通话功能，R副耳机不带通话功能。

充电说明

充电座充电
1.请使用输出电压为DC5V 1A的充电器对充电座充电；可使用电脑USB接口或其他USB接口的充电器给耳机充电（必须选择正规厂家认证过的充电器）；
2.充电座充电期间，指示灯亮蓝色；
3.充电座充满电时，指示灯长亮，请将耳机充电座与充电座断开连接；

耳机充电
1.将W302左右耳机充电接触点对准充电座弹针垂直放入充电盒内并盖上翻盖，观察充电盒耳机充电指示灯是否亮绿灯，亮绿灯表示左右耳机正在充电。
2.耳机充满电约需要两小时，充满电后指示灯自动熄灭。

注：充电器请使用DC5V.1A充电器或PC电脑的USB；重复对耳机进行充电和放电将会随时间的推移而导致电池能效下降，这对所有可再充电电池来说是正常的。若给耳机充电时，充电指示灯不亮，说明耳机充电触点没有充分接触到座充弹针，这是由于耳塞规格尺寸不一导致，这时请将耳塞向上拔高0.5MM左右的距离，使触点充分接触弹针。

注意事项

 
1.请勿以任何理由拆除或改装耳机，否则可能导致耳机故障及烧毁，这些都不在保修范围。
2.请勿将设备接触液体弄湿，否则会造成设备严重损坏，由设备进水造成的损坏，制造商将不予以保修。
3.请勿将设备置于温度过高或过低（0度以下或45度以上）的环境下。
4.请避免靠近儿童或动物的眼睛使用设备灯。
5.请勿在雷暴天气下使用设备，雷暴可能导致设备工作不正常，并增加触电的危险。

警告！

此产品含内置锂电池，请勿将此产品暴露在强烈的日照下，火烤或扔入火中，以免爆炸。按照当地法规处理电池，不要当做家庭垃圾处理。
除非使用手册或快速入门指南中另有说明，否则，用户不得自行去除或更换产品的电池。进行此类操作存在风险，可能会损坏产品。

充电时如图所示将耳机倾斜，放入充电槽内。

充电放入示意图

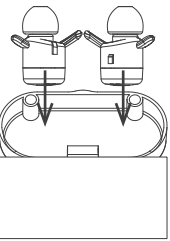

常见问题

问题与解答

异常处理：
1. 任何误操作导致耳机配对混乱，只需重启两个耳机即可自动恢复正常。
2. 如果更换了单个耳机，或者左右耳机之间配对丢失，需要重新配对。
请先关闭手机蓝牙，然后将左、右耳机都开机，然后各自双击进入充泵配对，数秒后两个耳机自动配对成立体声，并永久保存配对。

Q:为什么我们的产品不能开机？
A:首次使用时，若无法正常开机，可能是产品电量不足，请将耳机充电后再使用。

Q:为什么播放音乐耳机没有声音？
A:检查播放装置与蓝牙耳机是否建立有效连接，若音频设备未能正常连接，请重新连接。同时调整手机或蓝牙耳机音量到合适的音量等级。

Q:为什么手机无法搜索到蓝牙耳机？
A:请确认手机蓝牙是否处于“设备可见模式”，若长时间未进行配对，蓝牙配对功能自动关闭，请重新开启蓝牙至“设备可见模式”。若手机程序出错，请重启手机；若蓝牙耳机程序出错，请重启蓝牙耳机。

 
 
 
为了获得更好的音乐体验，建议使用iOS 8.0 & Android 4.3以上操作系统。






Hello !

W302
Instructions

Products List

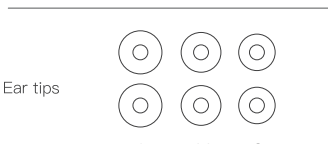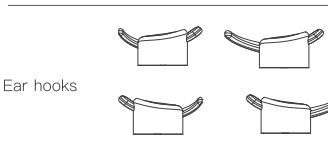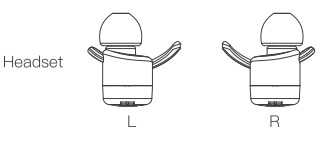

Features

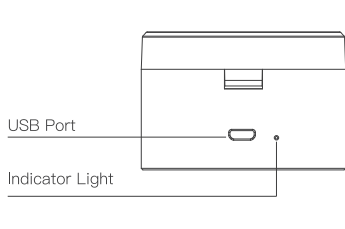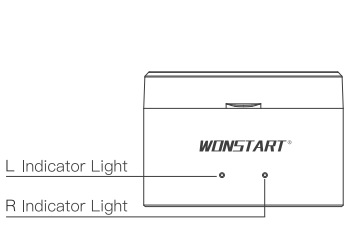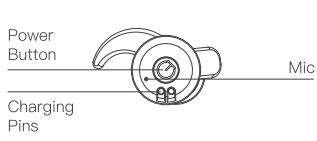   

Operating instructions

Power on:
Press for about two seconds to power on.

Bluetooth pairing:
A.About the headset pairing:After starting up the left and right earphone they will matching in stereo effect automatically.
B.How to connect to your phone: Press the L earbud for about 3 seconds, search W302 from your phone's searching list and connect successfully.

Power off:
Press any of the power buttons for about 6 seconds to turn off the earbuds and another one will shutdown antomatically.

Indicator light:
A.Blue light slow flash, not connected.
B.Blue light flash twice every 5 seconds, connected.
C.Red light flash, low power.
D.Red light and blue light flash alternately, pairing.

Music control:
Double click the power button to next song, one click to Pause/ play.

Answering phone calls:
Click the power button to aswer a call, another click to hang up.

Instructions of Charging box:
Click the power switch to power on and another click to power off the charging box.

Indication of this charging box:
The battery remaining capacity is 76~100% when the light flash 4 times.
The battery remaining capacity is 51~75% when the light flash 3 times.
The battery remaining capacity is 26~50% when the light flash twice.
The battery remaining capacity is 0~25% when the light flash once.

How to charge this power box

1.Please use micro USB charger which passed relevant safety certification and its output voltage is DC5V.
2.The indicator light will turn red when charging.
3.The red indicator will turn blue when fully charged and please unplug the charger.
4.Earphone can be charged by PC and other USB device, which should be made from authorized manufacturer.

How To Charge The Earbuds

1.Locate the earbuds to the charging case and make sure they were connected properly/close the flip cover.when charging the indicators turn green
2.It will be fully charged in about 2 hours and the indictors lights will turn off.

Re: Mic located on L earbud only

 
Notes

1. Please do not attempt to disassemble or alter the headset which will lead to function problem and we are not responsible for this kind of problems.
2. keep the device safe and stay away from water and fire.
3. Please use the device at a good environment, better between -10 degree and 45 degree.
4. Do not use the device during an electrical storm, thunderstorm may cause the device not work properly, and increase the risk of electric shock.

Warning!

This product contains a built-in lithium battery, do not expose to strong sunshine, fire, or even throw into the fire to avoid explosion. Please dispose the battery base on local regulations.
Unless intructured by the user manual or the Quick Start Guide, otherwise user can't remove or replace the battery. This type of operation may damage the product.

Notice:
Put the headset as shown in the picture into the charging case when charging.

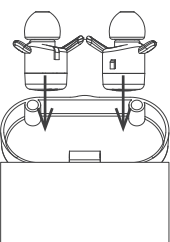

FAQ

Q: Why we can not turn on the product?
A: May because low battery cause the problem please recharge the device and power on again.

Q: Why no sound when connected to the phone/ player?
A: Check if the devices are paired properly, if not please reconnect. And also please adjust the volume of your phone or Bluetooth headsets to fit volume level.

Q: Why my phone can not find this headset?
A: Make sure your phone's bluetooth is in a Device Visible Mode, if not please turn it on, if the mobile system cause the problem, please restart the phone; if bluetooth headset program error, please restart bluetooth headset.

Warm Tips:

1.Any mistake cause the headset confuse paired, please restart the two headset, they will return to normal automatically.
2.If you change the single headset, or lost pairing, please rematch.
3.Please turn off the mobile phone bluetooth, turn on the earphones then double clicks to pair, it will be auto paired after seconds, it will and save the pairing record.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.