Tablet features guides



Gestures for the tablet and touchpad

Gestures allow you to launch programs and access the settings of your tablet PC.Refer to the following illustrations when using hand gestures on your tablet and touchpad.



Can simulate click the left mouse button allows you to access other information.



[Docking] Long hold touch screen with your fingers to open more options menu.



[Horizontal scrolling] drag from the left or the right edge to shuffle your running apps.



[Vertical scrolling] drag from the top or the bottom edge to shuffle your running apps.



Will two fingers together to narrow the active window view can reduce screen content.



Separate two fingers to enlarge the view of active window, can enlarge the screen content.



[rotating] Can use two fingers rotate content. Keep a finger or thumb motionless, with another finger to the right or the left side of the arc to rotate the content



Hold the blanks after drag, can select the screen content.



Move the icon 1 Hold the icon after drag, can drag icon to move to a new sition or into other programs for target operation.



Left corner click the mouse on the screen will display the system begins to the main



The mouse from the left side of the screen light sweep or place the mouse pointer on the upper left screen display recently used applications



The mouse from the bottom right side of the screen sweep gently or put the mouse pointer at the bottom right hand corner screen Charm and system commands.



The mouse light sweep down from the top side of the screen edge can be closed or stopped recently used applications



The mouse sweep gently upward from the bottom side of the screen edge can display applications.

SIM&TF

rd reader slot that supports micro SD, micro SDHC and micro SDXC card formats

DLP focal length adjusting

DLP lens

Speaker

n provide High-quality of sound place left and right on back

Rear camera

Power button node and wake up from sleep mode; press and hold about 10 seconds to force it shut d

Volume button

DLP SWITCH

Charge indicator

ng red light, after completion of charging, instructs green light

Front camera

DC-IN port

supply to all system and battery

TYPE-C interface

HDMI port

3.5mm headphone output and the microphone and jack

Microphone

ne can be used for video conferencing voice narrations, or simple audio recording

Touch screen panel

This high-definition touch screen panel provides excellent viewing features for photos, videos, and other multimedia files on your Tablet, IT also allows you to operate your Tablet using touch gestures. NOTE: To know more about using touch screen gestures when operating your Tablet, refer to the using the section in this manual.

APP. Windows button

Press this button to go back to start screen, If you are already in the Start screen, press this button to go back to the last APP

External keyboard connector

ailable,It can supply power as a portable source

Using your Tablet

On

Press and release the power button. If nothing appearances when you press the power button, your device may need to be recharged. Connect the power supply and press the power button again.

Sleep

Open the Settings charm, tap Power.

Off

Press and release the power button the device from on goes to sleep, saving power but ready to resume quickly.

Open the Settings charm, tap Power.

Sleep, wake, and lock

Sleep is a power-saving state that allows device to quickly resume when you want to start working again.

Lock

To lock device, do any of the following:

Press the power button or close the cover.

Tap your name in the upper-right corner of the Start screen, and then tap Lock.

Wake and unlock

To wake up devices, do one of the following:

Press the power button.

Tap the Windows logo **t** below the touchscreen.

Power adapter information:

Input Voltage: 100-240Vac Input frequency: 50-60Hz

Rating ouput voltage and current: 5V==2A

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -- Reorient or relocate the receiving antenna.
- -- Increase the separation between the equipment and receiver.
- -- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.