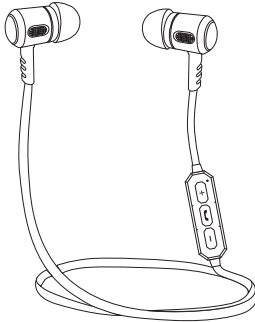
 


USER MANUAL 	Earbuds Overview  Front: LED Vol+/ Next Song On/Off Button Play / Pause Music Answer / End Call Vol-/ Previous Song Back: Microphone Side: Micro USB Charging Port Micro USB Charging Cable:  Micro USB Plug
---	---

BACK:

Answer / Reject a call ◆ When you receive a call, press the On/Off Button once to accept the call, or answer the call normally via your mobile phone. ◆ Long press On/Off Button to reject a call End a call ◆ Press the On/Off Button once to end the call or hang up your mobile phone. Functions ◆ Short press + Button to turn up volume ◆ Short press - Button to turn down volume ◆ Long press + Button to advance to next song ◆ Long press - Button to go back to previous song Charging your Earbuds ◆ LED indicator light turns red when charging your earbuds ◆ LED indicator light turns off when your earbuds are fully charged ◆ Use the Micro USB cable provided for charging ◆ Connect the Micro USB plug to Micro USB charging port on the earbuds, then connect the USB plug to a USB port on a computer or wall adapter to begin charging Technical Specifications Bluetooth version: - - - - - 4.2 Bluetooth operating range: - - - - - 32.8 Feet Frequency response: - - - - - 20Hz - 20KHz Playing time: - - - - - 2-2.5hrs Standby time: - - - - - 30hrs Fully charged time: - - - - - 2hrs Battery Capacity:- - - - - 50mAh Rechargeable Li-Ion Battery - - - - - 3.7V	FAQ ◆ If the Crescent Wireless Earbuds cannot be paired with your device, please try the following: Ensure that your earbuds are in pairing mode or reconnection mode. Ensure that Bluetooth search function of your mobile device is activated. ◆ If the Crescent Wireless Earbuds will not turn on: Make sure the earbuds are fully charged. ◆ Can I change the battery for the earbuds? Crescent Wireless Earbuds uses a built-in non-detachable battery which cannot be removed. ◆ If the Crescent Wireless Earbuds cannot be recharged: If you use a power outlet, ensure that the power supply is connected securely and the outlet works. If you use a computer, ensure that it is connected and the USB port is powered.	FCC STATEMENT 1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference. (2) This device must accept any interference received, including interference that may cause undesired operation. 2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: - Reorient or relocate the receiving antenna. - Increase the separation between the equipment and receiver. - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. - Consult the dealer or an experienced radio/TV technician for help. RF warning statement: The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction. FCC ID: 2ADM5-EP-0333