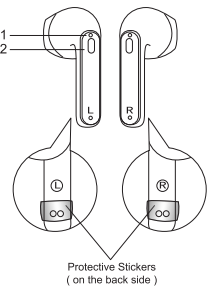 
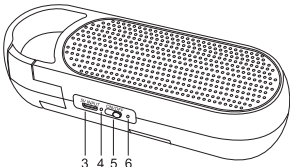 
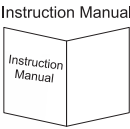 


Size: 222.75(W) x 100(H)mm

FRONT SIDE

 AMPLIFY TRUE WIRELESS EARBUDS EARBUDS+SPEAKER CHARGING CASE INSTRUCTION MANUAL Thank you for purchasing the Amplify True Wireless Earbuds. This manual provides more information about the wireless earbuds, please read the instructions before using.  AUTO PAIRING FOR L&R EARBUD	Product Overview Earbuds  Portable Charging Case / Wireless Speaker  Instruction Manual  Micro USB Charging Cable  Package Contents Includes: 1(One) Pair Earbuds / 0.7in. x 1.5in. x 0.7in. (1.8cm x 3.8cm x 1.8cm) each 1(One) Portable Charging Case / Wireless Speaker 1.9in. x 5.4in. x 1.1in. (4.8cm x 13.8cm x 2.9cm) 1(One) Charging Cable 9.8in. (25cm) 1(One) Instruction Manual	Specifications Earbuds / Wireless Speaker Driver Diameter: 10 mm / 36mm Earbuds / Wireless Speaker Impedance: 32 Ohms / 4 Ohms Frequency Response: 20 Hz – 20K Hz Sensitivity: 98 +/- 3 dB Earbuds Battery Capacity: Li-Ion 3.7V 35 mAh Per Earbud Portable Charging Case / Wireless Speaker Battery Capacity: Li-Ion 3.7V 500mAh Playtime: 1.5 Hours Per Charge Total Playtime: 10 Hours Charging Time: 2 Hours Charging Method: Magnetic Charging Case (Earbuds) Power On/Off (Earbuds) Power On The protective stickers must be removed from the earbuds and put the earbuds back to charging case before use. Take out the earbuds and it will automatic turn on and the LED indicator will flash. The Earbud can be power on manually by hold the On/Off button of the earbud more than 3 seconds. Power Off Put back the earbuds into the charging case, it will automatic turn off. The Earbuds will be power off by hold the control area more than 5 seconds. The Earbuds will be power off automatically if no Bluetooth connection is made within 5 minutes.	Pair the wireless earbuds with your mobile device 1. Keep the distance between the earbuds and mobile device within 32.8 feet. 2. De-activate the Bluetooth function on your mobile device. 3. Take both Earbuds out from Charging case and wait for 3 to 5 seconds for auto pairing. The earbud has indicator blinking alternatively in Red and Blue. One of the earbud will be blinking in Blue slowly when auto pairing is done successfully on L/R earbuds.. 4. Activate the Bluetooth function on your mobile device and select "AMPLIFY TWS" from the list shown. 5. After pairing is successful, both earbuds will start blinking slowly in blue. *Attention: If the auto pairing is not successful, manual pairing between earbuds is essential by following below procedures: 1. Make sure the earbuds are charged. 2. De-activate the Bluetooth function on your mobile device, (if you had been paired the earbuds to some other mobile device(s) nearby, please sure to de-activate those device(s) too). 3. Power on both earbuds simultaneously by pressing the touch control area for 3 seconds and wait for 3 to 5 seconds for auto pairing. (Keep the Bluetooth function off on your mobile device before this operation.) 4. Activate the Bluetooth function on your mobile device and select "AMPLIFY TWS" from the list shown. 5. After pairing successfully, both earbuds will start blinking slowly in blue. Reconnect the wireless earbuds to your mobile device When powered on, the wireless earbuds will automatically connect with the last successfully paired device. Disconnect the wireless earbuds from your mobile device Switch off the Bluetooth on your mobile phone; or Leave the earbuds 60 ft away from your mobile phone or further.
---	---	--	---

BACK SIDE

Answer / Reject a call (Earbuds) When receive a call, click On/Off button once (on either earbud) to accept the call, or answer the call normally via your mobile phone. Click On/Off button hold touch control area for 2 seconds to reject it. End a call (Earbuds) To end the call, just click On/Off button once at any side of earbud with Beep sound to end it. Functions (Earbuds) Pause / Play Music: Short press ON/OFF button, Go back to previous song: Press Left ON/OFF button for 1 second. Advance to next song: Press Right ON/OFF button for 1 second. Volume up: Double click Right ON/OFF button to increase. Volume down: Double click Left ON/OFF button of reduce. Charging your Earbuds 1. Open the charging case cover. 2. Insert the Earbuds into the charging case. 3. The earbuds will start to charge automatically. 4. LED indicator of the earbud will be turned to Red when charging. 5. Once fully charged, all LED will be off. Recharge Portable Charging Case / Wireless Speaker ⚠ For your safety, please always use appropriate 5V input charger/Adapter to charge the product, DO NOT USE Quick Charging USB Adapter to charge the product, as it might damage the product. 1. Use the Micro USB charging cable provided with the packaging. 2. Connect the Micro USB plug to Micro USB charging port on the charging case, then connect the USB plug to a USB port on a computer or wall adapter to begin charging. 3. The Red LED on the charging case will be on during charge. 4. Once fully charged, the Red LED will be off. NOTE: • You must select a qualified charger from a regular manufacturer. • You must charge the charging case and earbuds if it has been not used for more than 6 months. 	Power On/Off (Portable Charging Case / Wireless Speaker) Power On Slide the ON/OFF switch to the "ON" position. Power On Slide the ON/OFF switch to the "OFF" position. Note: Always power off the speaker when not in use. Pair Wireless speaker with your mobile device 1. Keep the distance between your wireless speaker and mobile phone (or other devices) within 32.8 Feet. 2. Power on the wireless speaker. 3. Activate the Bluetooth function on your phone within range and select "AMPLIFY SPEAKER" from the list shown. 4. You will hear a beep sound when pairing is successful. Reconnect Wireless speaker to your mobile device When powered on, the wireless speaker will automatically connect with the last successfully paired device. FAQ (Earbuds) If the wireless earbuds cannot be paired with your device, please try the following: Ensure that your earbuds are in pairing mode or reconnection mode Ensure that Bluetooth search function of your mobile device is activated. If the wireless earbuds will not turn on: Make sure the earbuds are fully charged. Can I change the battery for the earbuds and the charging case? The wireless earbuds and the charging case use a built-in non-detachable battery which cannot be removed.	FAQ (Wireless Speaker) If the Wireless speaker cannot be paired with your device, please try the following: Ensure that your speaker is in pairing mode or reconnection mode. Ensure that Bluetooth search function of your mobile device is activated. If the Wireless speaker cannot be recharged: If you use a power outlet, ensure that the power supply is connected securely and the outlet works. If you use a computer, ensure that it is connected and the USB port is powered. ⚠ Safety instructions for the lithium battery and charging the product -The input voltage to the product is 5V 1A. -In order to charge the product in safe manner and reliable conditions, please only adopt certified appropriate charger/ adapter for charging the product. -Only charge the product at ambient temperatures between 10 deg °C/ 50 deg °F and 40 deg °C/104 deg °F. - Do not heat above 70 deg °C/158 deg °F, eg. Do not expose to sunlight or throw into fire. -Switch off the product after use. -Please note that we won't take any responsibility for any wrong operation (eg. Voltage higher than 5V) as this may result in severe injury or loss of property, and we cannot control the operating process during the time the user using this product. -In extreme cases, abuse or misuse of Lithium battery pack can lead to explosion, heat generation, fire development or smoke development.	FCC STATEMENT 1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference. (2) This device must accept any interference received, including interference that may cause undesired operation. 2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: - Reorient or relocate the receiving antenna. - Increase the separation between the equipment and receiver. - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. - Consult the dealer or an experienced radio/TV technician for help. RF warning statement: The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction. FC Earbuds - FCC ID: 2ADM5-EP-0655 Speaker - FCC ID: 2ADM5-EP-0655-SPK ITEM# EP-0655 Distributed by 1616 Holdings, Inc. 701 Market Street, Suite 200 Philadelphia, PA 19106 Keep All Relevant Information For Future Reference Made in China
---	--	--	--